




Windshield Defogging

Manual A/C



Automatic A/C

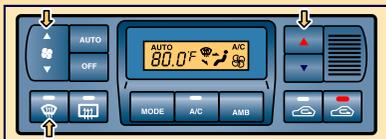


To remove fog or frost on the windshield:

- Set the airflow control to the defrost (☀️) position. (The A/C will turn on automatically and "Fresh" mode will be activated.)
- Set the temperature control to the desired setting.
- Set the fan speed control to position "3" or "4".

NOTE: If the air conditioner filter for the evaporator blower is not replaced as per the Scheduled Maintenance section, excessive window fogging may result. This filter is located in the evaporator housing behind the glove box. Your dealer can replace this filter for you.

Windshield Wiper

Wiper Speed

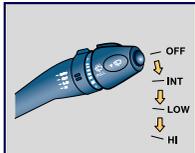


Intermittent



Wipe / Wash



Clear Mist

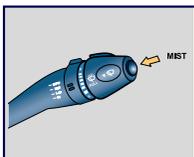


NOTE: You can lengthen the life of your wiper blades by gently wiping the rubber inserts with an alcohol soaked rag to remove grime and road debris.

Driver's Seat




Lumbar Support Control, Driver's seat only

To adjust the lumbar support, move the lever on the outboard or left side of the seat do the desired position.

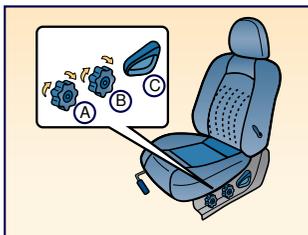

Manual Seat Controls (if installed):


- To raise or lower the front part of the seat cushion, turn the front knob (A) forward or rearward.
- To raise or lower the rear part of the seat cushion, turn the rear knob (B) forward or rearward.
- To recline the seat back, pull up on the seat reclining lever (C).

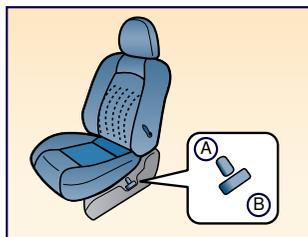

Power Seat Controls (if installed):

- Seat Back Reclining Control Switch (A).
- Seat Cushion Forward, Rearward and Height Adjusting Control Switch (B).


Steering Wheel

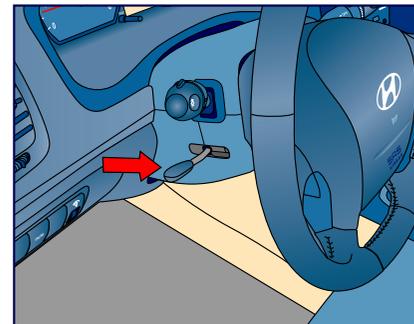

Pull and hold lever while adjusting steering wheel tilt, and then release the lever.

NOTE: Do not attempt to adjust the steering wheel while driving.


Power Window Lock

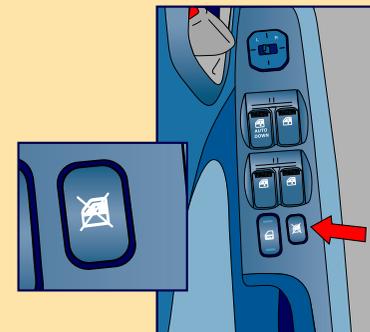

Press the lock switch to deactivate the passenger power window switches.




Remote Keyless Entry

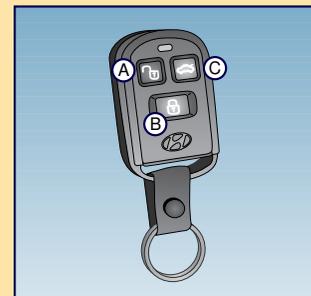

Keyless Remote and Locks

- Press **UNLOCK** on the transmitter to disarm and unlock the driver's door. Press **UNLOCK** again within 4 seconds to unlock all the doors.
- Press **LOCK** on the transmitter to lock all the doors and arm the alarm. Press **LOCK** again within 4 seconds to receive confirmation from the turn signals.
- Push and hold the **TRUNK RELEASE** button on transmitter for longer than 1 second to open the trunk.


Power Mirrors

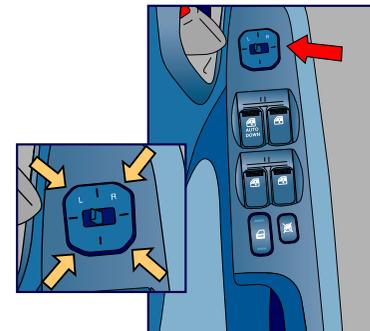

- Move the selecting switch to the right or left to activate the corresponding door mirror.
- Now, adjust the mirror angle by depressing the appropriate perimeter switch as illustrated.
- Place the selecting switch in the middle position to deactivate the perimeter switch.

Note: The outside rearview mirror heaters work in conjunction with the rear window defroster and will turn off automatically after several minutes or when the engine is stopped.

Automatic Transmission

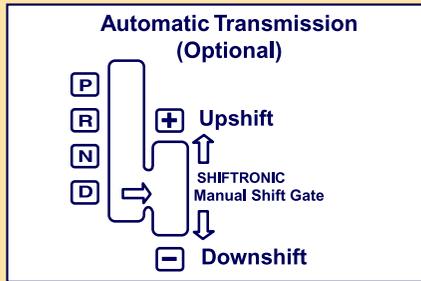


To select automatic mode, shift to D.

To select SHIFTRONIC™ mode move the shift lever right to the manual shift gate. The instrument cluster displays the selected forward gear.

Refer to the Owner's Manual (section 2) for detailed information.

CRUISE

Cruise Control

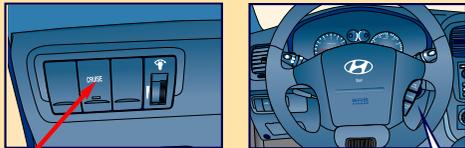


Press to activate the Cruise Control system



Tire Inflation


Check tire pressure at least once a month when the tires are cold. Refer to the tire pressure label located on the driver's door lower edge for correct pressure.

Trunk / Fuel Door Release

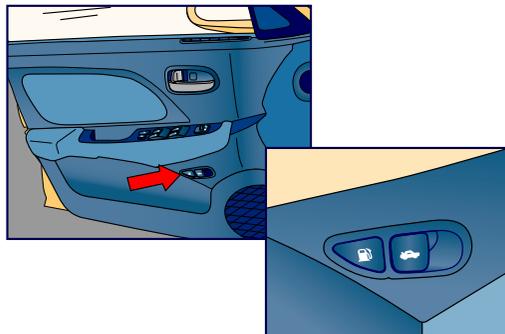

The trunk / fuel door releases are located on the driver's door as shown.

Fuel Cap

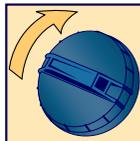

After adding fuel, always reinstall the fuel cap fully and make sure it clicks at least 3 times. Failure to do this may result in the "Check Engine Light" illuminating.

Basic Safety Precaution

- Whenever operating the vehicle, make sure that you and your occupants are properly wearing your seat belts.
- Small children should always ride in the rear seat in the appropriate child restraint system (see Owner's Manual for child safety details).
- Never place children under thirteen years old in the front seats to avoid injury that may result from air bag deployment.
- Always refer to the Owner's Manual for complete safety precaution information.

Detailed Information

- This Quick Reference Guide does not replace your vehicle's Owner's Manual.
- If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your dealer.

Maintenance

Normal Usage Severe Usage

		Normal Usage	Severe Usage
Engine Oil and Filter	Replace	7.5K	3K
Air Cleaner Filter	Replace	30K	More frequently
Automatic Transaxle Fluid and Filter	Inspect	15K	Replace 30K
Rear Brake Drums/linings, Parking Brake	Inspect	30K	Inspect More frequently
Brake Pads, Calipers and Rotors	Inspect	15K	Inspect More frequently
Driveshafts and Boots	Inspect	15K	Inspect 7.5K
Air Conditioner Filter	Inspect	12K	Replace More frequently
Timing Belt	Inspect Replace	30K 60K	
Fuel Lines, Fuel Hoses and Connections	Inspect	30K	
Vapor Hose and Fuel Filler Cap	Inspect	30K	
Drive Belt 2.4 DOHC (Alternator, Water Pump)	Inspect Replace	7.5K 75K	
Drive Belt 2.7 V6 (Alternator, Pwr Stg, Aircond.)	Inspect	30K	
Coolant	Replace	30K	
Brake Fluid	Inspect	30K	
Brake Hoses and Lines	Inspect	15K	
Ball Joint, Upper Arm Ball Joint Power Steering Pump and Hoses	Inspect	30K	
Exhaust Pipe and Muffler	Inspect	15K	
Suspension Mounting Bolts	Inspect	15K	
Steering Gear Box, Linkage & Boots/lower Arm	Inspect	15K	
Air Conditioning Refrigerant	Inspect	15K	

All units are displayed in miles.

For additional service intervals, severe maintenance schedule, and complete details, see Owner's Manual.



HYUNDAI ROADSIDE BENEFITS INCLUDE*:

- Towing to the nearest Hyundai Dealership or authorized Service Facility if your vehicle is inoperable, including non-warrantable related tows such as accidents. Coverage period is 60 months/unlimited miles.
- Emergency Roadside Assistance.
- National Dealer Locator Service.
- Trip Interruption Benefit if Warrantable Mechanical Disablement occurs more than 150 miles from home. Limit to \$100/day, 3 day maximum. (800) 243-7766

*Please refer to your Owner's Manual Kit for specific coverage and limitations.

2005 Quick Reference Guide

SONATA

