



1. Remove the headrests.
2. Pull strap to fold up the seat cushion.
3. Push and hold the seatback folding lever (1) inward, then push down the seatback.

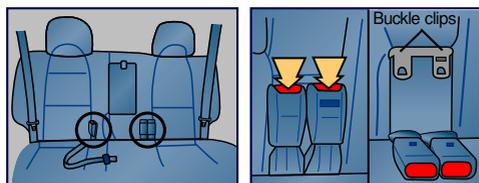


- Note:**
- Before folding the seatback, place the rear seat belt buckles in the buckle clips on the seatback. This will prevent the seat belt buckles from becoming covered by the seat cushion when it is returned to the seating position.
  - The rear seat belt buckles must be removed from the buckle clips by pressing release button when in use.

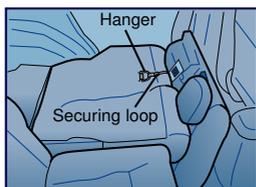

4. Hook the securing loop under the seat cushion to the hanger on the backside of the seatback.
5. Insert the headrests between the seatback and the seat cushion.
6. To return the seatback to its normal position, push the seatback folding lever and reverse the above procedure.

- When you return the seatback to its upright position, always be sure it is locked into position by pulling and pushing on the top of the seatback.

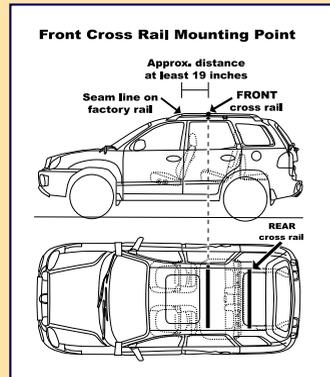


**Avoid Wind Noise:**

The cross rails (if equipped) of the roof rack should be removed when not in use.

If cross rails must remain on the vehicle, position them as shown above. A label under each cross rail indicates the forward edge.

**Audio Antenna**

The audio antenna is movable. For optimal reception, always make sure that your antenna is in the upright position.

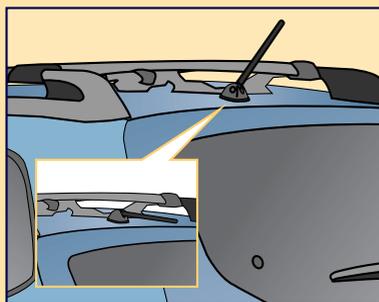

- **Note:** The antenna mast may be laid down flat when carrying over-size objects such as skis or surfboards.



- Will be illuminated when you turn the ignition key to **START** or **RUN**.
- The light will not be illuminated when the passenger's airbag is enabled (seat occupied by an adult passenger).

The occupant classification system will disable the right front passenger's front and side impact airbags under certain conditions (light on). Refer to Owners' Manual for a complete description of this system.

**Note:** The driver's air bag systems are not affected by the occupant classification system.

**Tire Inflation**

Check tire pressure at least once a month when the tires are cold. Refer to the tire pressure label located on the driver's door of the center pillar for correct pressure.

**Basic Safety Precautions**

- Whenever operating the vehicle, make sure that you and your occupants are properly wearing your seat belts.
- Small children should always ride in the rear seat in the appropriate child restraint system (see Owner's Manual for child safety details).
- Never place children under thirteen years old in the front seats to avoid injury that may result from air bag deployment.
- Always refer to the Owner's Manual for complete safety precaution information.

**Detailed Information**

- This Quick Reference Guide does not replace your vehicle's Owner's Manual.
- If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your dealer.

	Normal Usage		Severe Usage	
Engine oil and filter	Replace	7.5K	Replace	3K
Air cleaner filter	Replace	30K	Replace	More frequently
Timing belt	Inspect Replace	30K 60K	Inspect Replace	20K 40K
Manual transaxle oil	Inspect	30K	Replace	60K
Automatic transaxle fluid and filter	Inspect Replace	15K 105K	Inspect Replace	48K
Rear brake drums/linings, parking brake	Inspect	30K	Inspect	More frequently
Brake pads, calipers and rotors	Inspect	15K	Inspect	More frequently
Driveshafts and boots	Inspect	15K	Inspect	7.5K
Transfer case oil (4WD)	Inspect Replace	25K 62K	Replace	25K
Rear axle oil (4WD)	Inspect	25K	Replace	50K
Fuel lines, fuel hoses and connections	Inspect	30K		
Fuel vapor hoses and fuel filler cap	Inspect	30K		
Drive belt				
2.7 V6 (alt, p/str'g, a/c)	Inspect	30K		
3.5 V6 (alt, p/str'g, a/c)	Inspect	7.5K		
Coolant	Replace	30K		
Brake fluid	Inspect	30K		
Brake hoses and lines	Inspect	5K		
Power steering pump, belt and hoses	Inspect	30K		

All units are displayed in miles.

**For additional service intervals, severe maintenance schedule, and complete details, see Owner's Manual.**



**HYUNDAI ROADSIDE BENEFITS INCLUDE\*:**

- Towing to the nearest Hyundai Dealership or authorized Service Facility if your vehicle is inoperable, including non-warrantable related tows such as accidents. Coverage period is 60 months/unlimited miles.
- Emergency Roadside Assistance.
- National Dealer Locator Service.
- Trip Interruption Benefit if Warrantable Mechanical Disablement occurs more than 150 miles from home. Limit to \$100/day, 3 day maximum. (800) 243-7766

\*Please refer to your Owner's Manual Kit for specific coverage and limitations. Part Number NP150-76000 12/05

Quick Reference Guide

SANTA FE

HYUNDAI

## Compass


It may become necessary to calibrate the overhead compass display.

To calibrate compass to **magnetic North**:

- Press and hold the "M" button until the display flashes.
- Drive at least one 360 degree circle while observing the compass display\*\*.
- When the display stops flashing, the compass is calibrated to **magnetic North**.
- To adjust the compass to display **true North**, please refer to your Owner's Manual for complete details.

**\*\*CAUTION:** Be sure the area is free of traffic, pedestrians and obstructions before driving.

## Height Adjustable Front Seat Shoulder Belt

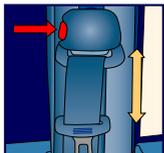

- Push anchor upwards to raise the height adjuster.
- Push anchor downward while pressing the height adjuster button to lower.


## Rear Defroster / Outside Mirror Heaters



With the engine running, press the defroster switch to activate the rear window and outside rearview mirror heaters\*.

\* Turns off automatically after several minutes or when the engine is stopped.


## Rear Seats

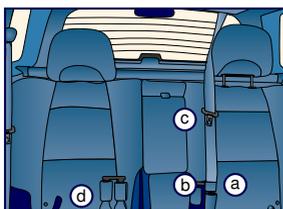

### Rear Center Seatbelt:


1. Confirm that the metal tab (a) and buckle (b) are latched together.
2. Pull the seat belt out of the retractor and insert the metal tab (c) into the buckle (d).

## Driver's Seat

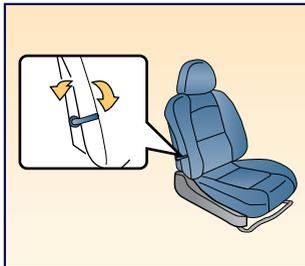


### Lumbar Support Control:

To adjust the lumbar support, move the lever on the outboard or left side of the seat to the desired position.

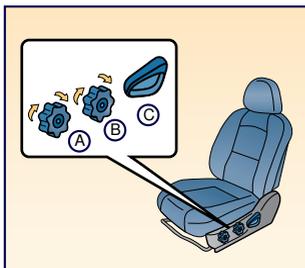

### Manual Seat Controls (if installed):


- To raise or lower the front part of the seat cushion, turn the front knob (A) forward or rearward.
- To raise or lower the rear part of the seat cushion, turn the rear knob (B) forward or rearward.
- To recline the seat back, pull up on the seat reclining lever (C).

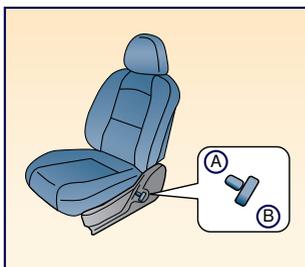

### Power Seat Controls:

- Seat Back Reclining Control Knob (A).
- Seat Cushion Forward, Rearward and Height Adjusting Control Knob (B).


## Cruise Control

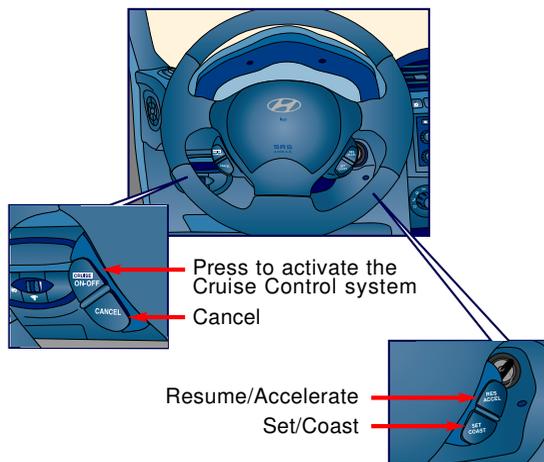

Press to activate the Cruise Control system  
Cancel

Resume/Accelerate  
Set/Coast

## Keyless Remote and Locks

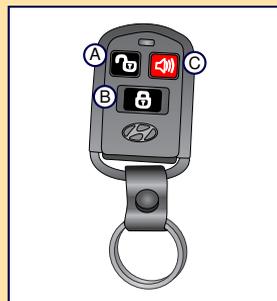

### Keyless Remote and Locks (if equipped)

- A. Press **UNLOCK** on the transmitter to disarm and unlock the driver's door. Press **UNLOCK** again within 4 seconds to unlock all the doors.
- B. Press **LOCK** on the transmitter to lock all the doors and arm the alarm. Press **LOCK** again within 4 seconds to hear a confirmation chirp.
- C. Press **PANIC** on the transmitter to activate the horn and flashing lights for 30 seconds. Press **PANIC** again to turn off the horn and flashing lights.

## Windshield Wiper Washer

### Wiper Speed



### Intermittent



### Wipe / Wash




### Clear Mist



**NOTE:** You can lengthen the life of your wiper blades by gently wiping the rubber inserts with an alcohol soaked rag to remove grime and road debris.

## Rear Window Washer and Wiper

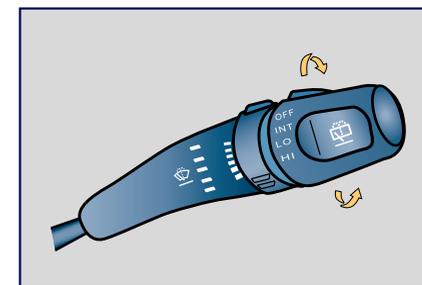

Rotate the right barrel switch to select the following rear window wiper/washer (if equipped) operation modes.


- () Activates the rear window washer function
- (OFF)
- (INT) Intermittent mode with fixed interval
- (ON) Continuous wipe mode

## Defrosting/Defogging
 
### Using The Heating/Ventilation System To Defrost Or Defog The Windshield:

Manual A/C

Full automatic A/C

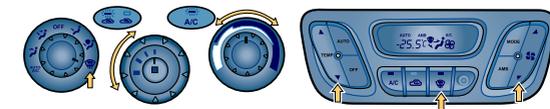


### To Remove Interior Fog On The Windshield:

- Set the airflow control to the defrost () position. (The A/C will turn on automatically and the "Fresh" mode will be activated).
- Set the temperature control to the desired position.
- Set the fan speed control between "1" and "4" position.

Manual A/C

 Full automatic A/C

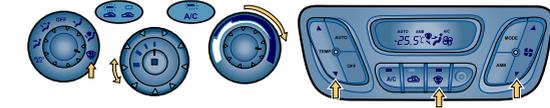

### To Remove Frost Or Exterior Fog On The Windshield:

- Set the airflow control to the defrost () position. (The A/C will turn on automatically and the "Fresh" mode will be activated.)
- Set the temperature control to warm.
- Set the fan speed control to position "3" or "4".

## Fuel Cap



After adding fuel, always reinstall the fuel cap fully and make sure it clicks at least 3 times. Failure to do this may result in the "Check Engine Light" illuminating.