

# FORTE

## Features & Functions Guide



**Delivery First**  
The priority that delivers more

## WELCOME TO THE KIA FAMILY!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and – above all – your satisfaction.

## USING THIS FEATURES & FUNCTIONS GUIDE

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

## VIDEOS AND QR CODES

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your mobile device using the built-in QR Code Reader or a downloaded QR Code Reader App.

After opening the QR Code Reader App on your mobile device, the app will utilize your device's camera. Center the code in the camera viewing area - With some apps, as soon as the app recognizes the code, it will launch the corresponding video.

With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video.

For operation specifics, refer to the instructions that come with the QR Code Reader app. You can also view the videos by visiting the following website: [www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos).

### QUICK TIPS

1. If you're having trouble scanning codes, check the following:
  - The code should be centered and focused in your mobile device's camera screen
  - Consider moving your device closer to or farther away from the code
  - The code should be well lit, without significant shadow
  - Avoid scanning from a significant angle
  - Confirm that the device's app supports 2D QR Code scanning
  - Try another QR Code Reader app; not all apps are created equal
2. After scanning, you may experience a "connection error" message or a "connecting" message with no subsequent response. These messages typically indicate that your device is having trouble connecting to the Internet

### QR CODE

#### One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to this page for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia's most used features:

1	Smart Key . . . . .	40
2	Fuel Filler Lid Release. . . . .	44
3	Power Adjustable Driver's Seat* / Front Seat Headrest Adjustment . . . . .	37
4	Seat Warmers / Ventilated Seats* . . . . .	36
5	Folding Rear Seats . . . . .	38
6	Wiper Service Mode . . . . .	17
7	Windshield Wipers & Washers . . . . .	17
8	Smart Cruise Control (SCC) . . . . .	18
9	Smart Power Trunk* . . . . .	42
10	Normal Maintenance Schedule . . . . .	46, Back Cover
11	User Settings – Instrument Cluster . . . . .	08
12	Bluetooth® Wireless Technology . . . . .	20-21
13	UVO eServices Activation* / UVO eServices* . . . . .	24-25
14	UVO link with Navigation* . . . . .	28
15	Android Auto™ / Apple CarPlay® Setup . . . . .	24

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.*

www.kia.com  
 Consumer Affairs - Roadside Assistance<sup>118</sup>:  
 1-800-333-4KIA (800-333-4542)

Always check the Owner's Manual for complete operating information and safety warnings.



## VIDEOS & QR CODES . . . Inside Front Cover

### INSTRUMENT CLUSTER

Instrument Cluster Overview . . . . .	03
Indicators & Warning Lights . . . . .	04
Fuel Economy . . . . .	05
Tire Pressure Monitoring System (TPMS) . . . . .	05
Drive Mode Integrated Control System . . . . .	06

### VEHICLE SETTINGS

LCD Instrument Cluster Modes . . . . .	07
Trip Modes / Trip Computer . . . . .	07
User Setting Mode . . . . .	08
Service Interval Mode . . . . .	08

### ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)

Blind-Spot Collision Warning (BCW)* . . . . .	09
Rear Cross-Traffic Collision Warning (RCCW)* . . . . .	09
Forward Collision-Avoidance Assist (FCA) . . . . .	10
Lane Keeping Assist (LKA) . . . . .	11
Driver Attention Warning (DAW) . . . . .	12

### DRIVER'S PANEL

Electronic Stability Control (ESC) . . . . .	13
Instrument Cluster Control . . . . .	13
Hill-start Assist Control (HAC) . . . . .	13
Engine Start/Stop Button*. . . . .	14
Power Windows, Window Lock & Central Door Lock . . . . .	15
Power Folding Outside Mirrors*. . . . .	15
Automatic Door Lock/Unlock . . . . .	15
Heated Outside Mirrors*. . . . .	15
Manual Folding Mirrors*. . . . .	15

### STEERING WHEEL CONTROLS

Headlights & High Beams . . . . .	16
Turn Signals & Fog Lights* . . . . .	16
Tilt/Telescoping Steering Wheel. . . . .	17
Windshield Wipers & Washers. . . . .	17
Lifting Wipers (Wiper Service Mode) . . . . .	17
Smart Cruise Control (SCC) . . . . .	18
Cruise Control (CC) . . . . .	19

### AUDIO SYSTEMS

Bluetooth® Wireless Technology. . . . .	20
Audio Controls. . . . .	22
Standard Audio System*. . . . .	23
Android Auto™ / Apple CarPlay® Setup*. . . . .	24
UVO eServices Activation*. . . . .	24
UVO eServices*. . . . .	25
UVO link Activation*. . . . .	26
Kia Access with UVO link App Download . . . . .	27
Kia Access with UVO link App Features Guide . . . . .	27
UVO link with Navigation*. . . . .	28

### CENTER PANEL

Aux/Multimedia USB Port, Power Outlets & USB Charger Ports*. . . . .	29
Digital Clock. . . . .	29
Automatic Climate Control*. . . . .	30
Manual Climate Control*. . . . .	31
Automatic Gear Shift with Sportmatic® Shifting*. . . . .	32
Paddle Shifters*. . . . .	32
Manual Gear Shift*. . . . .	33
Wireless Smartphone Charging System*. . . . .	34
Rear View Monitor (RVM) . . . . .	35
Reverse Parking Distance Warning (PDW)* . . . . .	35

### SEATING

6-Way Manual Adjustable Driver's Seat* . . . . .	36
Seat Warmers* / Ventilated Seats* . . . . .	36
10-way Power Adjustable Driver's Seat* . . . . .	37
Front Seat Headrest Adjustment. . . . .	37
Folding Rear Seats . . . . .	38

### OTHER KEY FEATURES

Map/Room Lamps*. . . . .	39
Sunroof Operation*. . . . .	39
Smart Key*. . . . .	40
Remote Keyless Entry (Folding Key)* . . . . .	41
Double-Turn Lock/Unlock All . . . . .	41
Smart Power Trunk*. . . . .	42
Hood Release Lever and Latch . . . . .	43
Sunvisor. . . . .	43
Trunk Release Lever and Button*. . . . .	43
Fuel Filler Lid Release Lever. . . . .	44
Fuel Cap / Malfunction Indicator (Check Engine Light) . . . . .	44
Tire Mobility Kit*. . . . .	44

### SAFETY FEATURES

Seat Belts . . . . .	45
Child-Protector Rear Door Locks . . . . .	45
Occupant Detection System (ODS) / Passenger Airbag Off Indicator . . . . .	45

### NORMAL MAINTENANCE - TURBO . . . . .


### NORMAL MAINTENANCE - NON-TURBO . . . . . Back Cover

### LEGAL DISCLAIMERS. . . . . Inside Back Cover

## Instrument Cluster Overview

- A** Tachometer
- B** Speedometer
- C** Turn Signal Indicators
- D** LCD Gear Shift Position, Odometer, Trip Modes / Trip Computer, Exterior Temperature
- E** Engine Coolant Temperature Gauge
- F** Fuel Gauge


◀▶  Arrow direction indicates the side of the vehicle the fuel door is located

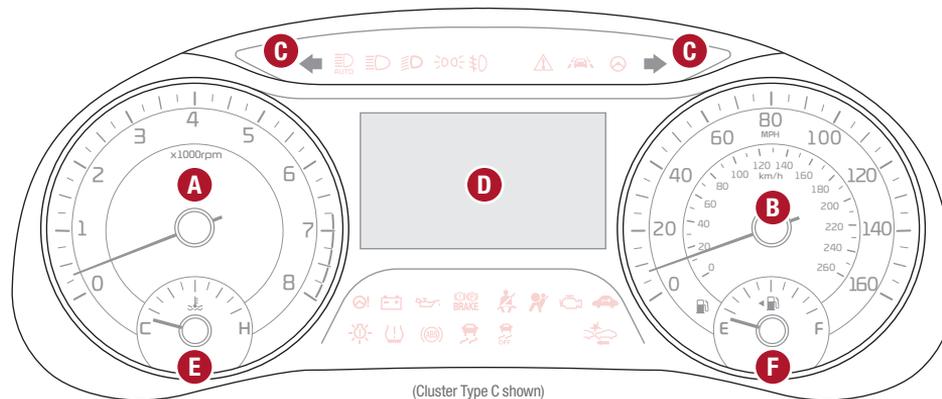

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

## Indicators &amp; Warning Lights

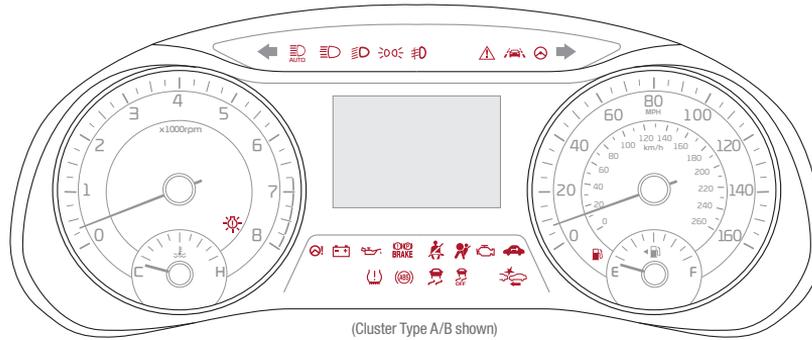

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

- |  |                                                          |  |                                                  |
|--|----------------------------------------------------------|--|--------------------------------------------------|
|  | Low Tire Pressure Indicator / TPMS Malfunction Indicator |  | Door Ajar Warning Indicator                      |
|  | Electronic Stability Control OFF Indicator               |  | Airbag Warning Indicator                         |
|  | Anti-Lock Brake System (ABS) Indicator                   |  | Charging System Warning Indicator                |
|  | Trunk Open Indicator                                     |  | High Beam Indicator                              |
|  | Immobilizer Indicator                                    |  | Low Fuel Level Warning Indicator                 |
|  | Electronic Stability Control Indicator                   |  | Cruise Control ON Indicator*                     |
|  | Malfunction Indicator*                                   |  | Cruise Control Set Indicator*                    |
|  | Light on Indicator                                       |  | Master Warning Mode*                             |
|  | KEY OUT Indicator*                                       |  | SPORT Mode Indicator*                            |
|  | Electronic Power Steering (EPS) Warning Indicator*       |  | Lane Keeping Assist Indicator*                   |
|  | Front Fog Lights Indicator*                              |  | Forward Collision-Avoidance Assist Warning Light |
|  | Engine Oil Pressure Warning Indicator                    |  | Washer Fluid Warning Indicator                   |
|  | Safety Belt Warning Indicator                            |  |                                                  |

- |  |                                                                                                                        |
|--|------------------------------------------------------------------------------------------------------------------------|
|  | Electronic Brake Force (EBD) System Warning Indicator (Two separate indicators on Instrument Cluster lit at same time) |
|  | Icy Warning Indicator*                                                                                                 |
|  | Low Beam Indicator                                                                                                     |
|  | High Beam Assist Indicator*                                                                                            |
|  | Parking Brake & Brake Fluid Warning Light                                                                              |
|  | LED Headlamp Warning Light*                                                                                            |
|  | SMART Mode Indicator*                                                                                                  |
|  | Hood Open Warning Light*                                                                                               |
|  | Sunroof Open Warning Light*                                                                                            |

## Fuel Economy

Several factors contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

Refer to section 6 in the Owner's Manual for more information or snap the QR Code above to view a video.

## Tire Pressure Monitoring System (TPMS)<sup>†25</sup>

The indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.




The TPMS indicator is designed to illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower. The Low Tire Pressure Position Indicator  is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated.

- Inflate tire(s) to specifications to turn off the Low Tire Pressure Light  using an accurate tire pressure gauge. See front driver's door jamb for PSI specification
- When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate - See dealer for service

### REMINDERS:

- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s).
- Check the recommended tire pressure label located on the left side of the driver's door jamb, visible when the door is opened.
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate.

### Low Tire Pressure

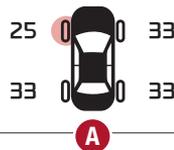

### QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for approximately 20 minutes, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

### QR CODE

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to the inside cover for more information.

#### Fuel Economy Video



#### Tire Pressure Monitoring System Video



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

Refer to section 4 in the Owner's Manual for more information.



## Drive Mode Integrated Control System

SMART, NORMAL and SPORT drive modes **A** may be changed according to the driver's preference or road conditions. To cycle through drive modes, press the DRIVE MODE button **B**.

**SMART Mode** – When SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style (economic, average, aggressive). A SMART indicator will illuminate on the instrument cluster. The color of the SMART indicator (green, blue, red) depends on the current driving style. To deactivate, press the DRIVE MODE button **B** again to change the selection to another setting.

**NORMAL Mode** – The system's default mode is NORMAL mode and is not displayed on the instrument cluster nor the audio system's screen.

**SPORT Mode** – A red SPORT indicator will illuminate on the instrument cluster. To deactivate, press the DRIVE MODE button **B** again to change the selection to another setting.

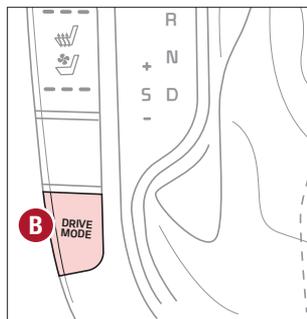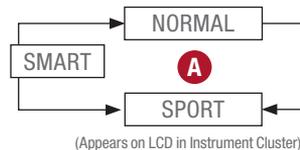

### QUICK TIPS

- In SPORT mode, when engine is turned off, the system will default to NORMAL mode and SPORT mode will need to be selected again when the vehicle restarts.
- To help improve your fuel economy:
  - Drive at a moderate speed, accelerating smoothly and at a moderate rate
  - Keep tires inflated to the recommended pressure
  - Be sure the wheels are properly aligned

### REMINDERS:

- When SPORT mode is selected, fuel economy may decrease
- Steering effort may be slightly increased in Sport mode

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 5 in the Owner's Manual for more information.*

### QR CODE

#### Drive Mode Integrated Control System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to the inside cover for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## LCD Instrument Cluster Modes\*

(Type B and C Clusters)

Press Mode/Menu button **A** to scroll through the different LCD modes:

-  **Trip Computer Mode:** Displays driving information for tripmeter, fuel economy, etc.
-  **Turn-by-Turn Mode\*:** Displays the state of the navigation
-  **Driving Assist Mode\*:** Displays information about Lane Keeping Assist, Driver Attention level & tire pressure
-  **User Settings Mode:** Change settings of the driver assistance features, doors, lamps and other features
-  **Master Warning Mode:** Displays warning messages including those related to Blind-Spot Collision Warning (BCW)\* Malfunction, Cruise Control, Lamp Malfunction, LED Lamp Malfunction\*, and Engine Oil Shortage

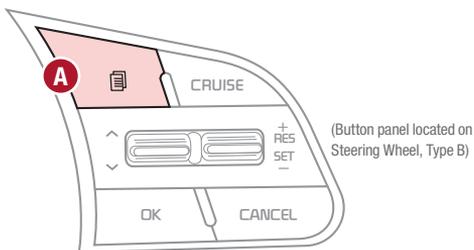

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering wheel mounted controls while driving.*


*Refer to section 4 in the Owner's Manual for more information.*

## Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving on the display when the ignition switch or the Engine Start/Stop button\* is in the ON position.


**Instrument Cluster Type A** – To toggle through the different Trip Computer modes, press the Trip button **B**. When in Tripmeter, press the Trip button **B** again to select Trip A or Trip B. Press and hold the Reset button (not shown - Type A Steering Wheel) to reset the Tripmeter to zero.

**Instrument Cluster Type B/C** – To scroll through the different LCD Instrument Cluster modes, press the Mode/Menu button **B**. To display the Tripmeter, press the Mode/Menu button **B** and select Trip Computer . Then press the Move button **C** up/down to scroll to Drive Info screen and press OK button **D** to enter. Then scroll to Tripmeter and press OK button again. Press and hold the OK button **D** to reset the Tripmeter to zero.

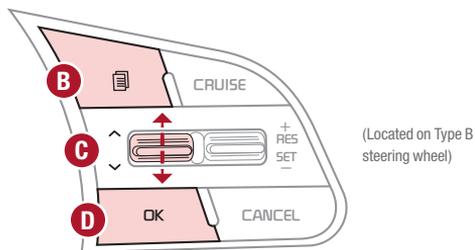

### REMINDERS:

- Appearance of Tripmeter display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

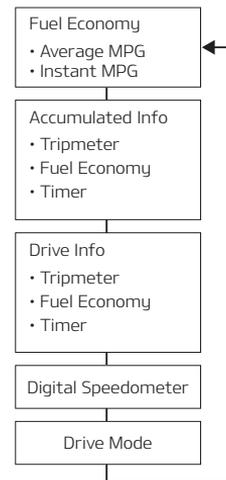

(Type B/C cluster shown)


*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 4 in the Owner's Manual for more information.*

## User Settings Mode (Type B/C Cluster settings)

To enter the User Settings mode on the LCD screen, ensure vehicle is at a stand still, shift lever in Park, and Engine Start/ Stop button or Key in the ON position. Then select User Settings  by pressing the Mode/Menu button **A**.

You can navigate the selections on the display by pressing the Move button **B**, and then selecting the item by pressing the OK button **C**.

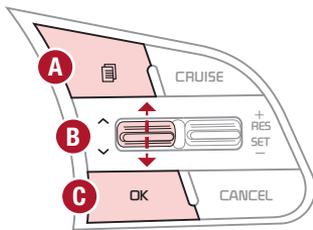

(Button panel located on Steering Wheel, Type B)

### User Settings Modes:

#### Driver Assistance\*:

- Lane Safety\*
- Driver Attention Warning
- Forward Collision-Avoidance Assist
- Forward Collision Warning
- Blind-Spot Collision Warning\*

#### Doors:

- Automatically Lock
- Automatically Unlock
- Smart Trunk\*
- Two Press Unlock\*
- Horn Feedback\*

#### Lights:

- One-Touch Turn Signal\*
- Headlamp Delay\*

#### Sound:

- Parking Distance Warning\* Volume
- Welcome Sound\*

#### Service Interval:

- Enable Service Interval
- Adjust Interval
- Reset

#### Convenience:

- Welcome Mirror/Light\*
- Wireless Charging System\*
- Wiper/Lights Display\*
- Gear Position Pop-up\*
- Icy Road Warning\*

#### Other Features:

- Fuel Economy Auto Reset
- Fuel Economy Unit
- Temperature Unit
- Tire Pressure Unit\*

#### Reset:

- Reset Menus

#### Language\*:

- Choose Language

Refer to section 4 in the Owner's Manual for more information.

## Service Interval Mode (Type B/C Cluster settings)

To enter Service Interval Mode, press the Mode/Menu button **A**, scroll to the User Settings Mode . Press Move button **B** to scroll to the Service Interval menu and press OK button **C** to enter. System will display number of miles remaining until next service is due, and type of service.

When service is required, the following screen will be displayed: **Service Required**.

To reset the Service Interval Mode system, press and hold the Set/Reset (OK) button **C** for more than 1 second.

To turn Service In OFF, go to User Settings.



### Service Interval Setting:

To set the service interval when in User Settings mode:

- Press the Move button **B** up/down and scroll to Service Interval. Press the OK button **C** to enter
- Press the Move button **B** and toggle to ON, then press the Select/Reset button **C**. Then press the Move button **B** up/down to scroll and select the desired miles or months for your next service
- Press the Select/Reset button **C** to enter

Refer to section 4 in the Owner's Manual for more information.

### QR CODE

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to the inside cover for more information.

#### LCD Display Video



#### LCD Display: Maintenance Video



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

For illustrative purposes only. Your actual display, buttons and/or features may vary.

## Blind-Spot Collision Warning (BCW)\*†‡

BCW uses rear corner radar sensors in the rear bumper to monitor and warn the driver in certain situations if it detects an approaching vehicle in the driver's blind spot area and before changing lanes. BCW is ON when the Blind-Spot Safety button **A** is pressed – the button light will illuminate. The outside rearview mirror warning lights will also illuminate for 3 seconds.

The system will become active when the vehicle is traveling more than approximately 20 mph and will warn the driver if another vehicle is detected by the rear corner radar sensor.


To activate BCW, go to User Settings by pressing the Mode button on the Steering Wheel. Select Driver Assistance > Blind-Spot Safety and then press the OK button. Select Warning Only or Off.

**1st-stage warning:** When another vehicle is detected within BCW boundary **B**, a yellow indicator will illuminate on the outside rearview mirrors **C**.


**2nd-stage warning:** When 1st-stage warning is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert.

### REMINDERS:

- If BCW is turned ON and the ignition is cycled, BCW returns to ON
- Warning sound can be adjusted in User Settings

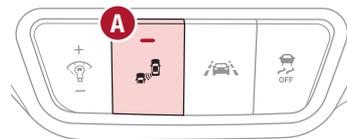


(Located left of steering wheel)

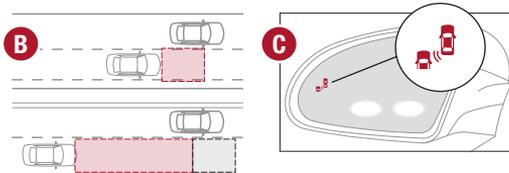

## Rear Cross-Traffic Collision Warning (RCCW)\*†‡

If RCCW sensors detect approaching vehicles from the rear left or rear right side of the vehicle **D**, the system will sound an audible alert, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the LCD. RCCW may temporarily apply braking power when an approaching vehicle is detected within a certain distance next to or behind the vehicle is designed to operate under the following conditions:

- When the gear shift is moved into (R) Reverse
- When the vehicle is moving less than 6 mph

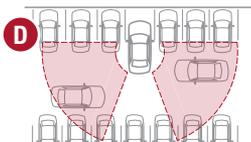

### REMINDERS:

- RCCW can be turned OFF/ON in User Settings and will remain in OFF/ON as selected
- When vehicle power is cycled, RCCW will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling between 2.5 and 22 mph, RCCW will show a warning. See Owner's Manual for other conditions
- Warning sound can be adjusted in User Settings

Refer to section 5 in the Owner's Manual for more information

BCW and RCCW are supplemental systems. Do not solely rely on these systems and always pay attention to the road and its conditions.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

### QR CODE

#### Blind-Spot Collision Warning w/ RCCW Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to the inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Forward Collision-Avoidance Assist (FCA)<sup>†6</sup>

FCA is designed to detect and monitor a vehicle ahead or detect a pedestrian in the roadway through front view camera recognition and front radar signals to warn the driver that a collision is imminent, and if necessary, apply emergency braking. Initially, FCA provides Forward Collision Warning (FCW) when it detects a potential collision with a vehicle or pedestrian in front, emitting an audible warning and visual alert on the Instrument Cluster LCD **A**.

FCA can be enabled by going to the User Settings in the Instrument Cluster. Go to Driver Assistance > Forward Collision-Avoidance Assist. The Warning Timing can be adjusted by going to Vehicle > Driver Assistance > Forward Collision Warning > Normal or Late.

If the system detects that the collision risk has increased, the FCA automatically applies the brakes to reduce your speed, potentially helping to avoid or reduce the effects of a possible collision.

FCA will become active when the:

- Engine Start/Stop button is ON
- Vehicle is traveling more than 6 mph
- Electronic Stability Control (ESC) is ON

### QUICK TIP

The FCA Warning Volume can be adjusted in the User Settings\* or the Vehicle Settings\* on the audio head unit

### REMINDERS:

- FCA will be activated by default when the ignition is cycled ON, even when previous setting to OFF
- If FCA is operating and the ESC (Electronic Stability Control) is turned off, the systems are automatically turned off
- When the FCA/FCW systems are off, the FCA/FCW systems warning indicator is on in the Instrument Cluster

*Forward Collision-Avoidance Assist (FCA) is not a substitute for safe and proper driving and may not detect all objects surrounding the vehicle.*

*Always drive safely and use caution. FCA may not always alert the driver when the vehicle is approaching another vehicle.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 5 in the Owner's Manual for more information.*



### QR CODE

#### Forward Collision-Avoidance Assist (FCA) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to the inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Lane Keeping Assist (LKA)<sup>†6</sup>

With the Engine Start/Stop button in the ON position, press the Lane Safety button **A** to turn system ON. The instrument cluster indicator  will initially illuminate white. It will remain white when the vehicle is traveling less than 40 mph and the system does not detect the lane markers. When LKA detects the lane markers and can assist the steering, the LKA icon will illuminate green.

If LKA detects that you are moving outside of your lane, the system may give an audible warning and display an Lane Departure Warning on the instrument cluster. If the vehicle continues to move outside of the lane, LKA may provide steering inputs, trying to prevent the vehicle from moving outside its lane.

LKA is the operating mode by default when the button is depressed to ON. To switch between modes (Active LKA, LKA and Lane Departure Warning), go to User Settings in the Instrument Cluster, select Driver Assistance, then Lane Keeping Assist.

The three available modes are:

**Active LKA** – Provides more frequent steering inputs than standard LKA

**Lane Keeping Assist** – Guides driver to keep vehicle within lanes and provides steering inputs when vehicle is about to deviate from the lane

**Lane Departure Warning** – Alerts driver when the system detects the vehicle leaving the lane. In this mode the system will not provide steering inputs

All systems will operate under the following conditions:

- The vehicle speed is above 40 mph
- LKA recognizes both sides of lane markers the vehicle is traveling in
- The vehicle is between the lane markers


### QUICK TIP

The LKA Warning Volume can be adjusted in the User Settings or the Vehicle Settings\* on the audio head unit

### REMINDERS:

- LKA will not issue a warning if the turn signal or hazard signal is activated
- LKA will return to its previous state when the ignition is cycled
- When the vehicle changes lanes without a turn signal, LKA may sound an audible warning. The warning sound can be adjusted in the User Settings

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

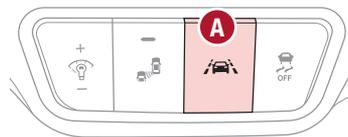

When the front-view camera detects the lane traveling in, both lanes are illuminated



When the front-view camera does not detect the lane traveling in, the lanes are not illuminated



When the front-view camera detects the vehicle veering outside of the lane traveling in, a vehicle crossing lane indicator will illuminate, either on the left or right lane (shown in both images above)

*LKA is not a substitute for safe and proper driving. Always drive safely and use caution. LKA may not always alert the driver if the vehicle is driven outside of its lane. For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 5 in the Owner's Manual for more information.*

\*IF EQUIPPED

†LEGAL DISCLAIMERS ON BACK INSIDE COVER

### QR CODE

#### Lane Keeping Assist (LKA) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to the inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Driver Attention Warning (DAW)<sup>†7</sup>

DAW monitors the driving style of the driver and, in certain situations, can give a warning signal to the driver to take a break from driving.

To turn DAW ON, turn the ignition on and then select User Settings in the LCD Display on the Instrument Cluster. Go to Driver Assistance > Driver Attention Warning > High Sensitivity or Normal Sensitivity. Select Off to disable.

### Driver Attention Warning modes:

**OFF:** Driver Attention Warning is deactivated **A**

**Normal Sensitivity:** Driver Attention Warning alerts the driver of inattentive driving practices.

**High Sensitivity:** Driver Attention Warning alerts the driver of inattentive driving practices faster than Normal mode.

If DAW is activated, the DAW information will appear on the LCD Display **B** when you select the Driving Assist mode .

A message, “Consider taking a break,” appears on the LCD display and a warning sounds to suggest the driver to take a break when the driver’s attention level is below one bar **C**.



### REMINDERS:

- The set-up of DAW will be maintained, as selected, when the ignition is cycled
- When activated, DAW does not display the “Consider taking a break” message when the total trip driving time is less than 10 minutes
- DAW will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 40 mph

*Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 5 in the Owner’s Manual for more information.*

## Electronic Stability Control (ESC)<sup>†8</sup>

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible. Press ESC button **A** to turn ESC OFF/ON.

### REMINDERS:

- ESC is turned ON by default at vehicle start-up. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the instrument cluster will be lit momentarily whenever ESC is active


Refer to section 5 in the Owner's Manual for more information.

## Instrument Cluster Control

With parking lights/headlights ON, press button **B** (+) or (-) to adjust the brightness of the instrument panel illumination.

**REMINDER:** The Instrument Cluster Control does not adjust brightness on the audio head unit screens. Use the display settings in the Setup menu to adjust the brightness on the screen.

Refer to section 4 in the Owner's Manual for more information.

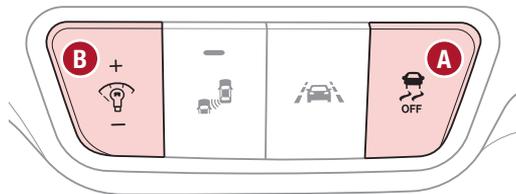

(Located left of steering wheel)

## Hill-start Assist Control (HAC)<sup>†8</sup>

HAC is designed to help prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline. The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

### QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator
- HAC provides a 2-second delay before the vehicle may start rolling backwards

### REMINDERS:

- The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- In the event of HAC system malfunction, see Authorized Kia Dealer for service

*HAC does not replace the need to apply brakes while the vehicle is stopped on an incline.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 5 in the Owner's Manual for more information.*



## Engine Start/Stop Button\*†9

### To start the engine:

1. Depress the brake pedal and/or clutch pedal\*
2. Press the Engine Start/Stop button while the gear shift is in Park (or while in Neutral for Manual Gear Shift)

### To turn the vehicle OFF, press the Engine Start/Stop button.

To use the Engine Start/Stop button, the Smart Key fob must be in the vehicle.

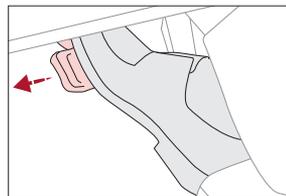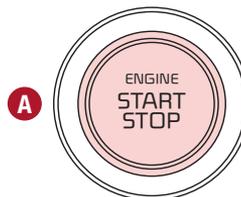

### QUICK TIPS

To use electrical accessories:

#### ACC position

- When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button once **A**

#### ON position

- When already in the ACC position and without depressing the brake pedal, press the Engine Start/Stop button again
- When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button twice

Keeping the vehicle in ACC or the ON position for extended periods of time without turning the engine on may discharge the vehicle's battery

### REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the Engine Start/Stop button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob battery is dead, you can still start the engine by pressing the Engine Start/Stop button with the Lock-button end of the Smart Key. The Smart Key must contact the Engine Start/Stop button directly, at a right angle

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

### QR CODE

#### Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to the inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

*Refer to section 5 in the Owner's Manual for more information.*

## Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate Driver's & Passenger's Window Auto Up/Down\*
- B** Press to Unlock/Lock All Doors
- C** Press to disable Rear Passenger Windows

### QUICK TIPS

- Press button **A** again to stop Auto Up/Down function
- While driving with the rear windows down or with the sunroof\* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
  - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
  - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

**REMINDER:** When button **C** is pressed, the rear window controls for the Rear Passenger Windows are disabled.

Button configuration may vary depending on vehicle model. Refer to section 4 in the Owner's Manual for more information.

## Power Folding Outside Mirrors\*


- D** Press the L or R buttons to select the mirror to adjust
- E** Press button arrows left/right or up/down to adjust mirror position
- F** Toggle button to unfold/fold the outside rearview mirrors. Toggle button to automatically fold/unfold mirrors when:
  - Smart Key\* lock/unlock buttons are pressed
  - Outside door handle button is pressed
  - Driver approaches the vehicle with the Smart Key\*

### REMINDEERS:

- When mirror button **F** is depressed, press the Lock button on the Smart Key to automatically fold the mirrors
- To lock position of mirrors, toggle switch to the left position
- The mirrors will automatically unfold when the Smart Key\* is within close proximity to the vehicle (if activated in User Settings)

Refer to section 4 in the Owner's Manual for more information.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

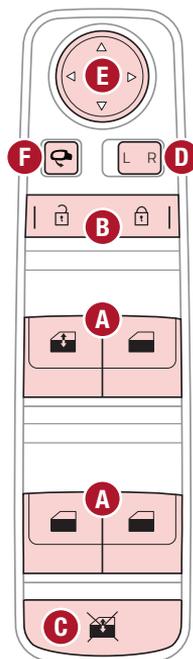

(Driver's Door)

Button configuration may vary depending on vehicle model.

## Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings on how to turn Auto Door Lock/Unlock ON/OFF.

Refer to section 4 in the Owner's Manual for more information.

## Heated Outside Mirrors\*

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. The Rear Window Defroster button\* is located on climate control system panel.


Refer to section 4 in the Owner's Manual for more information.

## Manual Folding Mirrors\*

To fold the mirrors manually, pull the mirror towards the window.

### QUICK TIP

If needed, pull the mirror firmly until it folds

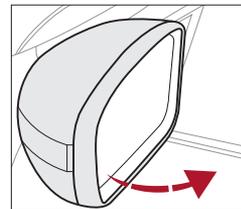

Refer to section 4 in the Owner's Manual for more information.

\*IF EQUIPPED

## Headlights & High Beams

### To operate:

- Rotate switch to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights/High Beams

**AUTO Light Position\*** — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

**Daytime Running Lights (DRL)\*** — DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:


- Headlights are on
- Parking brake is applied
- Engine is turned off
- Switch is in the DRL OFF position

**High Beam Assist (HBA)\*** — High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions. To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator will illuminate.

### REMINDERS:

- High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams
- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously

*For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 4 in the Owner's Manual for more information.*

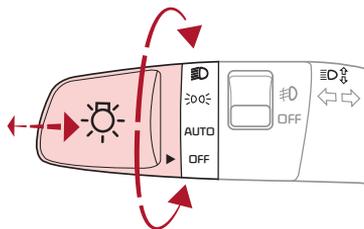


- AUTO** Auto Light / DRL\* / High Beam Assist\*
- Headlight position
- Parking light position
- OFF** OFF position

## Turn Signals & Fog Lights\*

### To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Slightly move lever up/down to activate One-Touch Lane Change Signal
- Fog Lights - Press switch **A** up/down to turn Fog Lights ON/OFF

**REMINDER:** Headlights must be ON for Fog Light operation.

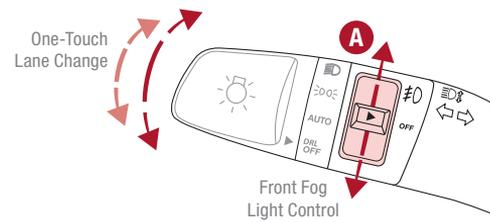

**One-Touch Lane Change Signal** is activated by briefly pressing the Turn Signal lever up/down slightly for less than 1 second and then releasing. The lane change signal will blink 3-7 times.

To change how many times the Lane Change Signal blinks (3/5/7), go to User Settings Mode in the LCD Instrument Cluster and select Lights, then One-Touch Turn Signal.

*Refer to section 4 in the Owner's Manual for more information.*


*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## Tilt/Telescoping Steering Wheel†24

To adjust the Steering Wheel, push down the Lock-Release Lever **A** and adjust to desired angle **B** and distance **C**. When finished, pull up the Lock-Release Lever **A** to lock Steering Wheel in place.

### QUICK TIP

It may be helpful to pull/push bottom of the Steering Wheel towards/away from you to adjust desired distance.

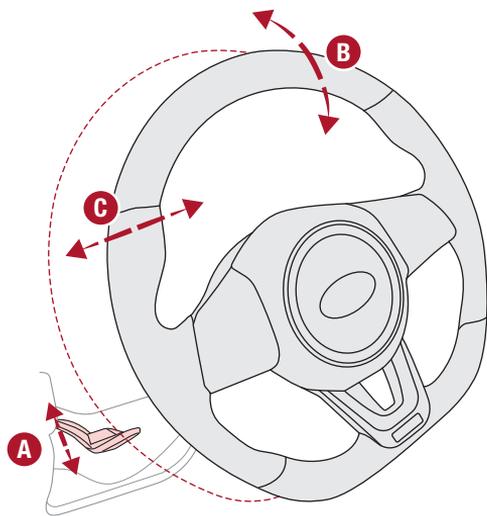

Refer to section 4 in the Owner's Manual for more information.

Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle.


Refer to section 5 in the Owner's Manual for more information.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

## Windshield Wipers & Washers

To operate:

- Move lever Up/Down to change Wiper modes
- Rotate switch to adjust Wiper mode
- Press INT switch up/down **D** to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

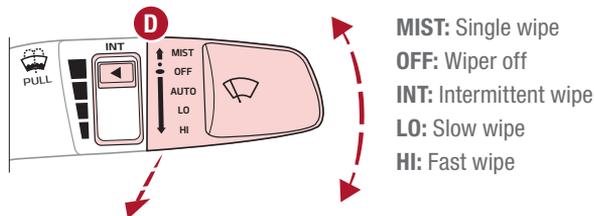

Refer to section 4 in the Owner's Manual for more information.


## Lifting Wipers (Wiper Service Mode)

To lift the windshield wipers to clean windshield, inspect or replace wiper blades or raise wipers in snow/ice conditions without damaging the hood, the blades need to be moved to the service position **E**.

With the ignition ON, turn the ignition OFF, and within 20 seconds move the wiper switch to the MIST position **D** and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.

Refer to section 7 in the Owner's Manual for more information.

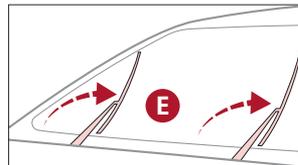

\*IF EQUIPPED

†LEGAL DISCLAIMERS ON BACK INSIDE COVER

### QR CODE

#### Lifting Wipers (Wiper Service Mode) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to the inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

### QUICK TIPS

- Rotating INT switch up increases Intermittent wipe frequency and wipe speed. Rotating INT switch down decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use

## Smart Cruise Control (SCC)\*†6,22

Smart Cruise Control (SCC) is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed.

When traffic is detected, the vehicle will slow down to maintain a set distance behind traffic without depressing the accelerator or brake pedal.

With SCC on and activated, the vehicle distance set, and the system detects a vehicle slowing or stopping, the system can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the RES+ button must be pressed to start moving the vehicle.

### To set/adjust the SCC speed:


- Push the Driving Assist **CRUISE** button **A** to turn system ON. The CRUISE indicator will illuminate on the instrument cluster
- Accelerate/decelerate to the desired speed
- Press RES+/SET- button **B** down to set the speed. Press the RES+/SET- button **B** up/down to increase/decrease the set speed. The SET indicator light, set speed and vehicle-to-vehicle distance will illuminate on the instrument cluster's LCD screen

**To adjust the sensitivity of SCC:** Press the Mode/Menu button on the Steering Wheel **C**. With the OK button, when in User Settings mode, select Driver Assistance, then SCC Reaction. Then select Slow, Normal or Fast.

**To set the vehicle distance:** Press the Vehicle Distance button **D** on the steering wheel. The image on the LCD screen **E** will change when scrolling through the settings. Each time the button **D** is pressed, the vehicle distance changes.

**To cancel SCC operation:** Press the CANCEL button **F** or the brake pedal. The CRUISE indicator on the instrument cluster will turn OFF.

**To turn SCC system OFF:** Press the Driving Assist **CRUISE** button **A**. The CRUISE indicator on the instrument cluster will turn OFF.

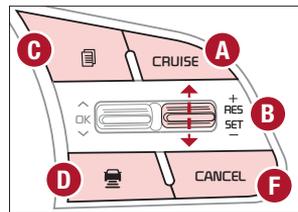

(Type B; Buttons located on right side of Steering Wheel)



(Distances are approximate and vary depending on vehicle speed)



(Display on LCD screen)

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## QR CODE

### Smart Cruise Control (SCC) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to the inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

*The SCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.*

## Smart Cruise Control (SCC)\*†6,22 (continued)

### QUICK TIPS

- To change the Cruise Control mode from SCC to standard Cruise Control, press and hold button **A** (previous page). Repeat to switch modes again (The SCC system must not be activated to change modes).
- For SCC to operate:
  - When no vehicle is in front, you must be traveling at a minimum speed of 20 mph
  - When following a vehicle, you must be traveling at a minimum speed of 6 mph
- When following a vehicle, the system can automatically adjust your cruise speed based on the vehicle detected in front.


### REMINDERS:

- If SCC is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), and various other conditions. See owner's manual for other conditions
- Keep the system off when not in use to avoid setting a speed which the driver is not aware of
- Cruise Control button must be ON in order to turn SCC ON/OFF
  - SCC is operating when driving above the speed of 6.0 mph
  - SCC is activated when ignition is turned on. Speed will need to be reset when ignition is cycled on
  - SCC remains ON when ignition is cycled. The speed setting will need to be reset when ignition is cycled
- In standard Cruise Control, the driver needs to manually assess the distance from other vehicles as the system will not apply brakes to slow down automatically
- If your vehicle speed is between 5–20 mph when you press the Driving Assist **CRUISE** button, the Smart Cruise Control speed will be set to 20 mph

Refer to section 5 in the Owner's Manual for more information.

## Cruise Control (CC)†22

- A Driving Assist CRUISE button:** Press to turn the Cruise Control ON/OFF
- B RES+ button:** Press up to resume, set speed or increase Cruising Speed  
**SET- button:** Press down to set or decrease Cruising Speed
- C CANCEL button:** To cancel Cruise Control, do one of the following:
  - Press the brake pedal
  - Press the CANCEL button
- D Switch modes:** To switch between standard Cruise Control and Smart Cruise Control, press and hold for more than two seconds

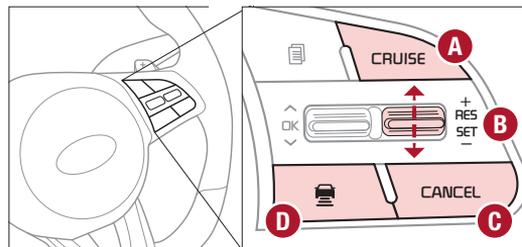


### QUICK TIPS

- Cruise Control is designed to function above 19 mph
- Cruise Control will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

**REMINDER:** Standard Cruise Control is a part of Smart Cruise Control (SCC) and can be set as the operating mode. To switch from SCC to standard Cruise Control, press and hold the SCC button (SCC must not be activated to change modes). Repeat to switch back to SCC mode.

## Bluetooth® Wireless Technology†5,22

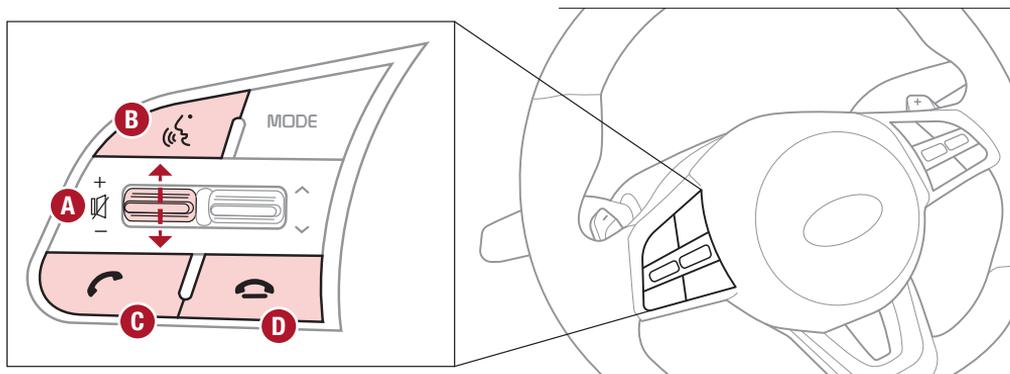

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

(Type B)

- A Volume button:** Press up/down to raise/lower speaker volume
- Mute button:** Press to mute the microphone during a call and to mute the audio system speakers, or to pause Bluetooth® streaming media
- B Talk button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition.
- UVO link with Navigation system\*** – When enrolled with a UVO link subscription, press this button to activate the UVO Voice Assist to use navigation guidance and search destinations

## QUICK TIP

When using the voice command feature, wait for the system BEEP before speaking the command.

- C Receive/Place Call button:** Press to receive/place calls. If no phone is paired, press button to pair a phone.
- D End Call button:** Press to end a call, reject an incoming call or cancel a function

## QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Phonebook transfer upload time varies by phone model and with number of phonebook entries
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*For more information, if equipped, refer to the Car Multimedia System User's Manual. For Bluetooth® Wireless Technology FAQs, go to [www.kia.com](http://www.kia.com), Owners section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.*

## Bluetooth® Wireless Technology<sup>†5,22</sup> (continued)

### Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

#### QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phonebook download and to allow acceptance of all future **Bluetooth®** connection requests.

### How to Place a Call

When using the voice command feature, waiting for the system BEEP before speaking the command. There are two options for placing a call using the Steering Wheel controls:

- Option 1: Press the Receive/Place Call button **C** (displays the call history)
- Option 2: Press the Talk button **B**. Then say the command "Call {name}" or Dial {number}

**REMINDER:** *Bluetooth®* Wireless Technology audio and calling functions are supported when connected to a *Bluetooth®* enabled device

### Voice Recognition\* and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, \*, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

#### QUICK TIPS

- The system may register or pair multiple *Bluetooth®* devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- *Bluetooth®* Music Streaming – If the *Bluetooth®* music is inaudible or too low, you may need to turn up the volume on the connected phone.
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C - Open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

#### QR CODE

### Voice Recognition Tips Video

To view a video on your mobile device, snap this QR Code or visit the listed website.


Refer to the inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Audio Controls<sup>†22</sup>

- E Audio MODE button:** Press to cycle through the FM/AM/SiriusXM®/Media modes  
**Audio System ON/OFF:** Press to turn power on; Press and hold to turn power off. Press and hold to go to Advanced Setting / Steering Wheel mode (UVO link with Navigation)
- F Seek/Presets button:**  
*Radio Mode (FM/AM/SiriusXM®\*)* - Press to advance through the Preset Stations. Press and hold to Auto Seek  
*Media Mode* - Press to move track forward/back. Press & hold to fast forward/rewind (except for *Bluetooth®* Audio)
- G Volume button:** Press up/down to raise/lower volume  
**Mute button:** Press to mute all audio (in some Media modes the media pauses when pressed)

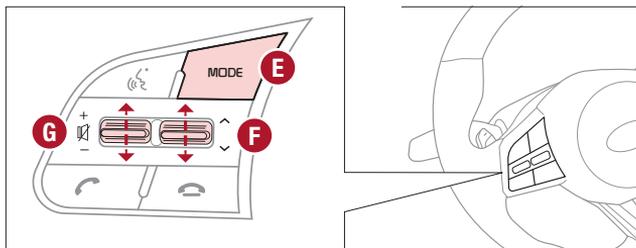

### QUICK TIP


Press and hold the Audio Mode button to turn the Audio Mode ON or OFF

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Your vehicle's steering wheel buttons may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.*

## Standard Audio System\* – FM/AM/Media (USB, Aux, *Bluetooth*<sup>®</sup>+5 Audio, My Music)\*

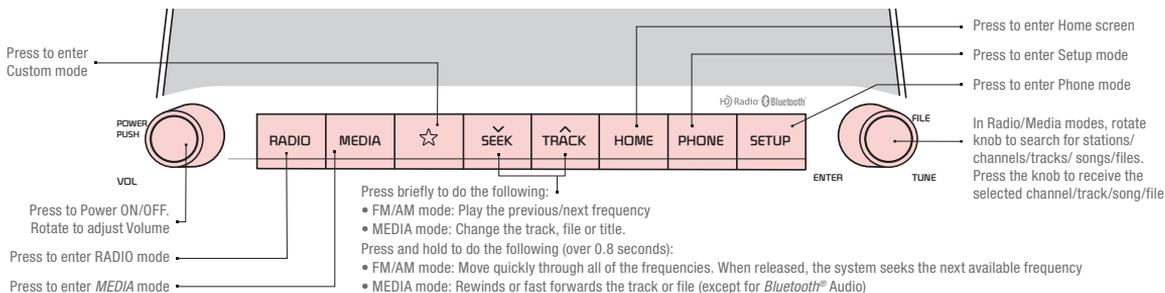

**Sound Settings:** To adjust the audio system sound settings:

1. Press the SETUP key on the audio head unit or the on-screen MENU button, when in MEDIA mode.
2. Select the on-screen SOUND button
3. Select the menu item (Position, Volume, Tone, Priority, Advanced, Default)
4. Use the onscreen buttons to adjust settings. Press the return button to save settings.

**Radio Presets:** You can listen to FM and AM radio and save frequently used stations. To save a Preset, press and hold the desired slot. This saves the current station in the selected slot.

**SiriusXM<sup>®</sup> Smart Favorites** – For the first ten favorite SiriusXM<sup>®</sup> channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose SiriusXM<sup>®</sup>, then select any of the first ten favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

**Custom Key ☆:** A programmable key to provide quick access to one of several available system features. To program the Custom Key, press and hold the Custom Key. Select one of the available features you would like the Custom Key to open.

**REMINDER:** Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionality has been modified while the vehicle is in Drive, Reverse or moved out of Park.

QR CODE

**Standard Audio System Videos:** To view a video on your mobile device, snap this QR Code or visit the listed website. See inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

QUICK TIPS

- Volume level between different audio modes:
  - When switching between audio modes (AM, FM, *Bluetooth*<sup>®</sup> Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to BT Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
  - When using *Bluetooth*<sup>®</sup> Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- When connected to Android Auto<sup>™</sup> or Apple CarPlay on your smartphone, the smartphone's navigation system may also be available
- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge
- Prolonged use of the audio head unit in ACC mode may drain the vehicle's battery

Your vehicle's audio system may differ from that in the illustration. For further audio system operation, refer to pages 22-28 or see your Car Infotainment System Quick Reference Guide.

## Android Auto™<sup>†3</sup> / Apple CarPlay®<sup>†4</sup> Setup\*

### Android Auto™\*

Setting up Android Auto™:

1. From an Android Auto™ compatible device, download the Android Auto™ app from the Google Play™ Store<sup>†11</sup>.
2. Open the Android Auto™ app and proceed with the on-screen instructions to complete setup on the mobile device.

How to start Android Auto™:

1. Press the SETUP key on your audio system's control panel.
2. Press the PHONE PROJECTION button  or DEVICE CONNECTION button, select Android Auto™ then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™.
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone.
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps.

For more information, refer to the Car Infotainment System Quick Reference Guide.

## UVO eServices Activation\*<sup>†1</sup> (Systems equipped with UVO eServices only)

1. Using a compatible smartphone to access your app store or marketplace, download the Kia UVO eServices app<sup>†1</sup>.
2. In your smartphone's settings, ensure that location services are enabled.
3. Using the Kia UVO eServices app<sup>†1</sup>, register for a new <https://owners.kia.com/> account
4. Follow the In Car Setup Instructions on the Kia UVO eServices app to complete the UVO eServices Activation. After entering your information and reviewing the terms and conditions, accept them to complete registration

### Apple CarPlay®\*

Setting up and starting Apple CarPlay®:

1. On the head unit, press the SETUP key.
2. Press the PHONE PROJECTION button  or DEVICE CONNECTION button, select Apple CarPlay® then select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®.
3. Connect the Apple CarPlay® compatible iPhone®<sup>†12</sup> with the vehicle's USB port using the manufacturer's cable provided with your iPhone
4. From the vehicle's home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

#### REMINDERS:


- Android Auto compatibility requirements: USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android smartphone and data and wireless plan for applicable feature(s).
- Apple CarPlay® compatibility requirements: Apple Lightning cable, latest iOS software, iPhone 5 or later and data and wireless plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Using an approved USB cable provided by your smartphone manufacture is recommended
- Using unapproved USB cables may cause a phone projection error or a system malfunction, black screen, no sound, disconnection, etc.
- Phone projection may not work due to a defect in the phone
- Ensure Apple CarPlay and Siri are enabled in your iPhone settings

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*

*For further UVO eServices/UVO link operation, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, refer to pages 22-28.*

## UVO eServices\*†1a

– FM/AM/SiriusXM™+20/Media (USB, Aux, Bluetooth®†5 Audio)

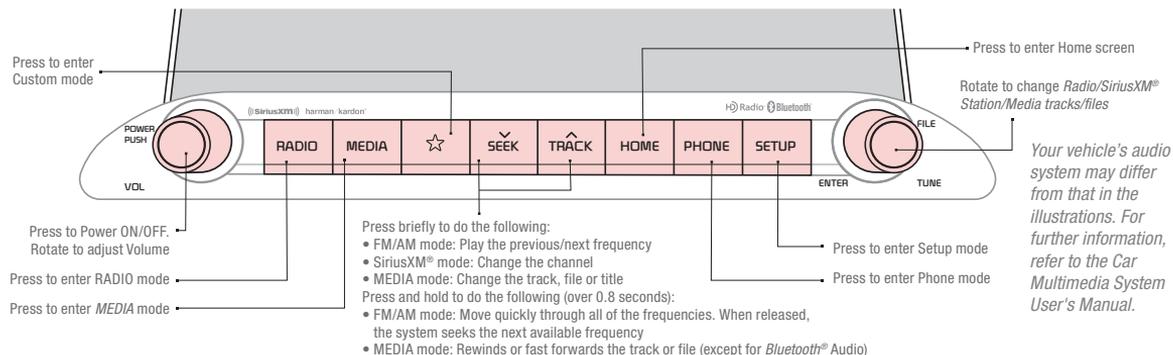

Your vehicle's audio system may differ from that in the illustrations. For further information, refer to the Car Multimedia System User's Manual.

### QR CODE

#### UVO eServices Videos

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to the inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

### To adjust the audio system sound settings:

1. Press the SETUP key on the audio head unit or the onscreen MENU button, when in MEDIA mode.
2. Select the onscreen SOUND button
3. Select the menu item (Position, Volume, Tone, Priority, Advanced, Default)
4. Use the onscreen buttons to adjust settings. Press the return button  $\Rightarrow$  to save settings.

**Radio Presets:** You can listen to FM, AM and SiriusXM® radio and save frequently used stations.

**How to Save a Preset:** Press and hold the desired slot. This saves the current station in the selected slot SiriusXM®.

**SiriusXM® Smart Favorites:** For the first ten favorite SiriusXM® channels, you may play live or repeat from the beginning of a song or a program segment. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

**Custom Key ☆:** A programmable key to provide quick access to one of several available system features. To program the Custom Key, press and hold the Custom Key. Select one of the available features you would like the Custom Key to open.

### QUICK TIPS

- The volume level for each source (FM, AM, SiriusXM®, USB, etc.) will revert to the previously set volume for that source
- Navigation may be available when connected to Android Auto or Apple CarPlay supported smartphones
- When using the voice command feature, wait for the system to BEEP before speaking the command
- At any time, you can interrupt Command Feedback by pressing the TALK button
- Prolonged use of the audio head unit in ACC mode may drain the vehicle's battery
- A warning screen may appear periodically to remind users that the UVO eServices should be operated when the engine is running to prevent battery discharge

**REMINDER:** Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

For further UVO eServices operation, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 22-28.

**UVO link Activation**\*†<sup>b</sup> (Systems equipped with UVO link only)

Follow these steps to activate your UVO link system:

1. Enter the activation screen on your vehicle's head unit:
  - a. Press SETUP key
  - b. Press UVO icon
  - c. Press Activate UVO
2. Read and agree to Terms of Service and Privacy Policy and press SUBMIT
3. Enter smartphone number or email address to receive a verification code, then press SUBMIT
4. Follow these steps to receive your verification code using your phone SMS or email:
  - a. Check your phone SMS or email for verification code
  - b. Open the link in your SMS or email. A page will open requesting that you create your account

**Note:** If you already have a Kia Owners Portal account using the phone number as your login ID, you will need to provide your password prior to receiving the verification code.


- c. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT. A page will open displaying your verification code.
- d. Enter the code in the head unit and press ACTIVATE
- e. Go back to the page with your verification code and press "I have entered my PIN". A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy.

**REMINDER:** This vehicle is not equipped with over-the-air system updates

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*

*For further UVO link operation, refer to the Car Infotainment System Quick Reference Guide.*

*For other audio system information, refer to pages 22-28.*

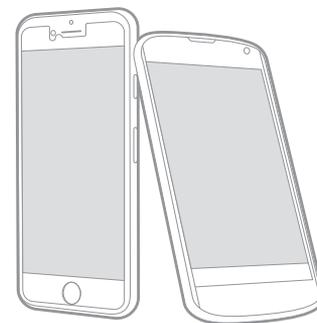

## Kia Access with UVO link App Download

Go to an app marketplace to download the new Kia Access with UVO link App. Once you download, make sure you register your vehicle and start an account (refer to UVO link Activation page). Get to know your new Kia and the available convenient features on the app.

### QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with a good wireless signal strength in order to use UVO. If these conditions are not met, voice commands may fail or take a long time to execute
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature at least 10 minutes before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within the 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- In order to preserve the vehicle battery, UVO will not turn on seven days after the last ignition was on. You will need to restart the vehicle with a key fob in order to use UVO again



## Kia Access with UVO link App Features Guide

The Kia Access with UVO link App Features Guide is a step-by-guide helping you utilize the app to its full potential by detailing how to set up and use each feature and adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Climate
- Schedule Charge
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles

*Kia App Screen for illustrative purposes only. Actual App screen and functionality may vary.*

*For further UVO link operations, refer to the Car Infotainment System Quick Reference Guide.*

### QR CODES


Download the **Kia Access with UVO link App** by clicking this dynamic QR code. Some phone's operating systems may need to be updated to scan dynamic QR codes.



Click this dynamic QR code to access the **Kia Access with UVO link App Features Guide**. Some phone's operating systems may need to be updated to scan dynamic QR codes



## UVO link with Navigation<sup>\*+1b,13</sup> – FM/AM/SiriusXM<sup>®+20</sup>/Media (USB, Aux, *Bluetooth*<sup>®+5</sup> Audio)

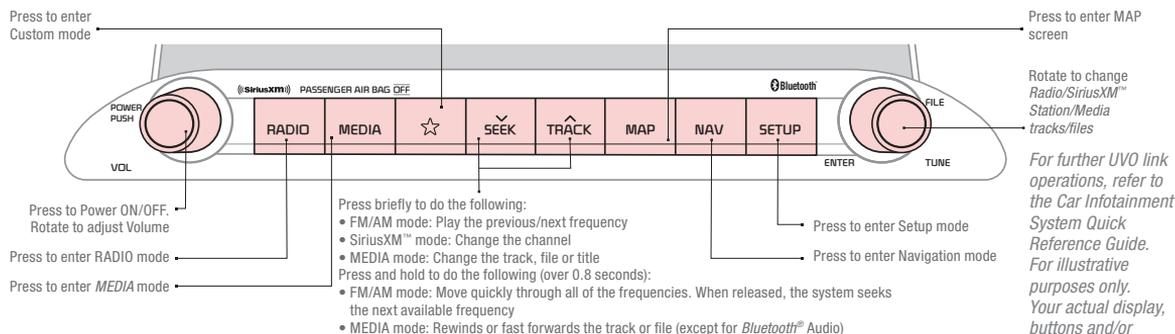

For further UVO link operations, refer to the *Car Infotainment System Quick Reference Guide*. For illustrative purposes only. Your actual display, buttons and/or features may vary.

### QR CODE

**UVO link with Navigation Video:** To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to the inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

**Sound Settings:** To adjust the audio system sound settings:

1. Press the SETUP key on the audio head unit or the on-screen MENU button, when in MEDIA mode.
2. Select the on-screen SOUND button
3. Select the menu item (Position, Volume, Tone, Priority, Navigation, Advanced, Default)
4. Use the onscreen buttons to adjust settings.

**Radio Presets:** You can listen to FM, AM and SiriusXM<sup>™</sup> radio and save frequently used stations.

**How to Save a Preset:** Press and hold the desired slot. This saves the current station in the selected slot SiriusXM<sup>™</sup>

**SiriusXM<sup>®</sup> Smart Favorites:** For the first ten favorite SiriusXM<sup>™</sup> channels, you may play live or repeat from the beginning of a song or a program segment. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

**Custom Key ☆:** A programmable key to provide quick access to one of several available system features. To program the Custom Key, press and hold the Custom Key. Select one of the available features you would like the Custom Key to open.


For other audio system information, refer to pages 22-27.

### QUICK TIPS

- Volume level between different audio modes:
  - When switching between audio modes (AM, FM, *Bluetooth*<sup>®</sup> Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to BT Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
  - When using *Bluetooth*<sup>®</sup> Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- When connected to Android Auto<sup>™</sup> or Apple CarPlay<sup>®</sup> on your smartphone, the device's navigation system may also be available
- At any time, you can interrupt the Voice Command Feedback: Press the TALK button on the steering wheel
- Prolonged use of the navigation system in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- When using the voice command feature, wait for the system BEEP before speaking the command

**REMINDER:** Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functions have been modified while the vehicle is in Drive, Reverse or moved out of Park.

## Aux / Multimedia USB Ports, Power Outlets & USB Charger Ports\*

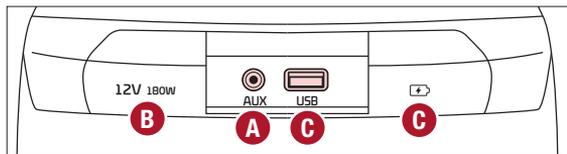

(Ports and power outlets located on lower part of Center Panel; power outlets may be configured differently on your vehicle)

### Aux / Multimedia USB Port\* **A**

Use the Aux port to connect audio devices and the Multimedia USB port to connect USB audio devices and smartphones.

### Power Outlets **B**

Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

### USB Charger Ports\* **C**

Devices can be recharged using a USB cable. The Engine Start/Stop button needs to be in the ACC/ON/START position to operate the USB Charger Port.

#### QUICK TIP

- The power outlets are inactive when ignition is in the OFF position
- The USB data port (Multimedia USB port) is located next to the Power Outlets. The USB Charger Ports do not support data transfer
- The Multimedia USB Port in the center panel charges slower than the USB Charger Ports throughout the vehicle

#### REMINDERS:

- Using the power outlets (accessory plugs) for prolonged periods of time, with the Engine Start/Stop button in the ACC position (Engine OFF) may cause the battery to discharge
- Use only the charging cables that your device manufacturer supplied. Third party cables may cause damage to your device

For more information on the Aux / Multimedia USB Port, Power Outlets & USB Charger Ports, refer to section 4 in the Owner's Manual.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

## Digital Clock


Press the SETUP key on the audio head unit, then press the onscreen Date/Time button to enter the clock settings. Then use the onscreen buttons to navigate through setup and return to exit.

#### QUICK TIPS

- When needed, Daylight Savings must be enabled in the Clock Settings screen
- To access the manual date and time setting, turn GPS Time OFF in the Clock Settings (UVO link with Navigation\* function only)

For more information, refer to the Car Multimedia System User's Manual (UVO eServices) or the Car Infotainment System Quick Reference Guide (Standard Audio System or UVO link with Navigation).

## Automatic Climate Control\*

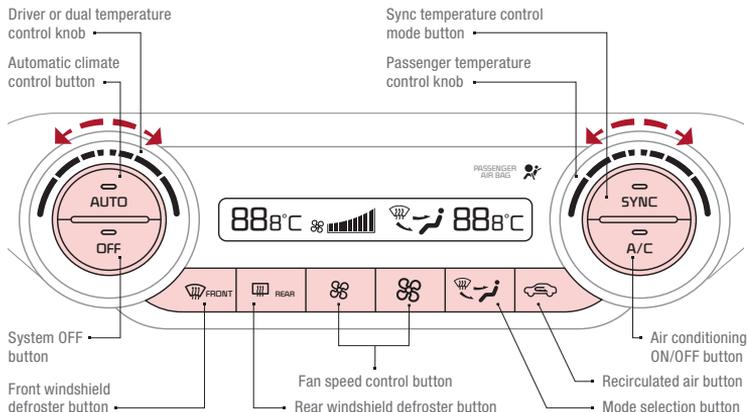

### Climate Control Auto Function:

1. Press **AUTO** to select Full Auto Operation – The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Set desired **Temperature**
3. Rotate Passenger Temperature knob to select Dual Temperature Control Operation

### QUICK TIPS

- Defrost Mode activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, airflow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

Your Automatic Climate Control system may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.

### Auto Defogging System:

Auto Defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default. To cancel Auto Defogging, press the Front Defrost button for three seconds, when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button for three seconds.

### Defrost Outside Windshield:

1. Set Temperature to Hot
2. Press the Front Defrost button

### Defog Inside Windshield:

1. Set Fan Speed to highest position
2. Set Temperature to highest position
3. Press the Front Defrost button

### Air Flow Modes:

To select Air Flow Modes, press the Mode selection buttons:



### QR CODE

#### Auto Defogging System Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to the inside cover for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

### REMINDERS:

- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control or SYNC Temperature Control
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display

\*IF EQUIPPED

## Manual Climate Control\*

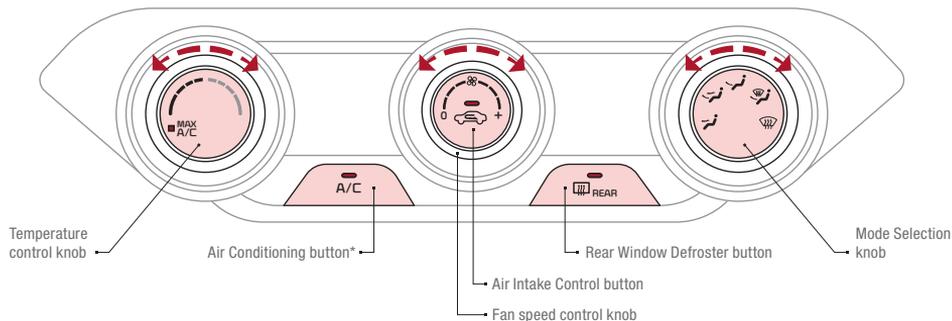

### Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Press the **Front Defrost** button

Your Manual Climate Control system may differ from those in the illustrations.

Refer to section 4 in the Owner's Manual for more information.

### QUICK TIPS

- Defrost mode activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- Keep inside glass as clean as possible to reduce window fogging
- MAX A/C mode automatically engages Recirculated Air

### Defog Inside Windshield:

1. Set **Fan Speed** to desired position
2. Set desired **Temperature**
3. Press the **Front Defrost** button

### REMINDERS:

- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility

### Air Flow Modes

To select Air Flow Modes, press the Mode selection buttons:



- Face-Level
- Bi-Level
- Floor-Level
- Floor/Defrost-Level
- Defrost-Level

## Automatic Gear Shift with Sportmatic<sup>†21</sup> Shifting\*

- P: Park
- R: Reverse
- N: Neutral
- D: Drive
- [+]: Manual Mode Upshift
- [-]: Manual Mode Downshift

**Manual Mode:** To enter Manual Mode, move shift lever from D to left gate **A**.

To shift while in Manual Mode, move shift lever up [+] to upshift or down [-] to downshift **A**.

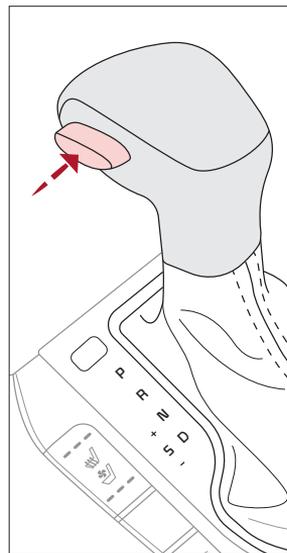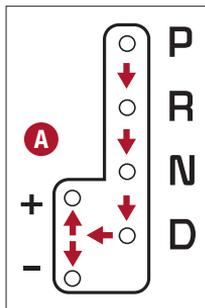

### QUICK TIPS

- Press brake pedal and depress release button to move gearshift from N to P, N to R or from P to any gear
- Manual Mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

### REMINDERS:


- When in P (Park), if the Release button is not pressed while shifting, the transmission does not shift
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the power liftgate lid control, turn off the auto rain sensing wipers and fold in the mirrors

## Paddle Shifters\*

Paddle Shifters are operable when the shift lever is moved into the left gate of the D position (Manual mode).

**Paddle Shifting:** Pull the [+] or [-] paddle shifter once to shift up or down one gear.

**REMINDER:** When in Manual mode, pulling the left and right paddle shifters at the same time will NOT shift gears.

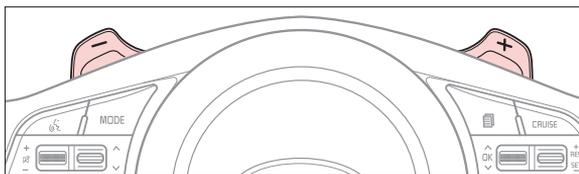

For illustrative purposes only. Your actual display, buttons and/or features may vary.

### QR CODE

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to the inside cover for more information.

#### Sportmatic Shifting Video



#### Paddle Shifters Video






[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

Refer to section 5 in the Owner's Manual for more information.

## Manual Gear Shift\*

### Starting the Engine

1. Apply Parking Brake **A**
2. Fully depress Clutch and Brake Pedals **B**
3. Shift into Neutral **C**
4. Turn Ignition to Start/ON

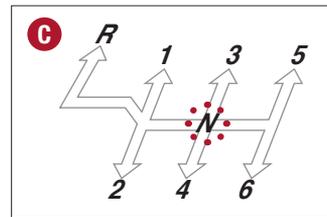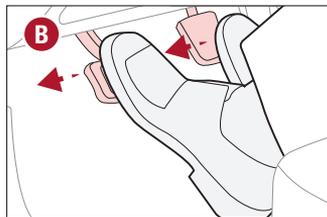
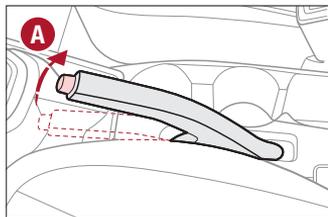


### Shifting into Reverse

1. Fully depress Clutch and Brake Pedals **B**
2. Shift into Neutral **C**
3. Press Shift Lever button **D** in
4. Shift into Reverse **E**

#### QUICK TIP

When shifting into gears 1-6, the Shift Lever can be moved without pulling the Shift Lever button.

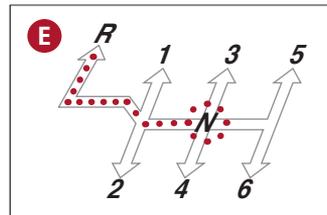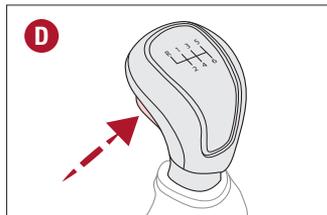

*For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 5 in the Owner's Manual for more information.*

## Wireless Smartphone Charging System\*

1. Enable Wireless Charging in the User Settings mode, select Convenience then Wireless Charging System
2. Slide open tray cover\*
3. Place compatible smartphone on the center of the charging pad **A**
4. All doors must be closed
5. Indicator light **B** may change to amber once the wireless charging begins
6. Once charging is complete, the amber light may change to green

### QUICK TIPS


- Wireless charging must be enabled in user settings
- For wireless charging to occur, all doors (excluding trunk) must be closed & the Smart Key Fob must be detected inside the vehicle
- For best results, place smartphone on the center of the charging pad
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging as to not impede the charging area

### REMINDERS:

- If driver door is opened, charging will be disabled
- The smartphone must be compatible with Qi charging in order to wirelessly charge
- Avoid placing other metal items in the bin while charging as to not impede the charging area
- Wireless charging technology allows for a device to be charged using inductive charging. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- Inductive charging systems are less efficient than conventional charging through a cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance: Device position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate include foreign objects, such as coins or pens, and phone case thickness

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 4 in the Owner's Manual for more information.*

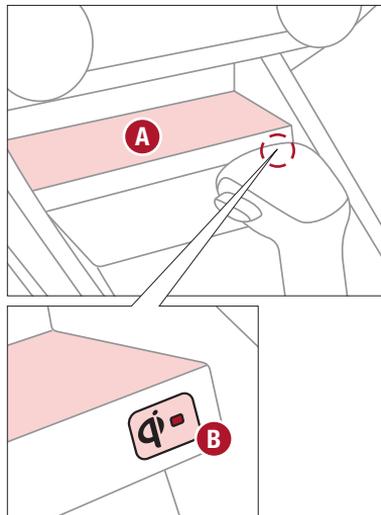

### QR CODE

#### Wireless Charging Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to the inside cover for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Rear View Monitor (RVM) †6

Rear View Monitor is a supplemental system that displays the view behind the vehicle through the audio head unit screens while the vehicle is in Reverse.

Rear View Monitor activates when the:

1. Engine is ON
2. Gear Shift Lever is in the R (Reverse) position

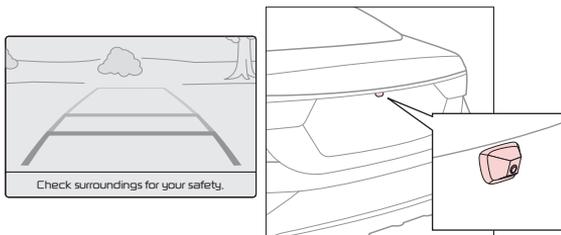

### REMINDERS:

- Always drive carefully and use caution when backing up
- Through normal use and after inclement weather or washing, the rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens
- While Rear View Monitor is active the volume will be lowered on all audio modes

*Rear View Monitor is not a substitute for proper and safe backing-up procedures.*

*Rear View Monitor may not display every object behind the vehicle.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*


*Refer to section 4 in the Owner's Manual for more information.*

## Reverse Parking Distance Warning (PDW)\*†6

Reverse PDW is a supplemental system that is designed to assist the driver by chiming if an object is detected within the sensing area to the rear and side of the vehicle when backing up. When the ignition is ON, the system is activated, while the vehicle is in Reverse.

### REMINDERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

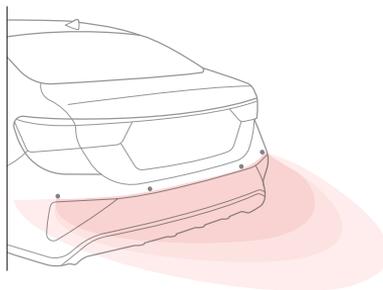

*The Reverse Parking Distance Warning (PDW) is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Reverse Parking Distance Warning (PDW) may not detect every object behind the vehicle.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 4 in the Owner's Manual for more information.*


## 6-Way Manual Adjustable Driver's Seat\*†17

Pull lever **A** to slide Seat forward/backward.

Pull lever **B** up several times to raise Seat Height.

Push lever **B** down several times to lower Seat Height.

Pull lever **C** to adjust Seatback Recline.

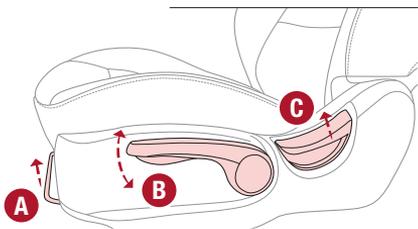

### QUICK TIP

When adjusting the seat forward or backwards, ensure the seat clicks or locks into place before driving the vehicle.

*Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.*


*For more information on 6-Way Manual Adjustable Driver's Seat operation, refer to section 3 in the Owner's Manual.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## Seat Warmers\*†19 / Ventilated Seats\*

**Seat Warmers button** - Press the button once for high setting (3 LEDs lit). Press the button twice for medium setting (2 LEDs lit).

Press the button a third time for low setting (1 LED lit) and again to turn OFF. Hold button to turn off Seat Warmer.

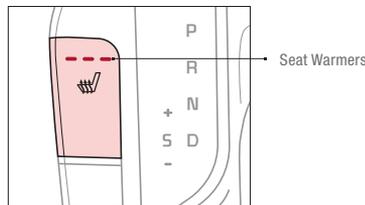


(Buttons located near Gear Shift Lever)

**Seat Warmers / Ventilated Seats\* button** – Press top/bottom of button once for high setting (3 LEDs lit).

Press button twice for medium setting (2 LEDs lit).

Press a third time for low setting (1 LED lit) and again to turn OFF. Hold button to turn off the Seat Warmers / Ventilated Seats.

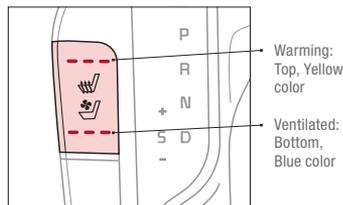

(Buttons located near Gear Shift Lever)

Refer to section 4 in the Owner's Manual for more information.

### QR CODE

#### Heated and Ventilated Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to the inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)



### QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF when ignition is cycled

**REMINDER:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

## 10-way Power Adjustable Driver's Seat\*†17

Move/Press controls to adjust Seat forward/backward, Seat Cushion height, Seatback recline and Lumbar support\* forward/backward.

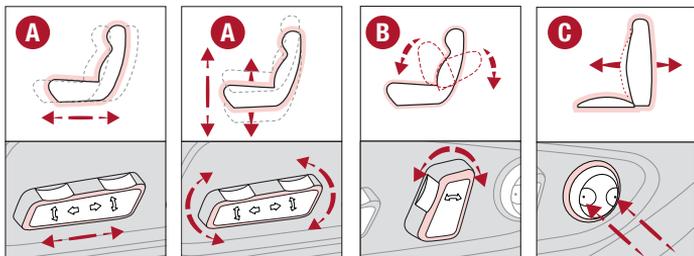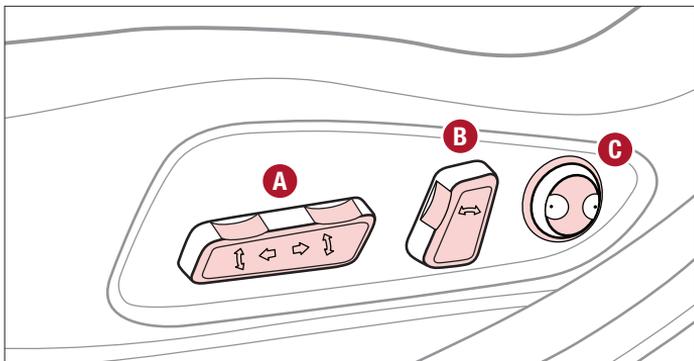

Seat forward/  
backward

Seat Cushion

Seatback

Lumbar

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle. Refer to section 3 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

## Front Seat Headrest Adjustment†10

**To raise Headrest:**


Pull Headrest up.

**To lower Headrest:**

Press lock, then press the Headrest down.

### QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath

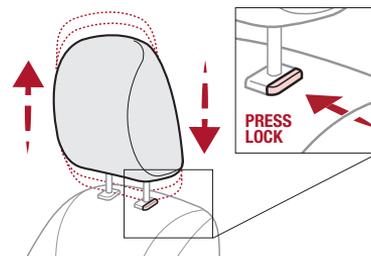

### REMINDERS:

- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident
- The headrest only moves up and down as described above. It does not adjust forward or backward
- Button may be hard to see if headrest is in its lowest position

Refer to section 3 in the Owner's Manual for more information.

## Folding Rear Seats



1. Adjust the Front Seatback to the upright position and/or slide the Front Seat forward
2. Lower Rear Headrests to the lowest position
3. Pull Seatback Lock Release Lever **A** to release Rear Seatback (Lever located in trunk)
4. Fold Seatback **B** down
5. To return seat back, push back to its original position and ensure it latches

### QUICK TIP

It may be necessary to remove the headrests and/or adjust the front seatbacks to fully lower rear seats

**REMINDER:** Always make sure the Seatback is locked in place when unfolded.

*For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 3 in the Owner's Manual for more information.*

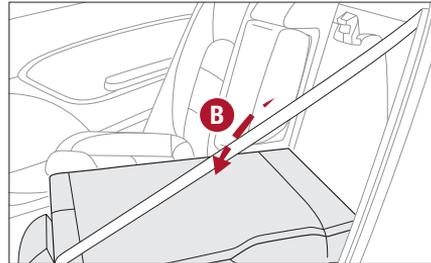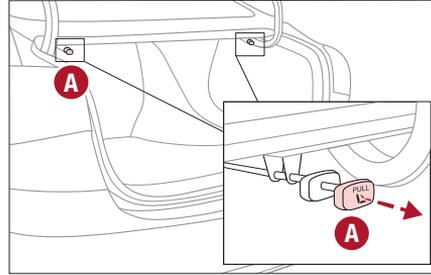

## Map/Room Lamps\*

### Map/Personal Lamp

Push the lens **B** to turn the map/personal lamp ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

### Map/Personal Lamp switch **C**

**DOOR** – In the DOOR position, the lamp turns on when any door is opened.

**ON** – In the ON position, the lamps stay on continuously.

**OFF** – In the OFF position, the lamp is off even if the door is opened.

### Room Lamp switch **D**

Press the switch to turn Room Lamp ON/OFF.

If vehicle is not equipped with Map Lamp, the Room Lamp will operate as follows:

- The lamp turns ON when any door is opened, and turns OFF after 30 seconds
- The lamp turns ON, when doors are unlocked with a key fob or Smart Key
- The lamp stays ON continuously when the ignition is in the ON position and a door is open
- The lamp stays ON for about 20 minutes when the ignition is in the ACC or LOCK/OFF position and a door is open

### QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

## Sunroof Operation\*

The Sunroof and Sunshade operation is controlled through a multi-directional switch/lever, and the ignition needs to be in the ON position to operate the Sunroof/Sunshade.

### Slide the Sunshade and Sunroof:


- Auto Open: Slide lever **A** backward to the farthest position and release.
- Auto Close (Sunroof only): Slide the lever **A** forward to the farthest position and release.

### Slide the Sunroof (with Sunshade open):

- Open: Press the Sunroof lever **A** backward and press again forward/backward until you reach the desired detent position (manual slide feature).
- Close: Press the Sunroof lever **A** forward and press again forward/backward until you reach the desired detent position (manual slide feature)

### Tilt the Sunroof:

- Raise: Push lever **A** upward.
- Lower: Push lever **A** forward.

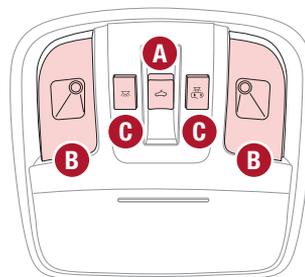

*For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 4 in the Owner's Manual for more information.*

### QR CODE

#### Sunroof Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to the inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

### QUICK TIP

To stop the Sunroof at any position, push or pull the Sunroof control lever in any direction.

### REMINDERS:

- Sunshade needs to remain OPEN while Sunroof is open and vehicle is moving
- Sunshade cannot slide when the sunroof is in the tilt position or tilt while in an open or slide position
- Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle

## Smart Key\*†9

### Smart Key Fob:

- A** Press to lock All Doors; Press twice within 2 seconds to sound the horn
- B** Press to unlock Driver's Door; Press twice within 4 seconds to unlock All Doors
- C** Press and hold to open Trunk. Then lift lid by the handle to manually open Trunk.

#### REMINDERS:

- Trunk lid will partially open. To fully open, lift up manually
- The Trunk unlocks when the Smart Key is within close proximity of the vehicle
- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
- E** Press to release Mechanical Key

### Driver's Door Lock/Unlock button **F**:

- Press button once to unlock Driver's Door
- Press again within 4 seconds to unlock All Doors
- Press again to lock All Doors

**REMINDER:** Remote button configuration may vary depending on vehicle options



### Mechanical Key **G**:

- Use to unlock Driver's Door (To remove keyhole cover, insert Mechanical Key into dent under cover and pull door handle)
- Use to turn the Child-Protector Rear Door Locks on or off

**REMINDER:** When reinserting the mechanical key, make sure it is pushed all the way in until there is a click sound.

*For more information on the Mechanical Key, please refer to section 4 in the Owner's Manual.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

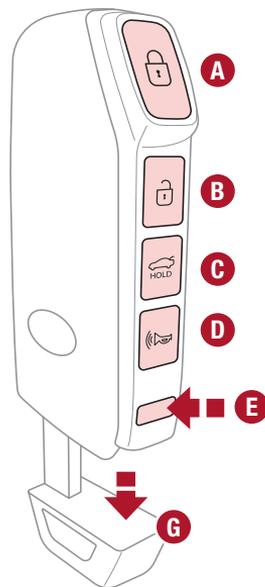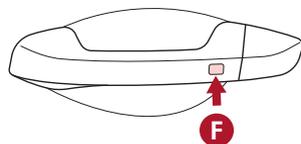

#### QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately

#### QR CODE

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to the inside cover for more information.

#### Engine Start/Stop Button & Smart Key Video




#### Kia Key Fob Video



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Remote Keyless Entry\* (folding key) (Type A)

- A** Press the release button to release the key
- B** Press to lock all doors; Press twice within two seconds to sound the horn
- C** To unlock Driver's Door, press once. Press twice within 4 seconds to unlock All Doors
- D** Press and hold more than 1 second to unlock Trunk\*
- E** Press and hold more than 1 second for Panic Alarm\*. To turn off Alarm, press any button

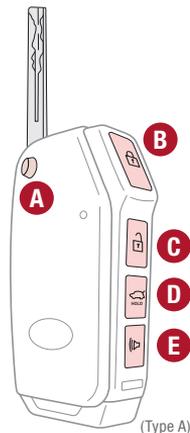


**REMINDER:** Remote button configuration may vary depending on vehicle options.


Refer to section 4 in the Owner's Manual for more information.

## Double-Turn Lock/Unlock All

- To remove keyhole cover, insert Mechanical Key into opening under cover and pull door handle
- Turn clockwise once to unlock Driver's Door
- Turn clockwise again within 4 seconds to unlock All Doors
- Turn counterclockwise once to Lock All Doors

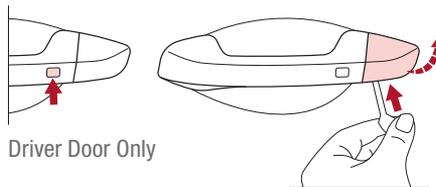

Driver Door Only

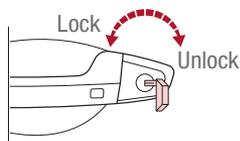

Refer to section 4 in the Owner's Manual for more information.

## QR CODE

### Kia Key Fob Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to the inside cover for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)



## Smart Power Trunk\*†15

### Smart Key:

To open the Smart Power Trunk, press and hold the Trunk button **A** until the Trunk begins opening.

### Outside the Vehicle:

To open the Trunk, press the Trunk Release button **B**.

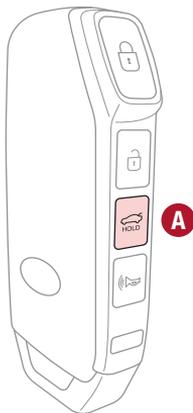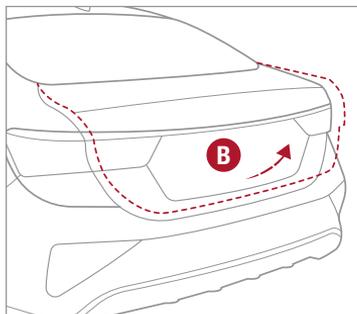

### Smart Power Trunk\*

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Trunk is about to open. Then the alert system will blink and chime two additional times before opening the Trunk.

The Smart Power Trunk feature is off by default. To enable the Smart Power Trunk, go to User Settings in the LCD Instrument Cluster modes.

#### QUICK TIP

During the Smart Power Trunk alert, the Trunk can be deactivated with the Smart Key by pressing any button on the key fob.

#### REMINDERS:

- The trunk can be opened with no-touch activation after about 15 seconds of all doors being closed and locked
- The Smart Trunk feature will not operate when:
  - The doors are recently closed and locked, and the Smart Key is still detected near the vehicle after 15 seconds or within 60 inches of the door handles
  - A door is not locked or closed
  - The Smart Key is in the vehicle
- The Smart Key must be outside of the vehicle for the Smart Trunk to operate
- Press any button on the Smart Key fob during the Detect and Alert stage to deactivate the Smart Trunk function.
- Ensure obstacles and people are out of the way of the Smart Trunk


For more information on the Smart Trunk operation, please refer to section 4 in the Owner's Manual.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

## Hood Release Lever and Latch

### Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, pull the secondary Latch **B** to the left inside of the Hood's center and lift the Hood

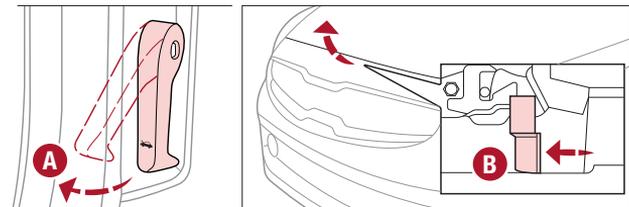

### Closing the Hood:

Lower the Hood by pressing the front center of the Hood. Then, press down to securely lock in place.

#### REMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in the P (Park) position and setting the parking brake

 
Refer to section 4 in the Owner's Manual for more information.

## Sunvisor†23

Use the Sunvisor to shield direct light through the front or side windows.

#### REMINDERS:

- Sunvisor may not shield all direct light
- Do not operate the vehicle if Sunvisor is impairing your visibility
- Be aware of seating position when adjusting or swinging Sunvisor around to or from the front or side windows
- Sunvisor may impair visibility if not adjusted properly




Refer to section 4 in the Owner's Manual for more information.

## Trunk Release Lever and Button\*

**Trunk Release Lever C** - To unlock the trunk from inside the vehicle, lift the Trunk Release Lever and manually open the trunk.

**Trunk Release Button\* D** - Press the Trunk Release Button and manually pull the trunk lid up (vehicles with Smart Key only).

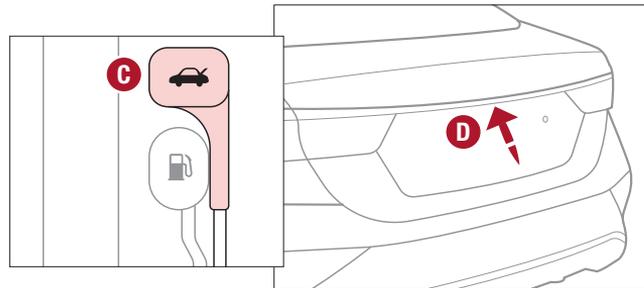

(Type A; Located under the trunk lid)


#### QUICK TIPS

- The Trunk must be unlocked before it can be opened by the Trunk Release Button
- Smart Key\* - The Trunk unlocks automatically, and can then be opened manually when the Smart Key fob\* is within close proximity to the vehicle

Refer to section 4 in the Owner's Manual for more information.

## Fuel Filler Lid Release Lever

From inside the vehicle, pull the lever **A** up to unlock and open the Fuel Filler Lid.

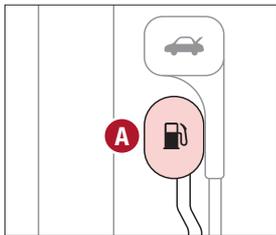

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*


*Refer to section 4 in the Owner's Manual for more information.*

## Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

### REMINDERS:

- The Fuel Door Release Lever is located on the lower part of the driver's door sill
- It is normal to hear one click when tightening and for the Fuel Cap to click back when released

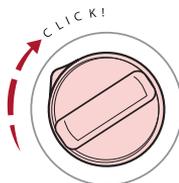


*Refer to section 4 in the Owner's Manual for more information.*

## Tire Mobility Kit\*

The Tire Mobility Kit is designed to temporarily seal certain types of tire damage, enabling you to drive to the nearest service center. As a result, not all types of tire damage will require towing.

For operational information, please refer to section 6 of your Owner's Manual.

- B** Sealant Bottle
- C** Compressor

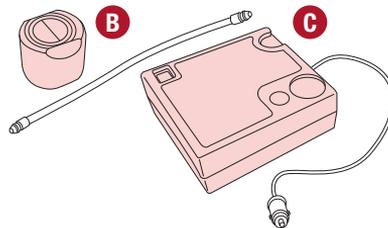

### QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if a tire is damaged beyond repair

### REMINDERS:

- The Tire Mobility Kit requires the use of the 12V/15A/180W Power Outlet, which is located on the right side of the outlet/aux port area
- After the tire is properly sealed, drive cautiously, keeping vehicle speed below 50 mph and driving no more than 120 miles.

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 6 in the Owner's Manual for more information.*

### QR CODE

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to the inside cover for more information.

#### Kia Key Fob Video



#### Tire Mobility Kit Video




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Seat Belts†2,18

### To properly fasten your Seat Belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**

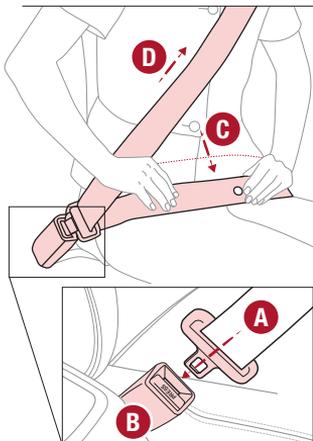

#### QUICK TIP

The Seat Belt warning chime operates for the driver's seat only.

**REMINER:** For maximum protection, always wear your seatbelt.

### Seat Belt Retractor Locks

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seat belt retractors will automatically lock the belts to reduce the risk of injury.

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



*Refer to section 3 in the Owner's Manual for more information.*

## Child-Protector Rear Door Locks

Locate these locks on the rear edge of the rear passenger doors. Move the Child-Protector Rear Door Lock located on the rear edge of the rear passenger doors to the lock position (LOCK) to disable the inner door handles from opening the rear doors .

**REMINER:** Child-protector rear door lock is located on rear passenger door jamb.

*Refer to section 4 in the Owner's Manual for more information.*

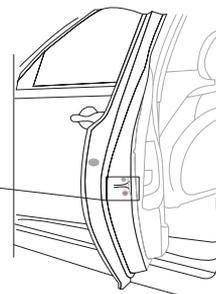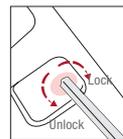

## Occupant Detection System (ODS) / Passenger Airbag Off Indicator†2,14

ODS is designed to detect the presence of the front passenger. Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the Passenger Airbag Off light **E** will illuminate.



(Located above Climate Control panel)

**REMINER:** Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

For more information on the Occupant Detection System / Passenger Airbag Off Indicator, please refer to section 3 in the Owner's Manual.

(up to 60,000 miles)<sup>A</sup> For Non-Turbo maintenance, see back cover

	MAINTENANCE INTERVALS (MILES)									
MAINTENANCE ITEMS - TURBO	6,000	12,000	18,000	24,000	30,000	36,000	42,000	48,000	54,000	60,000
Add fuel additive <sup>C</sup>	P	P	P	P	P	P	P	P	P	P
Rotate tires	P	P	P	P	P	P	P	P	P	P
Engine Oil & Oil Filter	R	R	R	R	R	R	R	R	R	R
Climate control air filter	R	R	R	R	R	R	R	R	R	R
Battery condition	I	I	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I	I	I
Suspension ball joints and mounting bolts	I	I	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I	I	I
Intercooler, in/out hose, air intake hose	I	I	I	I	I	I	I	I	I	I
Air cleaner filter	I	I	I	R	I	I	I	R	I	I
Cooling System	I	I	I	I	I	I	I	I	I	I
Brake fluid	I	I	I	I	I	I	I	I	I	I
Driveshaft and boots		I		I		I		I		I
Fuel tank air filter <sup>†D</sup>		I		I		I		I		I
Parking brake (hand type)		I		I		I		I		I
Vapor hose and fuel filler cap		I		I		I		I		I
Manual transmission fluid <sup>†E</sup>				I		I		I		I
Dual clutch transmission fluid <sup>†E</sup>	Every 37,500 miles									
Fuel lines, hoses and connections				I				I		
Spark Plugs							R			
Valve clearance <sup>F</sup>										I
Drive belts (First 60,000 miles, then every 12,000 miles) <sup>§</sup>										I

**QUICK TIP** Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO eServices / UVO link account by logging into your UVO eServices / Kia Access with UVO link App or your account on <https://owners.kia.com/> (Vehicles equipped with UVO eServices / UVO link only – See pages 24-26 for setup information).

- A. See the Owner’s Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule.
- B. And, if necessary, adjust, correct, clean or replace.
- C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.
- D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

- E. Manual transmission fluid (or Dual clutch transmission (DCT) fluid) should be changed anytime the transmission has been submerged in water.
- F. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.
- G. The drive belt should be replaced when cracks occur or tension is reduced excessively.

See your Owner’s Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

† If equipped.





# LEGAL DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

**Safety Features:** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

- 1. UVO eServices:** Purchase of certain new Kia vehicles includes complimentary access to UVO eServices (length of access period varies by vehicle model, trim and model year) starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary three-year term of UVO eServices expires, your access to UVO eServices may immediately terminate. Use of UVO eServices is subject to agreement to the UVO Privacy Policy (available at <https://owners.kia.com/us/en/privacy-policy.html>) and Terms of Service (available at <https://owners.kia.com/us/en/terms-of-service.html>). UVO eServices transferable to subsequent owner during the original UVO eServices service term. Only use UVO eServices when safe to do so. UVO eServices App is available from the App Store<sup>®</sup> or Google Play<sup>™</sup> Store. Kia Motors America, Inc. reserves the right to change or discontinue UVO eServices at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO eServices features may vary by make, model year and trim level. Features and specifications are subject to change. For more on details and limitations, visit <https://owners.kia.com> or your authorized Kia dealer. Google and logos are trademarks of Google, Inc. App Store is a service mark of Apple, Inc.
- 1b. UVO link:** Purchase/lease of certain 2020 and newer Kia vehicles with UVO link includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year UVO link subscription expires, continued access to the full suite of UVO link available on your Kia will require a paid subscription at the then current subscription rate or your use of certain UVO link features may immediately terminate. Use of UVO link is subject to agreement to the UVO Privacy Policy (available at <https://owners.kia.com/us/en/privacy-policy.html>) and Terms of Service (available at <https://owners.kia.com/us/en/terms-of-service.html>). UVO link is transferable to subsequent owner during the original UVO link service term. Only use UVO link when safe to do so. Kia Access with UVO link App is available from the Apple<sup>®</sup> App Store<sup>®</sup> or Google Play<sup>™</sup>. Kia Motors America, Inc. reserves the right to change or discontinue UVO link at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO link features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit <https://owners.kia.com> or your authorized Kia dealer. Apple and App Store are registered trademarks of Apple Inc. Google and logos are trademarks of Google, LLC.
- 2. Airbags:** For maximum protection, always wear your seat belt.
- 3. Android Auto<sup>™</sup>:** Vehicle user interface is a product of Google and its terms and privacy statements apply. Requires the Android Auto app on Google Play and an Android compatible smartphone running Android<sup>™</sup> 5.0 Lollipop or higher. Data plan rates apply. Android Auto is a trademark of Google LLC.
- 4. Apple CarPlay<sup>®</sup>:** Apple<sup>®</sup> and Apple CarPlay<sup>®</sup> are trademarks of Apple, Inc., registered in the U.S. and other countries. Apple CarPlay<sup>®</sup> runs on your smartphone cellular data service. Normal data rates will apply.
- 5. Bluetooth<sup>®</sup> Wireless Technology:** The *Bluetooth*<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A *Bluetooth*<sup>®</sup> enabled cell phone is required to use *Bluetooth*<sup>®</sup> wireless technology.
- 6. Driver Assist Features – Blind-Spot Collision Warning (BCW), Rear Cross-Traffic Collision Warning (RCCW), Lane Keeping Assist (LKA), Lane Departure Warning (LDW), Rear View Monitor (RVM), Reverse Parking Distance Warning (PDW), Smart Cruise Control (SCC), Forward Collision-Avoidance Assist (FCA):** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- 7. Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- 8. Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- 9. Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
- 10. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- 11. Google Play<sup>™</sup> Store** is a trademark of Google, Inc. ©2020 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.
- 12. iPhone<sup>®</sup>:** iPhone is a registered trademark of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- 13. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- 14. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
- 15. Power Trunk / Smart Trunk<sup>™</sup>:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.
- 16. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via *Bluetooth*<sup>®</sup> within the cellular service coverage area is required.
- 17. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- 18. Seat belts:** For maximum protection, always wear your seatbelt.
- 19. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- 20. SiriusXM<sup>®</sup>:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM<sup>™</sup> - Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com).** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM<sup>®</sup>. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM<sup>®</sup> is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE<sup>®</sup>, NASDAQ<sup>®</sup> and AMEX<sup>®</sup>. The service is delayed approximately 20 minutes. SiriusXM<sup>®</sup> satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM<sup>®</sup> Internet Radio service is available throughout our satellite service area and in AK and HI. ©2020 SiriusXM<sup>®</sup> Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
- 21. Sportmatic<sup>®</sup>** is a registered trademark of Kia Motors America.
- 22. Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- 23. Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.
- 24. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
- 25. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.




**KEY FEATURE WALKTHROUGH**

Demonstrate the following with the customer


- Standard Audio System\* – page 23

For further operational information, refer to the Car Infotainment System Quick Reference Guide.

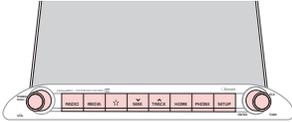


- UVO eServices\* – page 25

For further operational information, refer to the Car Multimedia System User's Manual.

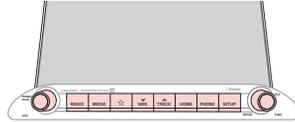


- Android Auto™ / Apple CarPlay® Setup – page 24

- UVO eServices / UVO link Activation\* – page 25-26

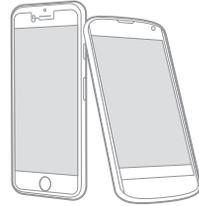


- UVO link with Navigation\* – page 28

For further operational information, refer to the Car Infotainment System Quick Reference Guide.

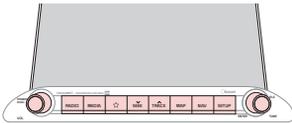


- Cruise Control (CC)\* – page 19

Demonstrate operation.

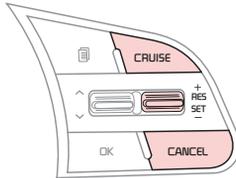

- Bluetooth® Wireless Technology\* – page 20-21

Demonstrate operation.

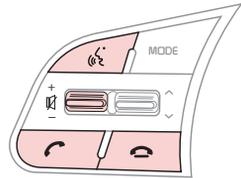

- Tire Pressure Monitoring System (TPMS) – page 5

- Engine Start/Stop Button\* – page 14

- Digital Clock – page 29

- Aux/Multimedia USB Port\*, Power Outlets & USB Charger Ports – page 29

- Seat Warmers / Ventilated Seat\* – page 36

- Folding Rear Seats\* – page 38

- Sunvisor – page 43

- Smart Key\* – page 40

- Rear View Monitor (RVM) – page 35

- Passenger Air Bag Off Indicator – page 45

**DURING DELIVERY**

\*if equipped

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: \_\_\_\_\_ Date: \_\_\_\_\_

Sales Manager: \_\_\_\_\_ Date: \_\_\_\_\_

Customer: \_\_\_\_\_ Date: \_\_\_\_\_



# FORTE CUSTOMER DELIVERY CHECKLIST

Owner's Name: \_\_\_\_\_ VIN: \_\_\_\_\_ Mileage: \_\_\_\_\_

Dealership Name: \_\_\_\_\_ Sales Consultant: \_\_\_\_\_ Date: \_\_\_\_\_

## BEFORE DELIVERY

- Confirm "Good Battery" with a Kia battery tester
- Verify all tire pressures are to spec (see driver's door label) LF \_\_\_\_\_ LR \_\_\_\_\_ RF \_\_\_\_\_ RR \_\_\_\_\_
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any supplemental audio user's guides)


## KEY FEATURE WALKTHROUGH

- Air Conditioning / Climate Control – pages 30-31  
Demonstrate Air Flow Modes, Defog and Defrosting Windshield.

Automatic\*




Manual\*

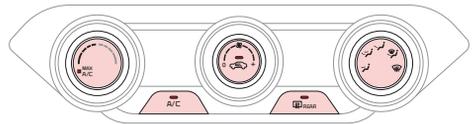

- Manual Gear Shift\* – page 33  
Demonstrate pressing button for reverse gear.



- Windshield Wipers & Washers - page 17  
Rotate INT switch to adjust Intermittent Wipe Speed.

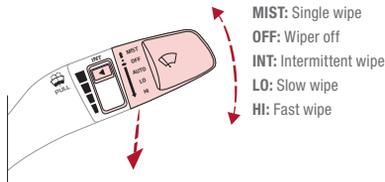

Pull to spray and wipe.



# FORTE NORMAL MAINTENANCE SCHEDULE NON-TURBO

P=Perform • R=Replace • I=Inspect<sup>‡</sup>

(up to 60,000 miles)<sup>A</sup>

For Turbo maintenance, see page 44

## MAINTENANCE INTERVALS (MILES)

MAINTENANCE ITEMS	7,500	15,000	22,500	30,000	37,500	45,000	52,500	60,000
Add fuel additive <sup>C</sup>	P	P	P	P	P	P	P	P
Rotate tires	P	P	P	P	P	P	P	P
Engine oil and filter	R	R	R	R	R	R	R	R
Climate control air filter	R	R	R	R	R	R	R	R
Battery condition	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Cooling System	I	I	I	I	I	I	I	I
Suspension ball joints and mounting bolts	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Air cleaner filter	I	I	I	R	I	I	I	R
Brake fluid	I	I	I	I	I	I	I	I
Driveshaft and boots		I		I		I		I
Fuel tank air filter <sup>10</sup>		I		I		I		I
Parking brake (hand type)		I		I		I		I
Vapor hose and fuel filler cap		I		I		I		I
Manual transmission fluid <sup>‡</sup>				I				I
Fuel lines, fuel hoses and connections				I				I
Drive belts (First 60,000 miles, then every 15,000 miles) <sup>E</sup>								I

### QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO eServices / UVO link account by logging into your UVO eServices App / Kia Access with UVO link App or your account on <https://owners.kia.com/> (Vehicles equipped with UVO eServices or UVO link only – See pages 24-26 for setup information)

<sup>‡</sup> If equipped.

A. See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule.

B. And, if necessary, adjust, correct, clean or replace.

C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

E. The drive belt should be replaced when cracks occur or tension is reduced excessively.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

© 2020 Kia Motors America, Inc. All rights reserved.  
Consumer - Roadside Assistance<sup>11</sup>: 1-800-333-4KIA (4542)

Part Number: BD210-PS-004R1

†LEGAL DISCLAIMERS ON BACK INSIDE COVER