

K5

Features & Functions Guide



Delivery First

The priority that delivers more



WELCOME TO THE KIA FAMILY!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and – above all – your satisfaction.

USING THIS FEATURES & FUNCTIONS GUIDE

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

VIDEOS AND QR CODES

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your mobile device using the built-in QR Code Reader or a downloaded QR Code Reader App.

After opening the QR Code Reader App on your mobile device, the app will utilize your device's camera. Center the code in the camera viewing area - With some apps, as soon as the app recognizes the code, it will launch the corresponding video.

With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video.

For operation specifics, refer to the instructions that come with the QR Code Reader app. You can also view the videos by visiting the following website: www.youtube.com/KiaFeatureVideos.

QUICK TIPS

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code scanning
 - Try another QR Code Reader app; not all apps are created equal
2. After scanning, you may experience a "connection error" message or a "connecting" message with no subsequent response. These messages typically indicate that your device is having trouble connecting to the Internet

QR CODE

One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to this page for more information.



www.youtube.com/KiaFeatureVideos

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia's most used features:

1	Smart Key	46
2	Fuel Filler Door Release.	47
3	Power Adjustable Driver's Seat* / Front Seat Headrest Adjustment	43-44
4	Seat Warmers* / Ventilated Seats*	42
5	Lifting Wipers (Wiper Service Mode)	23
6	Windshield Wipers & Washers	23
7	Idle, Stop & Go (ISG) System	37
8	Smart Cruise Control (SCC)	24
9	Highway Driving Assist (HDA)*	16
10	Rear Occupant Alert (ROA) with Door Monitoring	44
11	Smart Trunk with Auto Open*.	48
12	Normal Maintenance Schedule	Back Cover
13	User Settings – Instrument Cluster	09
14	Vehicle Settings* – Audio Head Unit Screen.	10
15	Bluetooth® Wireless Technology	28-29
16	Standard Audio System - Value*	32
17	UVO link Activation* / UVO Assistance*	33
18	UVO link with Navigation*.	35
19	Android Auto™ / Apple CarPlay® Setup	31

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

www.kia.com
 Consumer Affairs - Roadside Assistance¹¹⁸:
 1-800-333-4KIA (800-333-4542)

Always check the Owner's Manual for complete operating information and safety warnings.



VIDEOS & QR CODES Inside Front Cover

INSTRUMENT CLUSTER

Instrument Cluster Overview	03
Indicators & Warning Lights	04
Tire Pressure Monitoring System (TPMS)	05
Instant Fuel Economy / Fuel Economy	06
Drive Mode Integrated Control System	07

VEHICLE SETTINGS

LCD Instrument Cluster Modes	08
Trip Modes / Trip Computer	08
User Settings – Instrument Cluster	09
Service Interval Mode	09
Vehicle Settings – Audio Head Unit	10
Vehicle Auto-Shut Off*	10

ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)

Blind-Spot Collision-Avoidance Assist (BCA)*	11
Rear Cross-Traffic Collision-Avoidance Assist (RCCA)*	12
Forward Collision-Avoidance Assist (FCA)	13
Lane Keeping Assist (LKA)	14
Lane Following Assist (LFA)	15
Highway Driving Assist (HDA)*	16
Driver Attention Warning (DAW)	17
Leading Vehicle Departure Alert (LVDA)	18
Safe Exit Assist (SEA)*	18

DRIVER'S PANEL

Instrument Cluster Control*	19
Electronic Stability Control (ESC)	19
Hill-Start Assist Control (HAC)	19
Engine Start/Stop Button*	20
Power Windows, Window Lock & Central Door Lock	21
Manual Folding Mirrors*	21

DRIVER'S PANEL CONTINUED

Auto Door Lock/Unlock	21
Power/Heated Outside Mirrors*	21
Electronic Child Safety Lock System*	21
Tire Door Locks	21

STEERING WHEEL CONTROLS

Headlights & High Beams	22
Windshield Wipers & Washers	23
Lifting Wipers (Wiper Service Mode)	23
Turn Signals & Fog Lights*	23
Smart Cruise Control (SCC)	24
Cruise Control (CC)	25
Navigation-based Smart Cruise Control (NSCC)*	26
Heated Steering Wheel Button*	27
Tilt/Telescoping Steering Wheel	27

AUDIO SYSTEMS

Bluetooth® Wireless Technology	28
Audio Controls	30
Android Auto™ / Apple CarPlay® Setup	31
Standard Audio System - Value*	32
UVO link Activation*	33
UVO Assistance*	33
Kia Access with UVO link App Download	34
Kia Access with UVO link App Features Guide	34
UVO link with Navigation*	35

CENTER PANEL

Multimedia USB Port & Power Outlets	36
Digital Clock	36
USB Charger Ports*	36
Idle, Stop & Go (ISG) System	37
Wireless Smartphone Charging System*	38
Automatic Climate Control	39
Electronic Parking Brake (EPB)	40
Auto Hold	40
Automatic Gear Shift with Sportmatic® Shifting	41

CENTER PANEL CONTINUED

Paddle Shifters*	41
Dual Clutch Transmission (DCT)	42
Seat Warmers* / Ventilated Seats*	42

SEATING

Driver Position Memory System*	43
Power Adjustable Driver's Seat*	43
6-Way Manual Adjustable Driver's Seat*	44
Front Seat Headrest Adjustment	44
Rear Occupant Alert (ROA) with Door Monitoring	44

OTHER KEY FEATURES

Map/Room Lamps	45
Panoramic Sunroof with Power Sunshade*	45
Smart Key*	46
Remote Keyless Entry (Folding Key)*	47
Double-Turn Lock/Unlock All	47
Fuel Cap / Malfunction Indicator (Check Engine Light)	47
Fuel Filler Door Release	47
Trunk Release Buttons	48
Smart Trunk with Auto Open*	48
Reverse Parking Collision-Avoidance Assist (PCA)*	49
Reverse Parking Distance Warning (PDW)*	49
Rear View Monitor (RVM)	50
Sunvisor	50
Hood Release Lever and Latch	51

SAFETY FEATURES

Child-Protector Rear Door Locks (Manual)*	51
Occupant Detection System (ODS) / Passenger Airbag Off Indicator	52
Seat Belts	52


NORMAL MAINTENANCE - TURBO Back Cover

LEGAL DISCLAIMERS Inside Back Cover

Instrument Cluster Overview

- A** Tachometer
- B** Turn Signal Indicators
- C** Speedometer
- D** Engine Temperature Gauge
- E** Indicators & Warning Lights
- F** LCD – Gear Shift Position, Odometer, Trip Modes / Trip Computer, Driving Assist
- G** Fuel Gauge


 Arrow direction indicates the side of the vehicle the fuel door is located

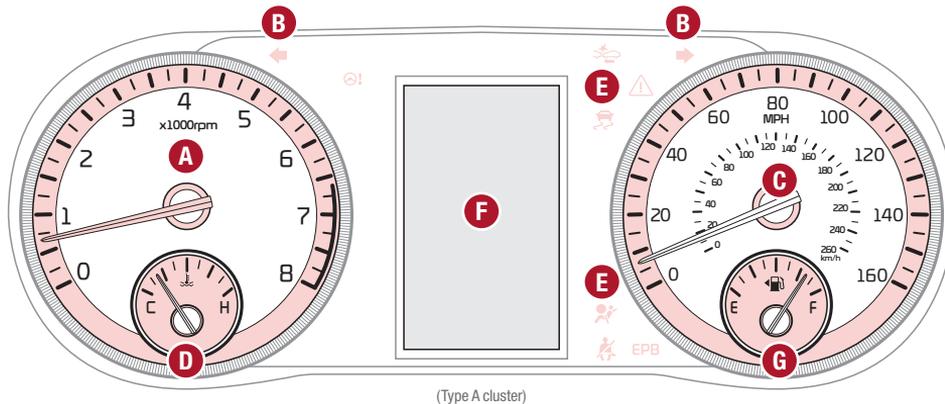

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. See Section 4 in the Owner's Manual for more information.

Indicators & Warning Lights

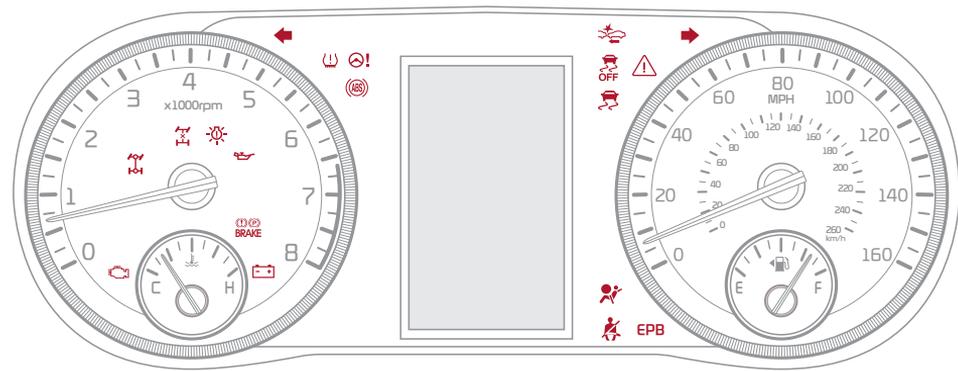

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. See Section 4 in the Owner's Manual for more information.


-  Immobilizer Indicator Light*
-  SPORT SPORT Mode Indicator Light*
-  High Beam Assist Indicator*
-  High Beam Indicator
-  Low Beam Indicator Light*
-  Light ON Indicator Light
-  Parking Brake & Brake Fluid Warning Light
-  Engine Oil Pressure Warning Light
-  Electric Power Steering (EPS) Warning Light
-  Charging System Warning Light
-  Master Warning Light*
-  Airbag Warning Light
-  Seat Belt Warning Light
-  Malfunction Indicator Lamp (MIL)
-  Low Tire Pressure Indicator / TPMS Malfunction Indicator
-  (ABS) Anti-lock Braking System (ABS) Warning Light
-  Electronic Stability Control (ESC) Indicator Light
-  ESC OFF Electronic Stability Control (ESC) OFF Indicator Light
-  EPB Electronic Parking Brake (EPB) Warning Light*
-  LED Headlamp Warning Light*
-  Forward Collision-Avoidance Assist Warning Light*
-  Lane Keeping Assist Indicator Light*
-  Low Fuel Level Warning Light
-  (EBD) Electronic Brake force Distribution (EBD) System Warning Light (Two separate indicators on Instrument Cluster lit at same time)
-  CRUISE CRUISE Indicator Light
-  SET Cruise SET Indicator Light*
-  AUTO HOLD AUTO HOLD Indicator Light*
-  Front Fog Light Indicator

Tire Pressure Monitoring System (TPMS)^{†24}


The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator **A**. The indicator  is designed to illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

The Low Tire Pressure Position Indicator **B** is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated. Inflate tire(s), using an accurate digital tire pressure gauge, to specifications to turn off the Low Tire Pressure Position Indicator **B**; see the front driver's door jamb for PSI specification.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate—see dealer for service.

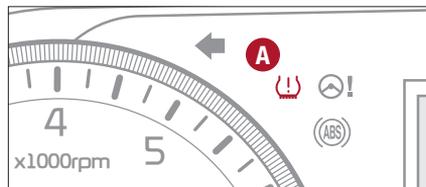

(Indicator located on Instrument Cluster)

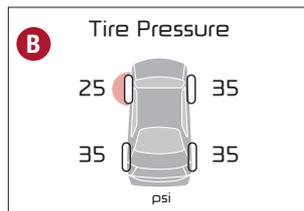

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on “cold tires” that have been sitting for 20 minutes, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, which is visible when the door is open
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) can interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 6 in the Owner's Manual for more information.

QR CODE

Tire Pressure Monitoring System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos


Instant Fuel Economy

Press the Mode button **A** to cycle to the Trip Computer mode , then toggle up or down with the OK button **A** to cycle to the Fuel Economy screen. The bar at the bottom of the screen displays the calculated Fuel Consumption during the past few seconds when the vehicle speed is more than approximately 6 mph.

1. Keep your vehicle in good condition with regular maintenance
2. Travel lightly, without carrying unnecessary weight in your vehicle
3. Don't let the engine idle longer than necessary

REMINDERS:

- Not to be used in calculating or as a reference for AVERAGE fuel economy
- If the vehicle speed exceeds 1 mph (1.6 km/h) after being refueled with more than 1.6 gallons (6 liters), the average fuel economy will be cleared to zero (---)

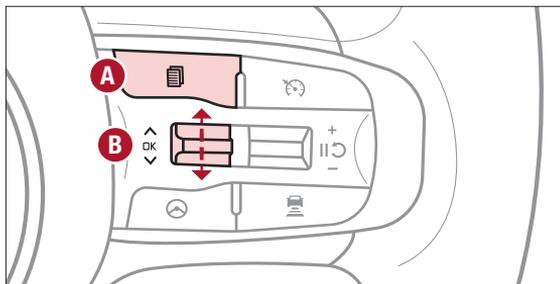

(Type A - Buttons located on Steering Wheel)

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Refer to section 4 in the Owner's Manual for more information.

Fuel Economy

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

For more information on Fuel Economy, you can snap the QR Code above to view a video or refer to section 4 in the Owner's Manual.

QR CODE

Fuel Economy Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos

Drive Mode Integrated Control System

The drive modes may be changed according to the driver's preferences or road conditions. To cycle through the drive modes **A** or deactivate a drive mode, rotate the DRIVE MODE knob **B**.


When a drive mode is selected, the drive mode indicator will illuminate in the Instrument Cluster or the audio head unit* (except for COMFORT). The system's default mode is COMFORT mode and when selected, the indicator will not be illuminated.

- **COMFORT** Mode
- **SPORT** Mode
- **SPORT+*** Mode (2.5 Turbo)
- **SNOW*** Mode* (All Wheel Drive)
- **SMART** Mode* – When the SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style (economic, average, spirited). The color of the SMART mode indicator (green, white, red) depends on the current driving style
- **CUSTOM** Mode* – When CUSTOM mode is selected, on the audio head unit the driver can select separate modes with different combinations of drive modes


REMINDERS:

- Steering effort may be slightly increased in SPORT/SPORT+ mode
- When SPORT/SPORT+ mode is selected, fuel economy may decrease

For more information, refer to the Car Infotainment System Quick Reference Guide.

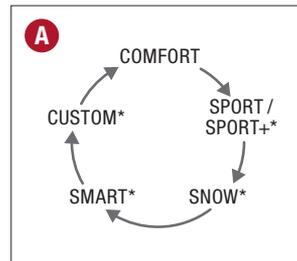

For illustrative purposes only. Actual vehicle operation or display may vary.

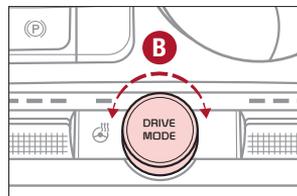

QR CODE

Blind-Spot Collision-Avoidance Assist (BCA) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos

LCD Instrument Cluster Modes

Press Mode button **A** to scroll through different LCD Instrument Cluster Modes.

Type B cluster:



Trip Computer Mode: Displays driving information for Fuel Economy, Accumulated Info, Drive Info, Transmission Temperature



Turn-by-Turn Mode*: Displays information on Route Guidance, Destination Info



Driving Assist Mode: System settings for Smart Cruise Control, Lane Keeping Assist, Lane Following Assist, Driver Attention Warning, TPMS



User Settings Mode: Change settings for Driver Assistance, Door, Lights, Convenience, Service Interval, Language, Other Features, Reset




Master Warning Mode: Informs of warning messages related to the vehicle when the systems are not operating normally

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Refer to section 4 in the Owner's Manual for more information.

Trip Modes / Trip Computer

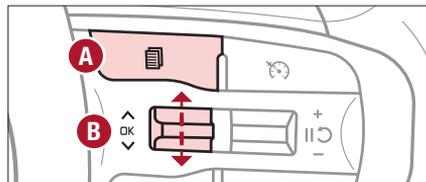

(Type B; Buttons located on Steering Wheel)

The Trip Computer is a system to relay pertinent driving information. It appears on the display when the ignition switch or the Engine Start/Stop button* is in the ON position.

To cycle through the Trip Modes, press the Mode button **A**.

To select and enter Trip Computer mode , press the OK button **B** up/down and then press the OK button **B** again to enter. To cycle through different screens (Fuel Economy, Trip A, Trip B), press the OK button **B** up/down and press again to enter. When displaying TRIP A or TRIP B screens, press and hold the OK button **B** to reset the Tripmeter to zero.


REMINDERS:

- Appearance of Tripmeter display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

Your vehicle's steering wheel buttons may differ from those in the illustrations.

For illustrative purposes only. Your actual display, buttons and/or features may vary.


Refer to section 4 in the Owner's Manual for more information.

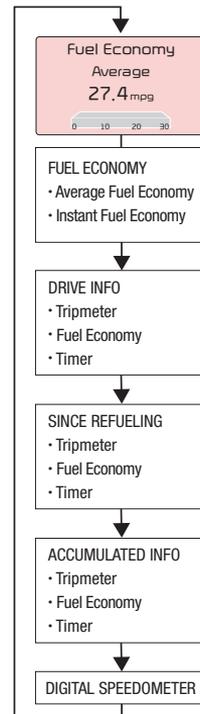

(Type B Cluster)

User Settings – Instrument Cluster

To enter the User Settings mode in the Instrument Cluster, press the Mode button **A** when the vehicle is at a standstill, shift lever in Park and with the ignition switch or the Engine Start/Stop button* in the ON position, and select User Settings .

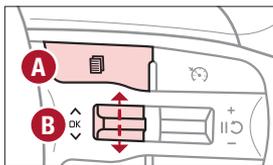

(Type B; Located on Steering Wheel)

You can navigate the selections on the display by pressing the Select/Reset (OK) button **B** up and down, and then selecting the item by pressing the OK button **B** again.

Driving Assistance*:

- Warning Time
- Warning Volume
- Driver Attention Warning
- Forward Safety
- Lane Safety
- Blind-Spot Safety
- Parking Safety

Door/Trunk:

- Automatically Lock
- Automatically Unlock
- Two-Press Unlock
- Smart Trunk with Auto Open*

Lights:

- Ambient Light
- One-Touch Turn Signal
- Headlamp Delay
- High Beam Assist

Convenience:

- Welcome Mirror/Light
- Wireless Charging System

Service Interval:

- Enable Service Interval
- Adjust Interval
- Reset

Other Features:

- Fuel Economy Auto Reset
- Speedometer Units
- Fuel Economy Units
- Temperature Units
- Tire Pressure Units

Reset:

- Reset User Setting menus

Language:

- Choose the language

Service Interval Mode

To enter Service Interval mode, press the Mode button **A**, scroll using the OK button **B** to User Settings  and press the OK button **B** to enter. Then scroll to Service Interval and press the OK button again **B**. The System will display number of miles remaining until the next service is due, as well as type of service.

When service is required, the following will be displayed: **Service Required**.



(Type B cluster)

To reset the Service Interval mode system, press and hold the OK button **B** for more than 1 second.

To turn Service In OFF, go to User Settings.

Service Interval Setting

To set the service interval when in User Settings mode:

- Press the OK button **B** up/down and scroll to Service Interval. Press the OK button **B** again to enter
- Press the OK button **B** and toggle to ON, then press the OK button **B** again to set. Then press the Move button **B** up/down to scroll and select the desired miles or months for your next service
- Press the OK button **B** again to enter

QR CODES

To view a video on your mobile device, snap these QR Codes or visit the listed website.

Refer to inside front cover information.

LCD Display Video



www.youtube.com/KiaFeatureVideos

LCD Display: Maintenance Video




www.youtube.com/KiaFeatureVideos

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Vehicle Settings – Audio Head Unit

To enter the Vehicle Settings mode in the audio head unit **A**, press the SETUP key on the audio head unit. Then press the Vehicle icon, which will take you to Vehicle Settings. Use the touchscreen to navigate through the menus.

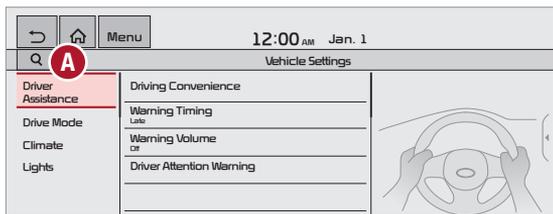

Vehicle Settings:

Driver Assistance: Driving Convenience*, Warning Time*, Warning Volume*, Driver Attention Warning*, Forward Safety*, Lane Safety*, Blind-Spot Safety*, Parking Safety*

Drive Mode: Drive Mode Alert*

Climate*: Recirculate Air*, Automatic Ventilation*, Defog/Defrost Options*, Climate Features*

Lights*: Ambient Light*, One Touch Turn Signal*, Headlight Display*, High Beam Assist*

Door*: Auto Lock*, Auto Unlock*, Walk-Away Lock*, Two-Press Unlock*, Smart Trunk*

Cluster*: Service Interval*, Energy Consumption Reset*, Content Selection*, Cluster Voice Guidance Volume*, Welcome Sound*, Theme Selection*

Convenience*: Rear Occupant Alert*, Welcome Mirror Light*, Wireless Charging System*, Vehicle Auto-Shut Off*

Seat*: Seat Position Change Alert*, Smart Posture Care*, Heated/Ventilated Features, Seat East Access*, Rear Seat Heating Control*

Reset: Reset Vehicle Settings to Factory Defaults

Vehicle Auto-Shut Off*

The Vehicle Auto-Shut Off, when certain conditions are met, will turn the vehicle off automatically after a pre-set time (30 or 60 minutes) in the User Settings.


A warning on the Instrument Cluster LCD will appear stating the “Vehicle will be turned off automatically in...” and a chime will sound when the timer starts **B**.

QUICK TIP

The timer that appears on the Instrument Cluster's LCD can be reset using the OK button on the right side of the Steering Wheel.

When timer ends, a continuous beep sounds for one minute before the vehicle shuts off.

Auto-Shut Off Settings – The system is on by default and timer is pre-set to 30 minutes. To change the pre-set time settings, go to User Settings* on the Instrument Cluster LCD or the audio head unit Vehicle Settings* and select 30 minutes, 60 minutes or off **C**.

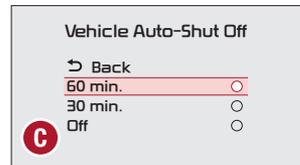

REMINDERS:

- When the vehicle is turned off then on again, the system defaults to on (30-minute pre-set time)
- The system will activate when the vehicle is on and these conditions are met:
 - The vehicle is in (P) Park
 - The driver's seat belt is unfastened
 - The driver's door is opened
 - The passenger seat is not occupied

Blind-Spot Collision-Avoidance Assist (BCA)*†6a

BCA is designed to help alert the driver before changing lanes. BCA uses a front-view camera on the front windshield and rear-corner radar sensors in the rear bumper to help alert the driver and temporarily apply braking in certain situations if it detects an approaching vehicle in the driver's blind spot area.

To turn BCA on, go to User Settings by pressing the Mode button on the Steering Wheel or the Vehicle Settings* on the audio head unit. Select Driver Assistance > Blind-Spot Safety. Then select Active Assist, Warning Only or Off.

Warning Only – The Warning Only setting will activate the 1st and 2nd stage alerts:

1st-stage: When another vehicle is detected within the BCA system warning boundary **A**, a yellow indicator will illuminate on the outside rearview mirrors **B**.


2nd-stage: When the 1st stage alert is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound a warning.

To set the initial warning activation time, go to the settings > Driver Assistance > Warning Timing. Then select the Normal or the Late option.

Active Assist – When Active Assist is selected in the settings, BCA may activate the Electronic Stability Control (ESC) and temporarily apply braking power when an approaching vehicle is detected within a certain distance next to or behind the vehicle. A warning message may appear on the Instrument Cluster LCD.

QUICK TIPS

- The BCA Warning Volume can be adjusted in the User Settings or the Vehicle Settings* on the audio head unit
- Conditions for the BCA to operate:
 - Warnings: When the vehicle is traveling faster than 12 mph
 - Active Assist: When the vehicle is traveling at least 40 mph
 - Other vehicle detected on the side or the rear of the vehicle

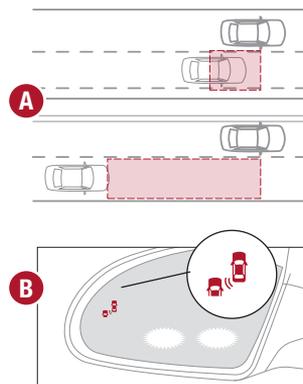

The above images are for illustrative purposes only and may not reflect actual operation.

REMINDERS:

- BCA will not issue a warning if the vehicle is passing at a high speed
- When BCA is ON and the ignition is cycled, BCA returns to its previous state

QR CODE

Blind-Spot Collision-Avoidance Assist (BCA) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos

BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

See section 5 in the Owner's Manual for more detailed information, limitations and conditions.

Rear Cross-Traffic Collision-Avoidance Assist (RCCA)*†6a

If RCCA sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, the system will sound an audible warning, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster screen **B**.

RCCA may activate the Electronic Stability Control (ESC) to help avoid an imminent collision. RCCA may temporarily apply braking power when an approaching vehicle is detected within a certain distance next to or behind the vehicle.

RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving 5 mph or slower



QUICK TIP

The RCCA Warning Volume can be adjusted in the User Settings in the Instrument Cluster or the Vehicle Settings* on the audio head unit

REMINDERS:

- The RCCA feature can be turned OFF/ON in User Settings, under Driver Assistance, Parking Safety
- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling 3 mph or faster, the RCCA system will show a warning
- The RCCA system is a supplemental system. Do not solely rely on these systems and always pay attention to the road and its conditions

See section 5 in the Owner's Manual for more information.

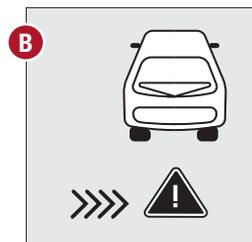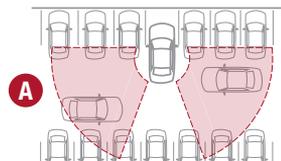

(Warning to apply braking)

Images are for illustrative purposes only and may not reflect actual feature or operation.

Forward Collision–Avoidance Assist (FCA)^{†6a}

FCA is designed to detect and monitor a vehicle ahead or detect a pedestrian in the roadway through front view camera recognition and front radar signals to warn the driver that a collision is imminent, and if necessary, temporarily apply emergency braking. Initially, FCA provides Forward Collision Warning (FCW) when it detects a potential collision with a vehicle or pedestrian in front, emitting an audible warning and visual alert on the instrument cluster **A**.

If the system detects that the collision risk has increased, the FCA automatically applies the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision.

FCA can be enabled by going to the User Settings > Driver Assistance > Forward Safety and selecting Active Assist, Warning Only or Off.

The Warning Timing can be adjusted by going to User Settings > Driver Assistance > Warning Time and Normal or Late.

FCA will become active when the:

- Engine Start/Stop button is ON
- Vehicle is traveling 6 mph or faster
- Electronic Stability Control (ESC) is ON


QUICK TIP

The FCA Warning Volume can be adjusted in the User Settings* or the Vehicle Settings* on the audio head unit.

REMINDERS:

- FCA will be activated by default when vehicle power is cycled on, even when previously set to off
- If FCA is operating and the ESC (Electronic Stability Control) is turned off, FCA is automatically turned off
- When FCA is off, the FCA warning indicator is on in the Instrument Cluster

For illustrative purposes only. Your actual display, buttons and/or features may vary.

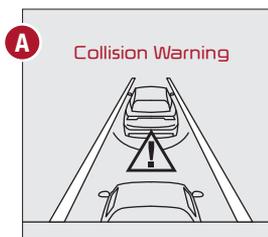

QR CODE

Forward Collision–Avoidance Assist (FCA) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos

Forward Collision-Avoidance Assist (FCA) is not a substitute for safe and proper driving. Always drive safely and use caution. FCA may not always alert the driver when the vehicle is approaching another vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.

Lane Keeping Assist (LKA)^{†6a}

With the Engine Start/Stop button in the ON position, LKA is on by default. The instrument cluster indicator  will illuminate white. It will remain white when the vehicle is traveling slower than 40 mph and the system does not detect lane markers. When LKA detects the lane markers and can assist steering, the LKA icon will illuminate green.

If LKA detects that you are moving outside of your lane, the system may give an audible warning and display a Lane Departure Warning on the instrument cluster. If the vehicle continues to move outside of the lane, LKA will provide steering inputs, trying to prevent the vehicle from moving outside its lane.

To turn LKA off, press the Lane Safety button . To switch between modes (Active LKA, LKA and Lane Departure Warning), go to User Settings in the Instrument Cluster, select Driver Assistance, then Lane Keeping Assist or the Vehicle Settings* in the audio head unit.

The three available modes are:

Active LKA – Provides more frequent steering inputs than standard LKA

Lane Keeping Assist – Guides driver to keep vehicle within lanes and provides steering inputs when vehicle is about to deviate from the lane

Lane Departure Warning – Alerts driver when the system detects the vehicle leaving the lane. In this mode the system will not provide steering inputs

All systems will operate under the following conditions:


- The vehicle speed exceeds approximately 40 mph
- LKA recognizes the lane the vehicle is traveling in
- The vehicle is between the lane markers

QUICK TIP

The LKA Warning Volume can be adjusted in the User Settings or the Vehicle Settings* on the audio head unit.

REMINDERS:

- LKA will not issue a warning if the turn signal or hazard lights are activated
- If the Lane Safety button is not pressed and ignition is cycled, the system will turn ON again. If the Lane Safety button is pressed, the system remains OFF
- LKA will return to its previous state when the ignition is cycled
- LKA may not always alert the driver if the vehicle is about to be driven outside of its lane. Refer to the Owner's Manual for more information
- When the vehicle changes lanes without a turn signal, LKA may sound an audible warning. The warning sound can be adjusted in the User Settings

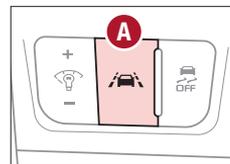

(Located left of Steering Wheel)



When the LKA front-view camera detects the lane traveling in



When the LKA front-view camera does not detect the lane traveling in



When the LKA front-view camera detects the vehicle veering outside of the lane traveling in, a yellow indicator will illuminate

*IF EQUIPPED

†LEGAL DISCLAIMERS ON BACK INSIDE COVER

QR CODE

Lane Keeping Assist (LKA) Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos

Lane Keeping Assist is not a substitute for safe and proper driving. Always drive safely and use caution. LKA may not always alert the driver if the vehicle is about to be driven outside of its lane.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

See section 5 in the Owner's Manual for more information.

Lane Following Assist (LFA)^{†6a}

Lane Following Assist monitors lane lines and adjusts the steering to help position the vehicle in the center of the lane.

To enable or disable LFA, go to the User Settings* on the Instrument Cluster LCD or the Vehicle Settings* on the audio head unit. Go to Vehicle > Driver Assistance > Driving Assist > Lane Following Assist.

To activate or deactivate the LFA system press the LFA button **A** on the Steering Wheel.

When LFA is activated and detects lane markers and/or a preceding vehicle, the LFA indicator  will illuminate green if the steering assist mode is on, or white if the steering assist mode is off.


LFA will operate only when these conditions are met:

- When Smart Cruise Control is on and operating
- The vehicle is traveling slower than 110 mph
- LFA recognizes the lane the vehicle is traveling in

REMINDERS:

- If the ignition is cycled, the LFA returns to its previous state, on or off
- LFA is not a substitute for safe and proper driving. Always drive safely and use caution

See section 5 in the Owner's Manual for more detailed information, limitations and conditions.

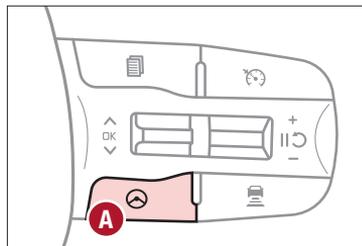

(Type B; Buttons located on Steering Wheel)

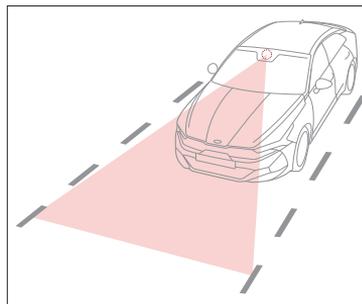


Image is for illustrative purposes only and may not reflect actual feature or operation.

Highway Driving Assist (HDA)*†6a

Highway Driving Assist (HDA) is designed to adjust the speed of the vehicle when driving on limited/controlled access highways. The system can adjust the vehicle's speed based on available highway speed information. The automatic speed setting mode is designed to set the speed automatically by adjusting to the current speed limits of the highway vehicle is travelling on.

To enable HDA, go to User Settings in the Instrument cluster or the Vehicle Settings* in the audio head unit. Go to Driver Assistance > Driving Assist > Highway Driving Assist.

To activate HDA, turn Smart Cruise Control (SCC) on by pressing the Driving Assist (Cruise) button **A** on the Steering Wheel controls.

HDA will operate only when these conditions are met:

- When the SCC speed is set to current highway and controlled/limited access roads
- The vehicle is traveling slower than 110 mph
- When driving on limited access highways, such as, Interstate, Federal and State freeways
- When SCC is on and operating

When HDA is activated and the conditions are met, the Instrument Cluster indicator light **B** will illuminate green. If the conditions are not met, HDA will be in standby mode and the indicator light **B** will illuminate white.


When in operation, and if both lanes are recognized, a display **C** will show the lanes illuminated white and the steering wheel indicator illuminated green.

If HDA is activated, conditions are met and the SCC speed is set by the driver (at the posted highway speed limit), HDA will enter the automatic speed setting mode. The set speed and AUTO will be displayed **D** in green and an audible alert will sound.


REMINDERS:

- Current highway speeds and controlled or limited access roads information may vary. Future navigation updates may change this information. See owner's manual for more information
- When the ignition is cycled, the system returns to its previous state, on or off

Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution. See the Owner's Manual for more detailed information, limitations and conditions.

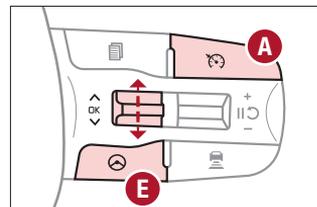

(Type B Steering Wheel controls)

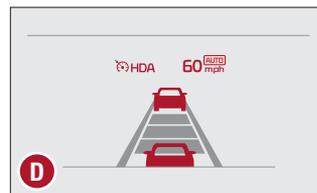

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.

Driver Attention Warning (DAW)^{†6b}

DAW is designed to detect inattentive driving practices and, in certain situations, can give a warning signal to take a break from driving.

DAW is set to ON by default. To turn DAW OFF, turn the ignition on and then select User Settings in the LCD Display on the Instrument Cluster or Vehicle Settings* in the audio head unit. Go to Driver Assist and select Driver Attention Warning. Set Warning Timing to Normal or Late Warning Timing.

Driver Attention Warning modes:

OFF: The Driver Attention Warning system is deactivated

Normal: The Driver Attention Warning system alerts the driver of inattentive driving practices

Late: The Driver Attention Warning system alerts the driver of inattentive driving practices later than in Normal mode

If the DAW System is activated, the DAW information will appear on the LCD Display **A** when you select the Driving Assist mode .

A message, “Consider taking a break,” appears on the LCD display and a warning sounds to advise the driver to take a break when the driver’s attention level is below one bar.

REMINDERS:

- The setup of the DAW system will be maintained, as selected, when the ignition is cycled
- When activated, the DAW system does not display the “Consider taking a break” message when the total trip driving time is less than 10 minutes

Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

For illustrative purposes only. Your actual display, buttons and/or features may vary.



Leading Vehicle Departure Alert (LVDA)^{†6b}


When the vehicle detects that the leading vehicle is driving away, LVDA sounds an warning to let you know you can start driving.

If no action is taken after the vehicle in front drives away, then a message **B** will appear on the Instrument Cluster.

To turn the system on, go to User Settings  in the Instrument Cluster. Press the MODE button on the Steering Wheel, go to Driver Assistance > Leading Vehicle Departure Alert and press the OK button on the Steering Wheel.

REMINDERS:

- When the ignition is cycled, the system returns to its previous state, on or off
- Always check the front of the vehicle and road conditions before departure

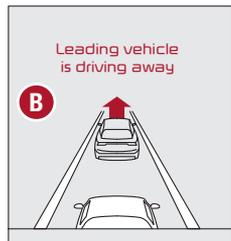


The Leading Vehicle Departure Alert system is not a substitute for safe and proper driving. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Safe Exit Assist (SEA)^{*†6a}

Safe Exit Assist (SEA) can help prevent passengers from opening their door by displaying a warning message on the Instrument Cluster and sounding an audible warning when a vehicle is detected, approaching from behind, and after your vehicle has stopped.

To turn on SEA, go to User Settings in the Instrument cluster or the Vehicle Settings* in the audio head unit, select Driver Assistance, then Blind-Spot Safety, and select Safe Exit Assist.

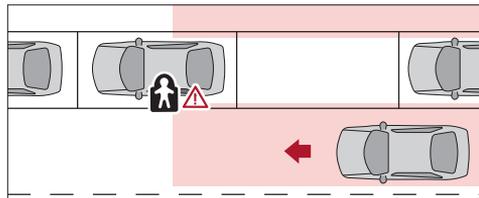

See section 4 in the Owner's Manual for more information.

Image is for illustrative purposes only and may not reflect actual feature or operation.

Instrument Cluster Control

Press left/right side of switch **A** to adjust the display brightness of the instrument panel illumination.

REMINDER: Instrument Cluster Control does not change brightness when lights are turned off.

See section 5 in the Owner's Manual for more information.

Electronic Stability Control (ESC)^{†7}

ESC is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep ESC turned ON for daily driving whenever possible.

Press ESC OFF button **B** to disable Traction Control in ESC (ESC OFF indicator will illuminate).


To turn both Traction Control and Stability Control off, press and hold ESC OFF button **B** (ESC OFF indicator will illuminate, and an alert sounds).

REMINDEES:

- ESC is active by default at vehicle startup. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the Instrument Cluster will illuminate whenever ESC is in operation

See section 5 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

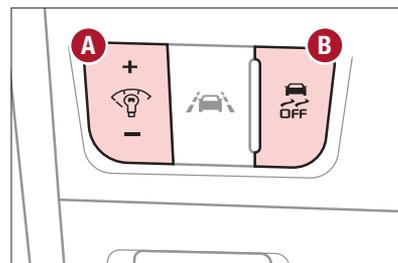

(Located left of Steering Wheel)

Hill-Start Assist Control (HAC)^{†7}

HAC can help prevent the vehicle from rolling backward, for two seconds, when accelerating from a stop while on a steep incline.

HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

REMINDEES:

- HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- In the event of HAC system malfunction, see an authorized Kia dealer for service
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline

QUICK TIPS

- When HAC is active (e.g., accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator
- HAC provides a two-second delay before the vehicle may start rolling backward

See section 5 in the Owner's Manual for more information.


Engine Start/Stop Button*†8

To start the engine:

1. Depress the brake pedal
2. Press the ENGINE START/STOP button **A** while the gear shift is in P (Park) or N (Neutral)

To turn the engine OFF, press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person.

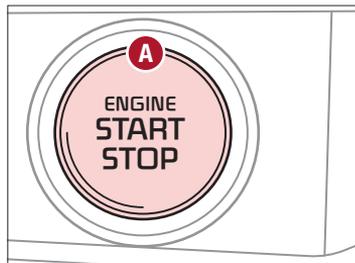

(Located right of Steering Wheel)

QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once

ON position

- When already in the ACC position and without depressing the brake pedal, press the ENGINE START/STOP button again
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice

Keeping the vehicle in ACC or ON position without turning the engine on may discharge the vehicle's battery

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (Lock button side closest) and press to start engine

For illustrative purposes only. Your actual display, buttons and/or features may vary.

See section 5 in the Owner's Manual for more information.

QR CODES

To view a video on your mobile device, snap these QR Codes or visit the listed website. Refer to inside front cover information.

Engine Start/Stop Button & Smart Key Video



www.youtube.com/KiaFeatureVideos

Kia Key Fob Video



www.youtube.com/KiaFeatureVideos

Power Windows, Window Lock & Central Door Lock

A Pull/Press to operate Driver's and Front Passenger's Windows Auto-Up/Down*

QUICK TIP

Press button again to stop Auto-Up/Down function.

B Press to Unlock/Lock All Doors

C Press to disable Rear Passenger Windows / activate Electronic Child Safety Lock System

REMEMBER: When **C** is pressed, window controls for the Rear Passenger Windows are disabled

QUICK TIPS

While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:

- If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
- If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

See section 4 in the Owner's Manual for more information.



Manual Folding Mirrors*

To fold the mirrors in manually, pull the mirror towards the window.

QUICK TIP

If needed, pull the mirror firmly until it folds

See section 4 in the Owner's Manual for more information.

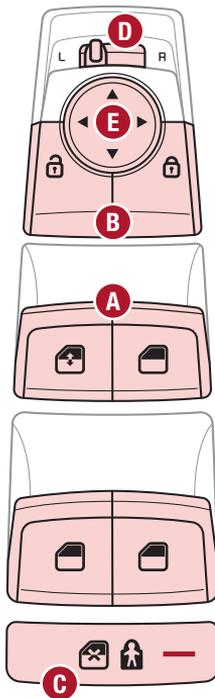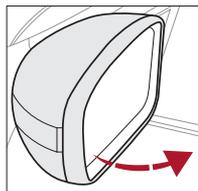

Button configuration may vary depending on vehicle model.

Auto Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

See section 4 in the Owner's Manual for more information.

Power/Heated Outside Mirrors*

Mirror heaters controlled with Rear Defroster. Use mirror to defog/defice side mirrors.

Move toggle switch **D** left or right to select mirror. Then press arrows **E** left/right or up/down to adjust mirror position.

See section 4 in the Owner's Manual for more information.

Electronic Child Safety Lock System

Press button **C** to lock the rear passenger doors. An indicator will illuminate showing the system is active.

This system is on by default, and then activated once the button **C** is pressed. To deactivate, press the button again.

See section 4 in the Owner's Manual for more information.

Rear Door Locks

If the inner door handle is pulled once when the door is locked, the door will unlock. If the inner door handle is pulled once more, the door will open.

QUICK TIP


To open the Rear Doors, pull the inner door handles two times.

See section 4 in the Owner's Manual for more information.

Headlights & High Beams

To operate:

- Rotate lever **A** to change the Headlight function
- Push lever to turn High Beams ON **B**
- Pull lever to flash Headlights/High Beams **B**

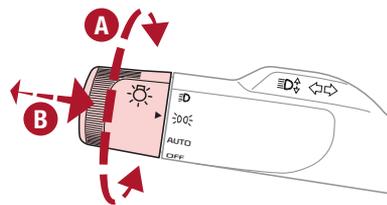

- Headlight position
- Parking light position
- AUTO* Auto Light / HBA
- OFF OFF position

Daytime Running Lights (DRL) - DRL may help others to see the front of your vehicle during the day. The lights will turn on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Engine is turned off
- Parking brake is applied
- Switch is in the DRL OFF position

AUTO Light position – When the light switch is in the AUTO Light position, the taillights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.


High Beam Assist (HBA) – High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator will illuminate.

REMINDERS:

- High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams
- DRL only operates during the daytime
- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously
- When the HBA indicator illuminates on the instrument cluster, the HBA is not working properly. See an authorized Kia dealer for service


See section 4 in the Owner's Manual for more information.

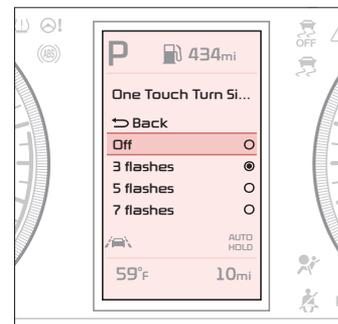

Windshield Wipers & Washers

To operate:

- Move lever Up/Down to change Wiper modes
- Press switch **A** Up/Down to adjust Intermittent Wipe Speed to Fast/Slow
- Pull lever to spray and wipe

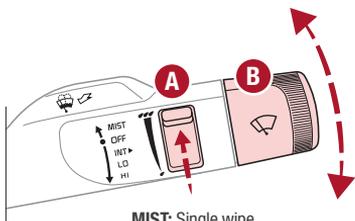

MIST: Single wipe
OFF: Wiper off
INT: Intermittent wipe
LO: Slow wipe
HI: Fast wipe

QUICK TIPS

- Pressing lever up increases Intermittent wipe frequency and wipe speed. Pressing lever down decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use


See section 4 in the Owner's Manual for more information.

Lifting Wipers (Wiper Service Mode)

To lift the windshield wipers to clean windshield, inspect or replace wiper blades or raise wipers in snow/ice conditions without damaging the hood, the blades need to be moved to the service position **C** to prevent damaging the hood.

With the ignition ON, turn the ignition OFF, and within 20 seconds move the wiper switch to the MIST position **B** and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.

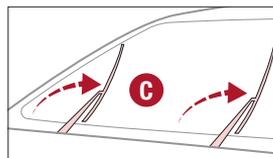

Refer to section 7 in the Owner's Manual for more information.

Turn Signals & Fog Lights*

To operate:

- Turn Signals - Move lever **D** Up/Down for Right/Left Turn Signal
- Fog Lights - Press switch up/down to turn Fog Lights ON/OFF


REMINDER: Headlights must be ON for fog light operation.

One-Touch Lane Change Signal is activated by briefly pressing the Turn Signal Lever slightly for less than 1 second and then releasing **E**. The lane change signal will blink 3 times.

To change how many times the Lane Change Signal blinks (3/5/7), go to User Settings Mode in the LCD Instrument Cluster modes.

Refer to section 4 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

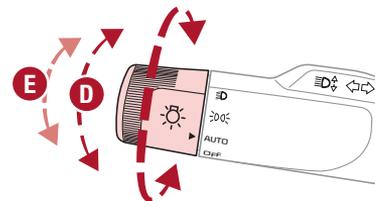

QR CODE

Wiper Service Mode Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos

Smart Cruise Control (SCC)^{†6a,21}

Smart Cruise Control (SCC) is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed. When traffic is detected, the vehicle will slow down to maintain a set distance behind traffic without depressing the accelerator or brake pedal.

With SCC on and activated and the vehicle distance set, when the system detects a vehicle slowing or stopping, the system can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the RES+ button must be pressed to start moving the vehicle.

To set/adjust the SCC speed:

- Accelerate/decelerate to the desired speed
- Press the Driving Assist button **A** to turn system ON and set speed. The CRUISE indicator will illuminate on the instrument cluster and the set speed will automatically activate at the vehicle's current speed
- Press the button **B** inward to pause/resume the cruise control
- Press the +/- button **B** up/down to increase/decrease the set speed. The SET indicator light, set speed and vehicle distance will illuminate on the instrument cluster's LCD screen


To set the vehicle distance: Press the Vehicle Distance button **C** on the steering wheel. Scroll through the selections and the vehicle-to-vehicle distance image changes and displays on the Instrument Cluster LCD.

To pause/resume SCC operation: Press the button **B** to pause or resume Cruise Control.

To turn SCC system OFF: Press the Driving Assist button **A**. The CRUISE indicator on the instrument cluster will turn OFF.

To adjust the sensitivity of SCC: Press the mode button **D** on the Steering Wheel. With the OK button **E**, select Drive Assistance, then SCC Response. Then select Fast, Normal or Slow.

To change the cruise control mode from SCC to standard cruise control, press and hold button **C**. Repeat to switch back to SCC mode (the SCC system must not be activated to change modes).

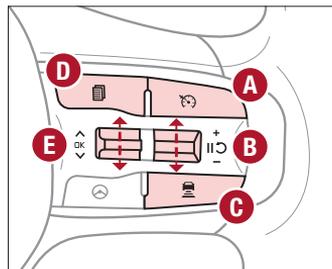

(Type B Steering Wheel buttons)



QR CODE

Smart Cruise Control (SCC) Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos

SCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

See section 5 in the Owner's Manual for more information.

Smart Cruise Control (SCC)^{+6a,21} (continued)


QUICK TIPS

- Pressing the brake pedal cancels the SCC operation
- For SCC to operate:
 - When no vehicle is in front, you must be traveling at a minimum speed of 5 mph
 - When following a vehicle, there is no minimum speed requirement

REMINDERS:

- If SCC is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See Owner's Manual for other conditions
- Keep the system off when not in use to avoid setting a speed which the driver is not aware of

Cruise Control (CC)⁺²¹

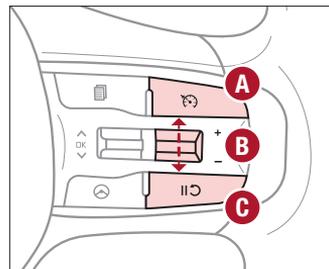

(Type A; Buttons located on Steering Wheel)

- A Driving Assist button:** Press to turn the Cruise Control on/off
- B +/- button:** Press + up to increase and set speed. Press – down to decrease and set speed.
- C Pause/Resume button:** Press to pause Cruise Control. Press again to resume Cruise Control.

QUICK TIPS

- Cruise Control is designed to function above 20 mph
- Cruise Control will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

See section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only. Buttons and button arrangement may vary on actual vehicle.

Navigation-based Smart Cruise Control (NSCC)*†6a

Navigation-based Smart Cruise Control can automatically adjust the vehicle speed when it detects a curved road ahead and when it receives road information from the navigation system.

To turn on NSCC, go to the User Settings in the instrument cluster or the Vehicle Settings* in the audio head unit, by selecting Driving Assistance, Highway Auto Speed Change. When SCC is on and operating, and NSCC is turned on, then NSCC is enabled and the AUTO icon **A** will illuminate white on the Instrument Cluster.

When NSCC detects a curve ahead, activates and reduces the vehicle speed, the AUTO icon **A** will turn green. When the vehicle passes the curved road, the vehicle may return to its previously set SCC speed.

Autoset (Automatic change of set speed) – NSCC automatically changes the set speed of Smart Cruise Control using the speed limit information of the navigation system* to help you drive at a safe speed.

REMINDERS:

- When the ignition is cycled, the system returns to its previous on or off state
- When SCC is turned on and operating, NSCC may activate
- NSCC requires an active navigation subscription
- NSCC is only available on controlled access roads and highways

See section 5 in the Owner's Manual for more information. For more setting information, refer to the Car Infotainment System Quick Reference Guide.

NSCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.




(Display on LCD screen)

Heated Steering Wheel Button*

Press button **A** to turn ON/OFF the steering wheel heater, while the ignition or Engine Start/Stop button is in the ON position.

The steering wheel heater will turn off automatically in 30 minutes or when the button is pressed again to deactivate.

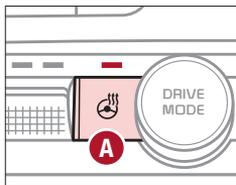

(Located below gear shift)

REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

Refer to section 4 in the Owner's Manual for more information.

Tilt/Telescoping Steering Wheel†‡

To adjust the Steering Wheel, push the lock-release lever **B** down and adjust to the desired angle **C** and distance **D**.


When finished, pull the lock-release lever **B** up to lock Steering Wheel in place.

QUICK TIP

It may be helpful to pull/push the bottom of the Steering Wheel towards/away from you to adjust desired distance prior to adjusting the angle.


Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle.

Refer to section 4 in the Owner's Manual for more information.

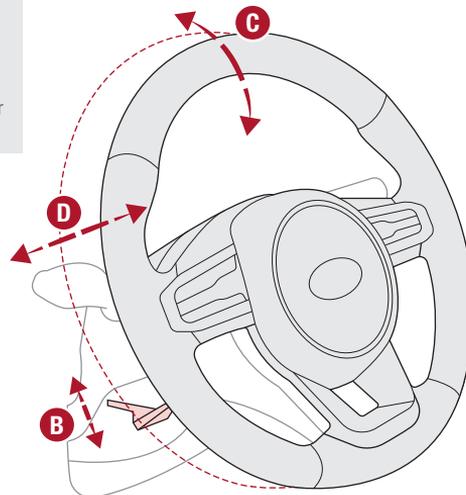

For illustrative purposes only; your steering wheel may differ.

Bluetooth® Wireless Technology†5,21

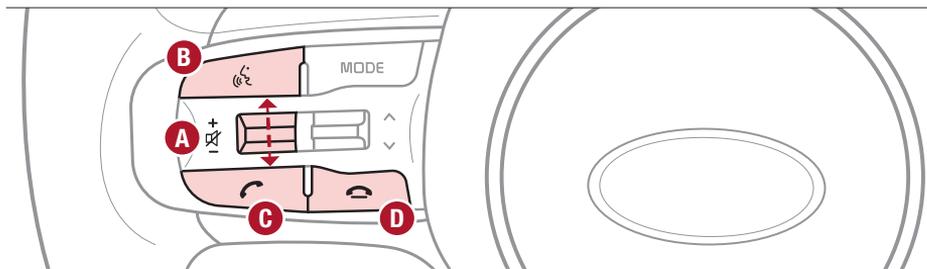

- A Volume button:** Press up/down to raise/lower speaker volume
Mute button: Press to mute the microphone during a call and to mute the audio system speakers, or to pause *Bluetooth*® streaming media
- B Talk button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition

UVO link with Navigation system* – When enrolled with a UVO link subscription, press this button to activate the UVO Voice Assist to use navigation guidance and search destinations

QUICK TIP

When using the voice command feature, wait for the system BEEP before speaking the command.

- C Receive/Place Call button:** Press to receive/place calls.
 If no phone is paired, press button to pair a phone
- D End Call button:** Press to end a call, reject an incoming call or cancel a function

For illustrative purposes only. Your actual display, buttons and/or features may vary.

QUICK TIPS

- The system can register or pair multiple Bluetooth devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and *Bluetooth*® Wireless Technology chip programming, functionality may differ from one phone to another

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information on the audio system, if equipped, refer to the Car Multimedia System User's Manual or the Car Infotainment System Quick Reference Guide. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

Bluetooth® Wireless Technology^{†5,21} (continued)

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future **Bluetooth®** connection requests.

How to Place a Call Using Steering Wheel Controls

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call:

- Option 1: Press the Receive/Place Call button **C** (displays the phone screen with call history)
- Option 2: Press the Talk button **B**. Then say the command "Call {name}" or "Dial {number}", followed by contact name or number

REMINDER: *Bluetooth®* Wireless Technology audio and calling functions are supported when connected to a *Bluetooth®* enabled device

Voice Recognition and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the *Bluetooth®* Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

QUICK TIPS

- The system may register or pair multiple *Bluetooth®* devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- *Bluetooth®* Music Streaming – If the *Bluetooth®* music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C – open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

QR CODE

Voice Recognition Tips Video


To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos

Audio Controls†21

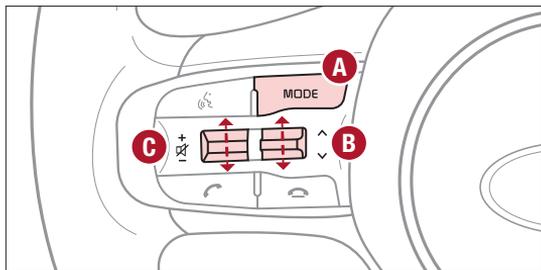

(Buttons located on Steering Wheel)

- A Audio System MODE button:** Press to cycle through FM/AM/SiriusXM®*†19/Media modes
Audio System ON/OFF: Press to turn power on; Press and hold to turn power off

- B Seek/Preset button:**
FM/AM/SiriusXM® Modes: Press to advance through Preset Stations. Press and hold to auto seek
Media Modes: Press to move track up/down. Press & hold to forward/rewind (except for Bluetooth® Audio)

- C Volume button:** Press up/down to raise/lower volume
Mute button: Press to mute all audio (Media pauses in some Media modes when pressed)

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Your vehicle's steering wheel buttons may differ from those in the illustrations.

For more information, refer to the Owner's Manual, Car Multimedia System User's Manual or the Car Infotainment System Quick Reference Guide, depending your audio system.

Android Auto™+3 / Apple CarPlay®+4 Setup

Android Auto™ compatible smartphone setup –

Download the Android Auto™ app from the Google Play™ Store†10. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device.

Wireless Connection setup for Android Auto™ & Apple CarPlay® (Standard Audio System-Value only):

1. Press the SETUP key on the audio head unit
2. Press DEVICE CONNECTION SETTINGS
3. Press PHONE PROJECTION, then ADD NEW

Cable Connection setup for Android Auto™ (Standard Audio System-Value & UVO link with Navigation):

1. Press the SETUP key on the audio head unit
2. Press DEVICE CONNECTION, select Android Auto™ and then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

For more information, refer to the Car Multimedia System User's Manual or the Car Infotainment System Quick Reference Guide.

Cable Connection setup for Apple CarPlay® (UVO link with Navigation only):

1. Connect the Apple CarPlay® compatible iPhone®+11 with the vehicle's USB port using the manufacturer's cable provided with your iPhone®+11
2. Press the SETUP key on the audio head unit
3. Press DEVICE CONNECTION on the screen and select Apple CarPlay®
4. Select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
5. From the audio head unit home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps




QUICK TIPS

- If Android Auto™ / Apple CarPlay® randomly disconnects:
 - Ensure the USB cable is certified by the phone manufacture for both power and data
 - Clean the phones port, which the USB cable connects to, with disposable compressed air
 - The Phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the phone manufactures website for Android Auto / Apple CarPlay app concerns

REMINDERS:

- Android Auto™ compatibility requirements for connection:
 - UVO link with Navigation (USB cable connection only): OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
 - Standard Audio System-Value (USB cable & wireless connection):
 - USB cable connection - OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
 - Wireless connection - OS Android™ 9.0 or higher with data plan for applicable feature(s)
- Apple CarPlay® compatibility requirements for connection:
 - UVO link with Navigation (USB cable connection only): iOS software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Standard Audio System-Value (Wireless connection only): iOS software 10.0 and higher with data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android models. Use the manufacturer's USB cable when wireless feature is not available

Standard Audio System – Value* – FM/AM/SiriusXM® +19/Media (USB, Bluetooth® Audio, My Music)

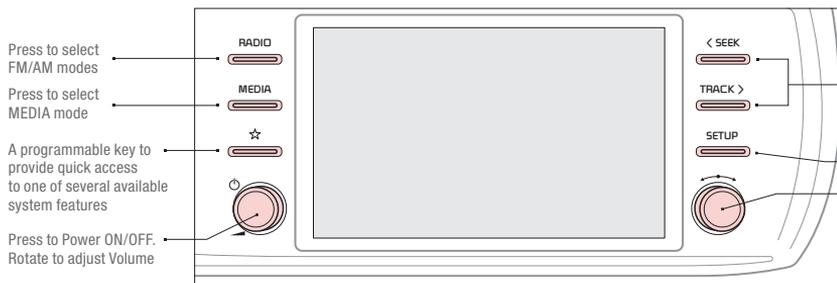

Press briefly to do the following:

- FM/AM mode: Play the previous/next frequency
- MEDIA mode: Change the track, file or title

Press and hold to do the following:

- FM/AM mode: Move quickly through all of the frequencies. When released, the system seeks the next available frequency
- MEDIA mode: Rewinds or fast forwards the track or file (except for Bluetooth® Audio)

Press to display SETUP/Settings mode

Rotate to change Radio Station/Media tracks/ files. Press to select

Your audio system may differ from those in the illustrations.

Sound Settings: To adjust the audio system sound settings:

1. Press the SETUP key on the audio head unit or the on-screen MENU button, when in MEDIA mode
2. Select the on-screen SOUND button, or SOUND SETTINGS
3. Select the menu item (Position, Volume, Tone, Priority, Advanced, Default)
4. Use the on-screen buttons to adjust settings. Press the return button \Rightarrow to save settings

Radio Presets: You can listen to FM, AM and SiriusXM® radio and save frequently used stations

How to Save a Preset: Press the favorite (star) button near the station information. This saves the current station in the selected slot in FM, AM or SiriusXM®

Smart Favorites: For the first ten favorite SiriusXM® channels, you may play live or repeat from the beginning of a song or a program segment. In **Radio** mode, choose SiriusXM®, then select any of the first six favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast

Custom Key ☆: A programmable key to provide quick access to one of several available system features

To Program the Custom Key: Press and hold the Custom key. Select one of the available features you would like the Custom key to open

For further system operations, refer to the Car Multimedia System User's Manual or the Car Infotainment System Quick Reference Guide.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, Bluetooth® Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to BT Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using Bluetooth® Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- Navigation may be available when connected to Android Auto™ or Apple CarPlay® supported smartphones
- Prolonged use of the navigation system in ACC mode may drain the vehicle's battery
- This system supports Android Auto™ (USB & wireless connection) and Apple CarPlay® (wireless connection only)

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

UVO link Activation*†1 (Systems equipped with UVO link only):

Follow these steps to activate your UVO link system:

1. Enter the activation screen on your vehicle's head unit:
 - a. Press SETUP key
 - b. Press UVO icon
 - c. Press Activate UVO
2. Read and agree to Terms of Service and Privacy Policy and press SUBMIT
3. Enter smartphone number or email address to receive a verification code, then press SUBMIT
4. Follow these steps to receive your verification code using your phone SMS or email:
 - a. Check your phone SMS or email for verification code
 - b. Open the link in your SMS or email. A page will open requesting that you create your account

Note: If you already have a Kia Owners Portal account using the email as your login ID, you will need to provide your password prior to receiving the verification code

- c. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT. A page will open displaying your verification code
- d. Enter the code in the head unit and press ACTIVATE
- e. Go back to the page with your verification code and press "I have entered my PIN." A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

For further UVO link operations, refer to the Car Infotainment System Quick Reference Guide.

REMINDER: This vehicle is not equipped with over-the-air system updates.

UVO Assistance*


Virtual Assistant ⓘ **A** - Press to connect to the UVO Center to hear information about the UVO features

UVO Voice Local Search **UVO** **B** - Press to connect to the search function to find points of interest or other locations, like "cafe"

Roadside Assist ⚠ **C** - Press to connect to the UVO Center where you can request vehicle towing services

REMINDER: When in Manual mode, pulling the left and right paddle shifters at the same time will NOT shift gears.

For more information, refer to the Car Infotainment System Quick Reference Guide.

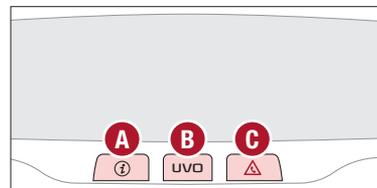

(Buttons on rearview mirror*)

Kia Access with UVO link App Download

Go to an app marketplace to download the new Kia Access with UVO link App. Once you download, make sure you register your vehicle and start an account (refer to UVO link Activation page). Get to know your new Kia and the available convenient features on the app.

QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with a good wireless signal strength in order to use UVO. If these conditions are not met, voice commands may fail or take a long time to execute
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature at least 10 minutes before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within the 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- In order to preserve the vehicle battery, UVO will not turn on seven days after the last ignition was on. You will need to restart the vehicle with a key fob in order to use UVO again



QR CODES

Download the **Kia Access with UVO link App** by clicking this dynamic QR code. Some phone's operating systems may need to be updated to scan dynamic QR codes.



Kia Access with UVO link App Features Guide. Click this dynamic QR code to access the guide. Some phone's operating systems may need to be updated to scan dynamic QR codes



Kia Access with UVO link App Features Guide


The Kia Access with UVO link App Features Guide is a step-by-guide helping you utilize the app to its full potential by detailing how to set up and use each feature and adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Climate
- Schedule Charge
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles

Kia App Screen for illustrative purposes only. Actual App screen and functionality may vary.

For further UVO link operations, refer to the Car Infotainment System Quick Reference Guide.

UVO link with Navigation^{*†1,12} — FM/AM/SiriusXM^{®†118}/Media (USB, *Bluetooth*[®] Audio)

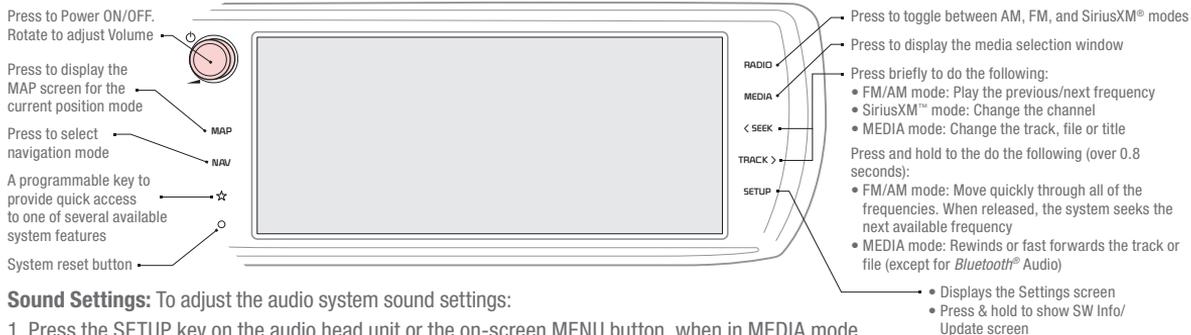

Sound Settings: To adjust the audio system sound settings:

1. Press the SETUP key on the audio head unit or the on-screen MENU button, when in MEDIA mode
2. Select the on-screen SOUND button
3. Select the menu item (Position, Volume, Tone, Priority, Navigation Volume, Advanced, Reset)
4. Use the on-screen buttons to adjust settings

Radio Presets: You can listen to FM, AM and SiriusXM[®] radio and save frequently used stations

How to Save a Preset: Press and hold the desired slot. This saves the current station in the selected slot in AM, FM, or SiriusXM[®]

Smart Favorites: For the first ten favorite SiriusXM[®] channels, you may play live or repeat from the beginning of a song or a program segment. In **Radio** mode, choose SiriusXM[®], then select any of the first six favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast

Custom Key ☆: A programmable key to provide quick access to one of several available system features

To Program the Custom Key: Press and hold the Custom Key. Select one of the available features you would like the Custom Key to open

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth*[®] Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to BT Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using *Bluetooth*[®] Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- At any time, you can interrupt the Voice Command Feedback by pressing the TALK button on the steering wheel
- Prolonged use of the navigation system in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- This system supports Android Auto[™] and Apple CarPlay[®] (USB connection only)

Your audio system may differ from those in the illustrations. For further navigation system operations, refer to the Car Infotainment System Quick Reference Guide.

QR CODE


UVO link with Navigation Videos

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos

Multimedia USB Port & Power Outlets

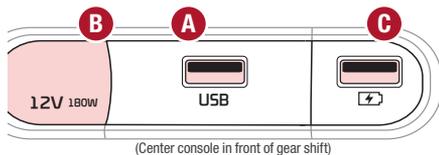

QUICK TIP

The power outlets are inactive when ignition is in the OFF position.

- A Multimedia USB Port:** Use the Multimedia USB Port to connect USB audio and smartphone devices
- B Power Outlet:** Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet

REMEMBERS:

- Using the power outlet (accessory plug) for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) and AC Inverter for prolonged periods of time with the Engine Start/Stop button in the IGN Position (Engine OFF) could cause the battery to discharge
- Kia recommends that you only use USB cables made by your device's manufacturer. Third-party USB cables may cause damage to your device
- The USB data port (Multimedia USB port) is located near the Power Outlets. The USB Charger ports do not support data transfer
- The Multimedia USB Port in the center panel charges slower than the USB Charger Ports throughout the vehicle

Refer to section 4 in the Owner's Manual for more information.

Digital Clock



Press the SETUP key, then the DATE/TIME button to display the Clock setting screen. Then use the onscreen buttons to navigate through setup. To access the manual date and time setting, turn GPS time OFF in the Clock Settings (UVO link with Navigation*).

REMINDER: When needed, Daylight Savings must be enabled in the Clock Settings screen.

For further navigation system operations, refer to the Owner's Manual or the Car Infotainment System Quick Reference Guide.

USB Charger Ports*

The USB Charger Ports are located on the Center Panel inside the Center Console **C** and on the rear of the Center Console **D**.

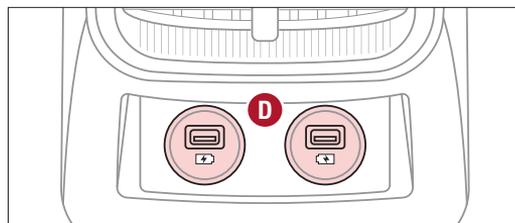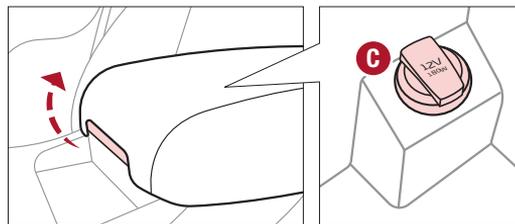

REMINDER: The USB Charger Ports do not support data transfer.

Refer to section 4 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Idle, Stop & Go (ISG) System

The ISG system is designed to reduce fuel consumption by automatically shutting down the engine when the vehicle is at a standstill.

When the ISG system is ON and the vehicle is at a standstill, the engine will stop, and the green AUTO STOP indicator (A) (A) on the instrument cluster will illuminate.

The engine will restart when the brake pedal is released or the shift lever is moved from D (Drive) to the R (Reverse) position or to Manual Shift mode. When engine restarts, the green AUTO STOP indicator on the instrument cluster will turn off.



To deactivate the ISG System, press the ISG OFF button (B). If you press again, the system will be activated.

QUICK TIPS

- If the AUTO STOP indicator (A) (A) is solid yellow, the system is functional, but just has not met all its enabling criteria to activate ISG at that time.
- The ISG system is disabled when:
 - A seat belt is unfastened
 - The hood or a door is opened
 - Battery condition is poor
 - The front or rear defroster is turned on
 - Engine coolant temperature is low
 - The outside ambient temperature is too low/high
 - Emission control devices activate
 - The vehicle is on a steep slope

REMINDERS:

- ISG is active by default at vehicle startup. When ignition is cycled, ISG will turn ON again
- Under certain conditions, the engine will restart automatically even if the brake pedal is still depressed
- If the AUTO STOP indicator (A) is continuously blinking yellow and the ISG button LED is on, please contact an authorized Kia dealer

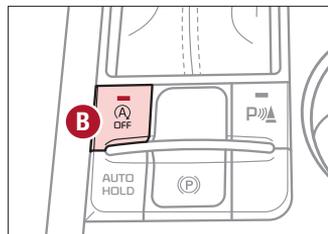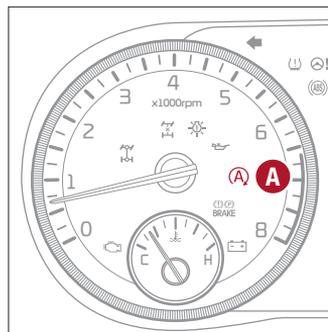

(Button on center console below gear shift)

QR CODE

Idle, Stop & Go Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.

Wireless Smartphone Charging System*

1. Enable Wireless Charging in the User Settings mode, select Convenience then Wireless Charging System
2. Place compatible smartphone on the center of the charging pad
3. Indicator light **A** may change to amber once the wireless charging begins
4. Once charging is complete, the amber light may change to green


QUICK TIPS

- For the wireless charging to occur, all doors (excluding rear hatch) must be closed & the Smart Key Fob must be detected inside the vehicle
- For best results, place the smartphone on the center of the charging pad
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber
- Avoid placing other metal items in the bin while charging as to not impede the charging area

REMINDERS:

- The smartphone must be a compatible phone with Qi function available
- If driver door is opened, charging will be disabled
- Avoid placing other metal items in the bin while charging as to not impede the charging area
- Wireless charging technology allows for a device to be charged using inductive charging; however, device compatibility varies. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance – Device position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate include foreign objects, such as coins or pens, and phone case thickness

For illustrative purposes only. Your actual display, buttons and/or features may vary.

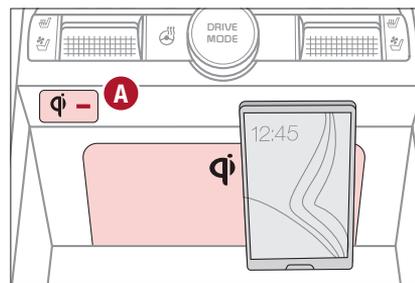

(Located behind Gear Shift)

QR CODE

Wireless Charging Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos

Refer to section 4 in the Owner's Manual for more information.

Automatic Climate Control (Type B)

Climate Control Auto Function

1. Select AUTO for Full Auto Operation. Press once for the air flow high setting, twice for medium setting and once more for the lower setting. The AUTO setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Set desired Temperature
3. Press SYNC to synchronize driver and passenger temperature

Air Flow Modes

To select Air Flow Modes, press the Mode selection buttons:




Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Press the **Front Defrost** button

Defog Inside Windshield:

1. Set **Fan Speed** to highest position
2. Set **Temperature** to highest position
3. Press the **Front Defrost** button

Your Automatic Climate Control system may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.

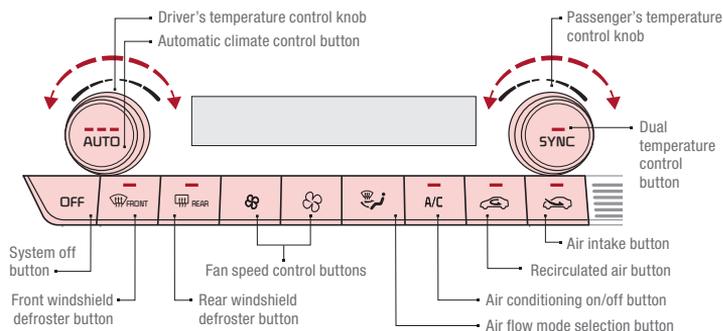

Auto Defogging System (ADS):

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default and will operate when the Climate Control system is ON. To cancel Auto Defogging, press the Front Defrost button for three seconds, when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button for three seconds.

QUICK TIPS

- Defrost mode activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep the inside glass as clean as possible to reduce window fogging

REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

QR CODE

Auto Defogging System (ADS) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

Electronic Parking Brake (EPB)

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.


Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light **EPB BRAKE** is illuminated on the instrument cluster.

Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive.

To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.

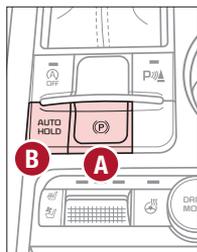

(Located below gear shift)

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- Pull up and hold EPB switch for 3 seconds to increase brake pressure if parked on a decline or incline
- If parked on a steep incline, pull up the EPB switch for more than 3 seconds for a firmer EPB application

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Refer to page 4 for location of Instrument Cluster indicators. Refer to section 5 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.

Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned ON/OFF using the AUTO HOLD button **B** on the center panel below the gear shift. Before Auto Hold will operate, the driver's door, engine hood and trunk must be closed.

The AUTO HOLD indicator on the Instrument Cluster has four states:

White: Standby – With vehicle in Park and at a standstill, when the AUTO HOLD button **B** is pressed on, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

Green: Engaged – When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

Off (not illuminated) – The indicator will turn OFF when the AUTO HOLD button **B** is manually pressed OFF or when the EPB is manually turned ON.

Yellow: Malfunction – When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

REMINDERS:

- Auto Hold only operates when vehicle is in Drive or Neutral. Auto Hold turns off when the ignition is cycled
- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes

Refer to section 5 in the Owner's Manual for more information.

QR CODE

Electronic Parking Brake (EPB) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos

Automatic Gear Shift with Sportmatic® Shifting†20

P: Park

R: Reverse

[+]: Manual Mode Upshift

N: Neutral

[-]: Manual Mode Downshift

D: Drive


Manual Mode: To enter Manual mode, move shift lever from D to left gate **A**.

To shift while in Manual mode, move shift lever up [+]
to upshift or down [-] to downshift.

QUICK TIPS

- Press brake pedal and depress release lock button to move gearshift from N to P, N to R or from P to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

Refer to section 5 in the Owner's Manual for more information.

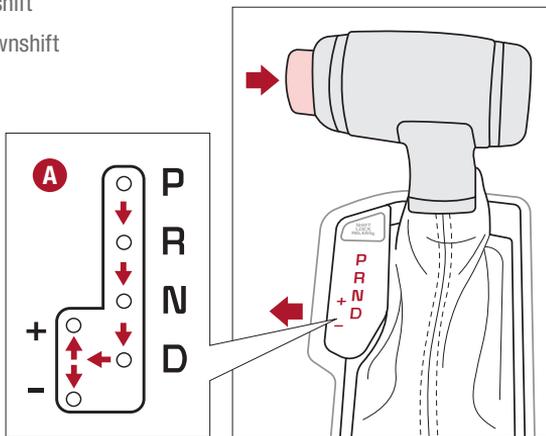

QR CODE

Sportmatic® Shifting Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos

Paddle Shifters*


Paddle Shifters are operable when the shift lever is moved into the left gate of the D position (Manual mode).

Paddle Shifting: Pull the [+]
or [-] paddle shifter once to shift up or down one gear.

REMINDER: When in Manual mode, pulling the left and right paddle shifters at the same time will NOT shift gears.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 5 in the Owner's Manual for more information.

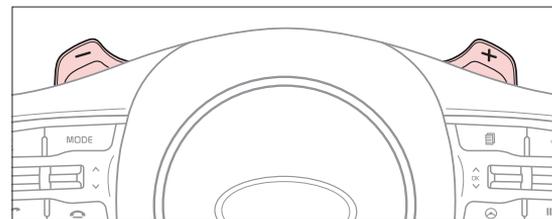

(Paddles on rear side of steering wheel)

Dual Clutch Transmission (DCT)*

Some Kia vehicles are equipped with Dual Clutch Transmission (DCT) for automatic transmissions. The following are unique driving tips for the Dual Clutch Transmission:


- To hold the vehicle stationary on an incline, the service brake or parking brake **MUST** be used or the gear shift **MUST** be in the (P) Park position. If the vehicle is held stationary by applying the accelerator pedal on a slope, the clutch/transmission may overheat, resulting in damage
- Avoid aggressive launches on steep grades as this may result in an overheated clutch and transmission
- A slight time lag may be experienced at takeoff from standstill during aggressive acceleration maneuvers

If the clutch is overheating, an amber warning light*  will be displayed in the instrument cluster. **Should this condition occur, pull over and place the vehicle in Park and idle the engine.**

Refer to section 5 in the Owner's Manual for additional information on DCT operation or call Kia Consumer Affairs for additional information.

Seat Warmers*†18

Toggle button once for high setting (3 LEDs lit), again for medium setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.

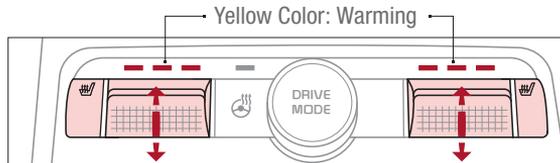

Refer to section 4 in the Owner's Manual for more information.

Seat Warmers*†18 / Ventilated Seats*

Seat Warmers - Press top of button once for high setting (3 LEDs lit), again for medium setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.

Ventilated Seats - Press bottom of button once for high setting (3 LEDs lit), again for medium setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.



QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF by default. To turn system ON again, press the Heated Steering Wheel button
- When the Climate Control System's temperature is turned up to high heat, the Seat Warmers turn on automatically

QR CODE

Heated and Ventilated Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos

REMINDER: Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.


Refer to section 4 in the Owner's Manual for more information.

Driver Position Memory System^{†16}

The integrated system stores into memory the position of the Driver's Seat and the Outside Rearview Mirrors.

To store a seating position into memory, first place the shifter into P (Park) while the ignition is ON. Then:

1. Adjust the driver's seat and outside mirrors
2. Press the SET button **A** on the control panel. System will beep once
3. Press one of the memory buttons **B** within 5 seconds. The system will beep twice when memory has been stored
4. "Driver (1 or 2) set is memorized" will appear on the instrument cluster LCD screen


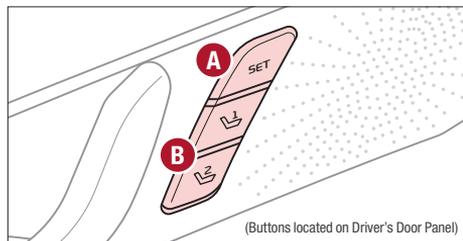


REMINDER: Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

Refer to section 3 in the Owner's Manual for more information.

Power Adjustable Driver's Seat^{*+16}

Move/Press controls to adjust Seat forward/backward, Seat Cushion tilt up/down, Seatback forward/backward or Lumbar up/down/forward/backward.

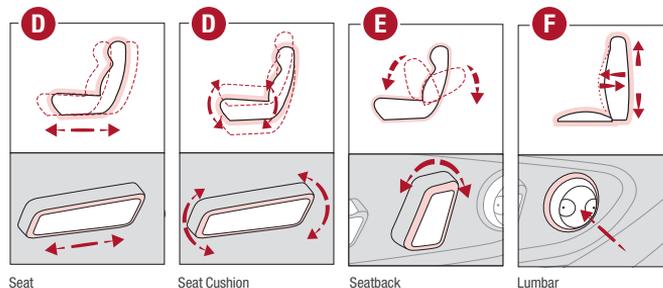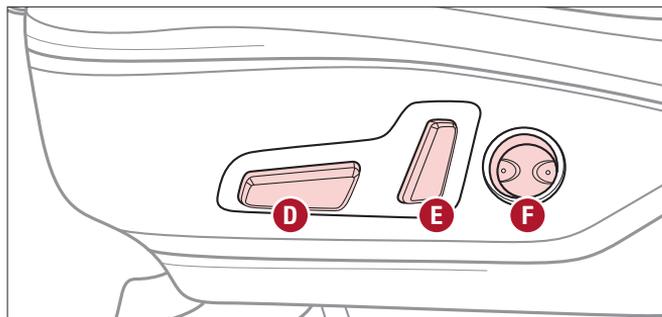

REMINDER: Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 3 in the Owner's Manual for more information.


6-Way Manual Adjustable Driver's Seat*†16

Pull lever **A** to slide Seat forward/backward.

Pull lever **B** up several times to raise Seat Height. Push lever **B** down several times to lower Seat Height.

Pull lever **C** to adjust Seatback recline.

Press **D** to adjust Lumbar support.

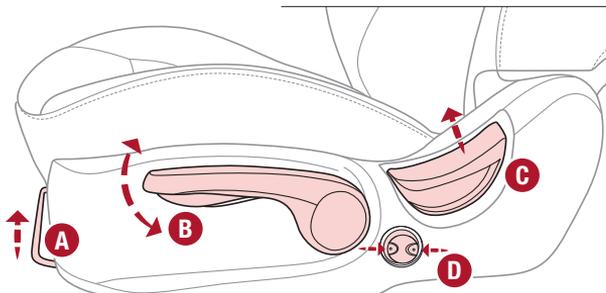

QUICK TIP

When adjusting seat forward or backward, ensure seat clicks or locks into place before driving vehicle.

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 3 in the Owner's Manual for more information.

Front Seat Headrest Adjustment†9


To raise headrest: Pull headrest up to the desired position.

To lower headrest: Press lock **E**, then press the headrest down.

REMINDERS:

- Button may be hard to see if headrest is in its lowest position
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident

Refer to section 3 in the Owner's Manual for more information.

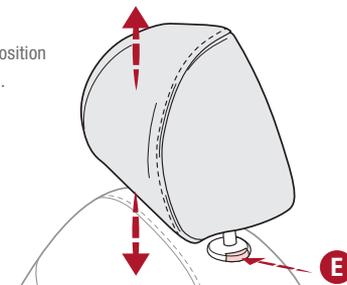

Rear Occupant Alert (ROA) with Door Monitoring

The Rear Occupant Alert (ROA) with Door Monitoring can help alert the driver when a rear passenger may be left in the vehicle. The alert will be a message on the Instrument Cluster stating to "Check rear seats" **F** and a chime will sound.

The factory default is set to OFF. To turn the system ON or OFF, go to User Settings in the Instrument cluster or Vehicle Settings*, on the audio head unit select Convenience, then Rear Occupant Alert and check/uncheck the box.



REMINDER: Always be sure to check the passenger areas before leaving the vehicle.

ROA is not a substitute for one's attention. Always check the vehicle's interior before exiting.

See section 4 in the Owner's Manual for more information.

Image is for illustrative purposes only and may not reflect actual feature or operation.

Map/Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the ignition or Engine Start/Stop button* is OFF.

Map Lamp/Room Lamp


Operation – Push the lens **A** to turn the map lamp ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

Map/Room Lamp Button –

Press button **B** to turn the front and rear room lamps on and off.

Door Mode Button – Press button **C** to enable or disable Door Mode. In Door Mode, the map and room lamps turn on when any door is opened. When all doors are locked or the ignition is on, the map and room lamp will turn off immediately.

Rear Room Lamps – Press the button **D** to turn the rear passenger lamp ON/OFF.

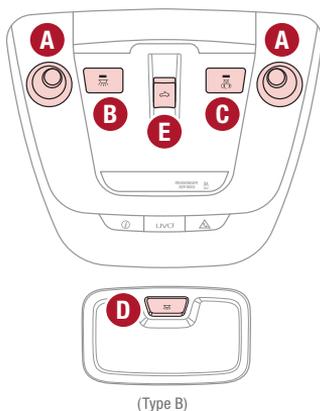

QUICK TIP

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Panoramic Sunroof with Power Sunshade*

The Sunroof and Sunshade operation is controlled through a multi-directional switch/lever. The ignition or Engine Start/Stop button* needs to be in the ON position to operate the sunroof.

To slide the sunshade and sunroof:

- Auto Open: Slide the lever **E** backward to the farthest position and release
- Auto Close (sunroof only): Slide the lever **E** forward to the farthest position and release

To slide the sunshade only:

- Open: Slide the lever **E** partially backward to the first detent position and release
- Auto Close: Slide the lever **E** partially forward to the first detent position and release

To slide the sunroof (with sunshade open):

- Open: Slide the lever **E** backward to the first detent position and release
- Close: Slide the lever **E** forward to the first detent position and release to close sunroof glass only. Slide the lever forward to the farthest position and release to close sunroof glass and sunshade

To tilt the sunroof:

- Raise: Push lever **E** upward
- Lower: Push lever **E** forward

REMINDER: Sunshade needs to remain OPEN while sunroof is open.

QR CODE

Sunroof Operation Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover information.



www.youtube.com/KiaFeatureVideos

QUICK TIP

To stop the sunroof/sunshade at any position, push or pull the sunroof control lever in any direction.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Smart Key*†8

- A** Press to lock All Doors
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors
- C** Press and hold to open Trunk. Then lift by the handle

REMINDER: Trunk lid will partially open. To fully open, lift up manually. The Trunk unlocks when the Smart Key fob is within close proximity to the vehicle.

- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
- E** Press to release Mechanical Key (on reverse side of fob)
- F** Mechanical Key
- G** **Remote Start*** / **Climate Control***: Press for more than two (2) seconds within four (4) seconds after locking doors to start the vehicle. Press once to turn off

Automatic Climate Control System*: Climate control system automatically sets temperature to 72°F


Driver's Door Lock/Unlock button **H**:

- Press button once to unlock Driver's Door
- Press again within 4 seconds to unlock All Doors




Mechanical Key: Use to unlock/lock Driver's Door:

1. Pull out door handle
2. Remove door handle keyhole cover with Mechanical Key by pressing up into slot as shown **I**
3. Insert Mechanical Key **J** and turn right to Unlock Driver's Door
4. Turn twice within 4 seconds to Unlock All Doors
5. Insert Mechanical Key and turn left to Lock All Doors
6. Return keyhole cover to its original position

Note: Use to unlock trunk, lock glove box* and to turn Child Protector Rear-Door Locks.

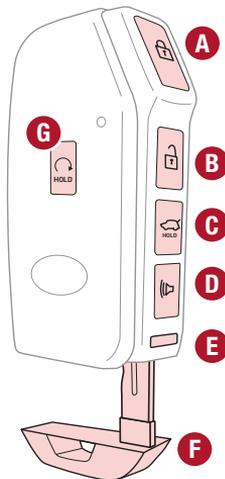

REMINDER: Remote button configuration may vary depending on vehicle options.

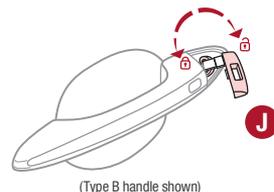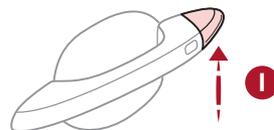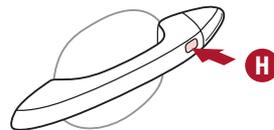

REMINDER: When reinserting the mechanical key, ensure it is pushed all the way in until you hear a click.

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cell phone or smartphone. To help prevent this, store each device separately

For illustrative purposes only. Your actual display, buttons and/or features may vary. See section 4 in the Owner's Manual for more information.

QR CODES

To view videos on your mobile device, snap these QR Codes or visit the listed website. Refer to inside front cover information.

Engine Start/Stop Button & Smart Key Video


Key Fob Video



www.youtube.com/KiaFeatureVideos

Remote Keyless Entry (Folding Key)*


- A** Press to release Folding Key
- B** Press to lock All Doors
- C** Press to unlock Driver's Door.
Press twice in 4 seconds to unlock All Doors
- D** Press and hold to unlock Trunk and manually open
- E** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button

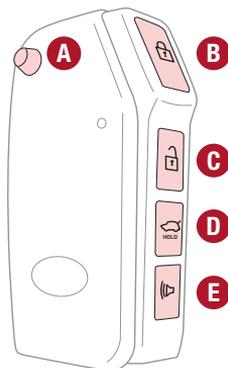

Remote button configuration may vary depending on vehicle options.

Double-Turn Lock/Unlock All


- Turn clockwise once to unlock Driver's Door
- Turn clockwise again within 4 seconds to unlock All Doors
- Turn counterclockwise once to lock All Doors

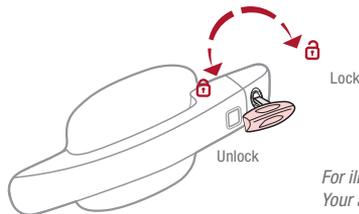

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

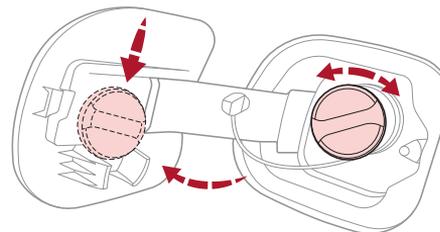


REMINDERS:

- Vehicle must be unlocked first before attempting to open fuel door
- It is normal to hear one click when tightening and for the Fuel Cap to click back when released

Fuel Filler Door Release

To open the Fuel Door, turn off the engine and ensure driver's door is unlocked. Press on the right center edge **F** of the Fuel Filler Door.

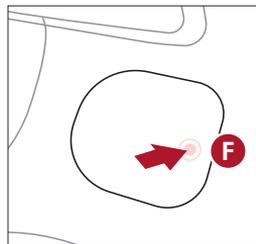

QR CODE

One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover information.





www.youtube.com/KiaFeatureVideos

Trunk Release Buttons

Press the button **A** to unlock the Trunk (located to the left of the steering wheel).

With the Trunk unlocked, press the exterior Trunk Release button **B** (located underneath the Trunk lid) and pull the Trunk lid up by the handle to open.

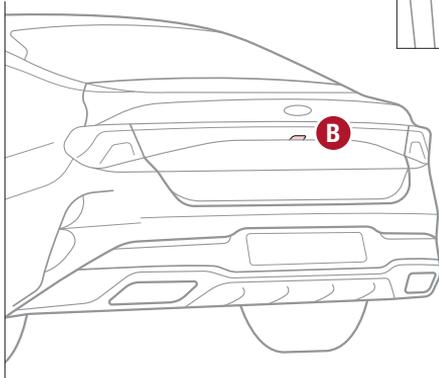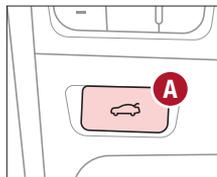

QUICK TIPS


- The Trunk must be unlocked before it can be opened by the Trunk Release Button
- Smart Key* - The Trunk unlocks automatically, can then be opened manually, (tail lights flash two times), and automatically locks when closed (tail lights flash one time), when the Smart Key fob* is within close proximity to the vehicle

Smart Trunk with Auto Open*†14

When the Smart Key fob is on your person and you are within close proximity of the back of the vehicle, the hazard warning lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Trunk is about to open.

Then the alert system will blink and chime two additional times before opening the Smart Trunk.

The Smart Trunk feature is OFF by default. To enable the Smart Trunk, go to User Settings in the LCD Instrument Cluster modes or Vehicle Settings* in the audio head unit (vehicles with Navigation).

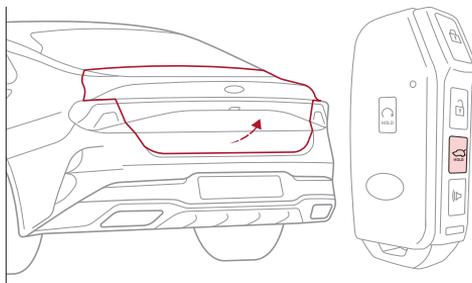

QUICK TIPS

During the Smart Trunk alert, the Smart Power Trunk can be deactivated with the Smart Key by pressing any button on the key fob.

REMINDERS:


- The Smart Key must be outside of the vehicle for the Smart Power Trunk to operate
- All doors are closed and locked after about 15 seconds
- The Smart Trunk feature will not operate when the doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles, a door is not locked or closed, or the Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage to deactivate the Smart Power Trunk function
- When the ignition is on, the Smart Trunk will only operate with the gear shift in the Park (P) position
- Ensure obstacles and people are out of the way of the Smart Trunk

For more information on the Smart Trunk operation, please refer to the Owner's Manual.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Reverse Parking Distance Warning (PDW)*†6a

Reverse Parking Distance Warning (PDW) is a supplemental system that is designed to assist the driver by chiming if any object is detected within the sensing area to the rear and side of the vehicle when backing up. When the ignition is ON, the system is activated.

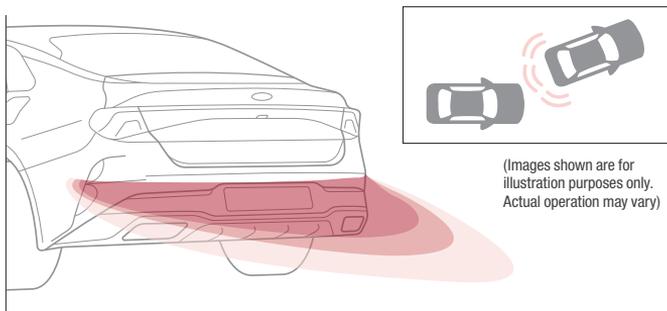

(Images shown are for illustration purposes only. Actual operation may vary)

QUICK TIP

The PDW warning volume can be adjusted in the User Settings in the Instrument Cluster or the Vehicle Settings* on the audio head unit.

REMINDERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

Parking Distance Warning-Reverse is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. Parking Distance Warning-Reverse may not detect every object behind the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Reverse Parking Collision-Avoidance Assist (PCA)*†6a

Reverse Parking Collision-Avoidance Assist (PCA) is designed to detect certain objects/pedestrians behind the vehicle and issues an audible warning and/or applies emergency braking to reduce the possibility of a collision when the vehicle is in reverse.

PCA can be turned on in the User Settings in the instrument cluster or the Vehicle Settings* in the audio head unit by selecting Driver Assistance, Parking Safety and then one of the following: Active Assist, Warning Only, Off.

When a potential collision is detected, the system applies emergency braking for about two seconds. A warning message on the Instrument Cluster will display **A** reminding the driver to press the brake immediately.

REMINDERS:

- PCA is operational when Active Assist is selected in the Vehicle Settings
- PCA will only operate when:
 - The vehicle's speed is below 6 mph
 - The trunk is closed
 - The gear shift is in R (Reverse)
 - Other systems such as Rear View Monitor are operating under normal conditions



Rear View Monitor (RVM)^{†6a}


RVM is a supplemental system that displays the view behind the vehicle through the audio head unit screen while the vehicle is in Reverse.

RVM activates when the:

- Engine Start/Stop button* is in the ON position
- Gear Shift Lever is in the R (Reverse) position

REMINDERS:

- Rear View Monitor is ON by default when the ignition is cycled
- The screen image above is for illustration purposes only. The actual image or graphics may differ in your vehicle
- Through normal use and after inclement weather or washing, the rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens
- While the Rear View Monitor is active the volume will be lowered on all audio modes

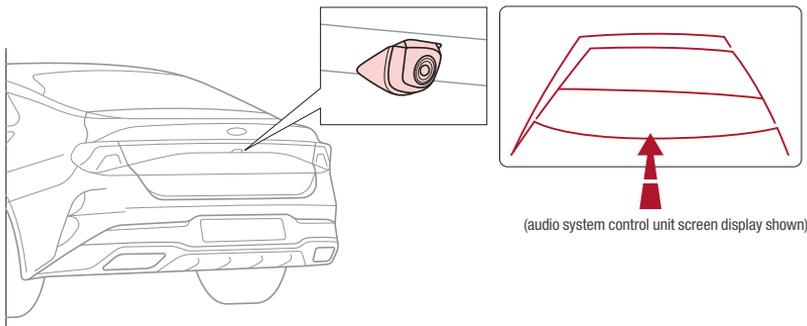


Rear View Monitor is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Sunvisor^{†22}

Use the Sunvisor to shield direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

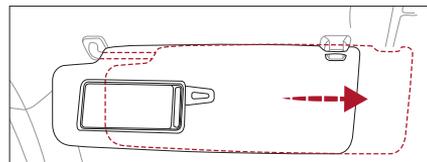


REMINDERS:

- The Sunvisor may impair visibility if not adjusted properly
- Sunvisor may not shield all direct light
- Do not operate the vehicle if Sunvisor is impairing your visibility
- Be aware of your seating position when adjusting or swinging Sunvisor around from the front or side windows


Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood

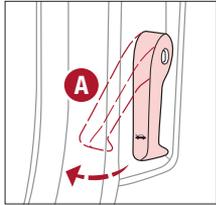

(Located on Driver side kick panel)

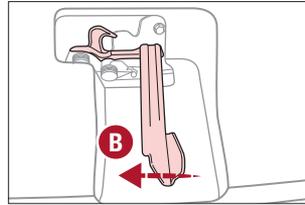

(Located inside of Hood's center)

Closing the Hood:


Lower the Hood by pressing the front center of the Hood. Then, press down to securely lock in place.

REMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in the P (Park) position and setting the parking brake

Child-Protector Rear Door Locks (Manual)*

Locate these locks on the rear edge of the rear passenger doors. Turn the Child-Protector Rear Door Lock to the LOCK position to disable the inner door handles from opening the rear doors.

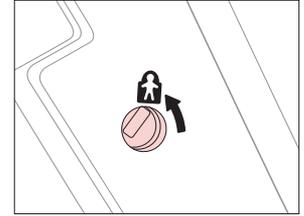

REMINDER: Child-Protector Rear Door Locks are located on rear passenger's door jamb.


Occupant Detection System (ODS)⁺¹³ / Passenger Airbag Off Indicator⁺²

ODS is designed to detect the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy the airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” light will illuminate.

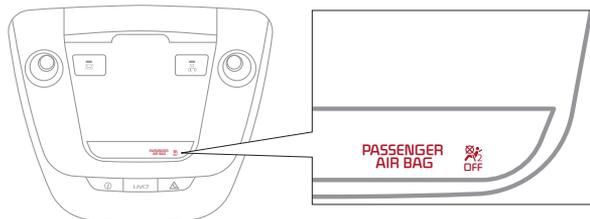

REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.


For more information on the Occupant Detection System / Passenger Airbag Off Indicator, please refer to the Owner's Manual.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Seat Belts⁺¹⁷

To properly fasten your safety belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**

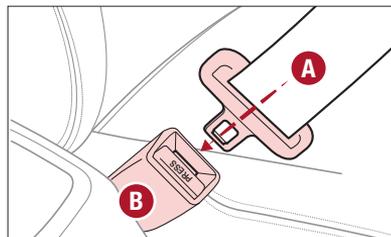

QUICK TIP


The Seat Belt warning chime operates for driver's seat only.

REMINDER: For maximum protection, always wear your Seat Belt.

Seat Belt Retractor Locks⁺¹⁶

Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to help reduce the risk of injury.

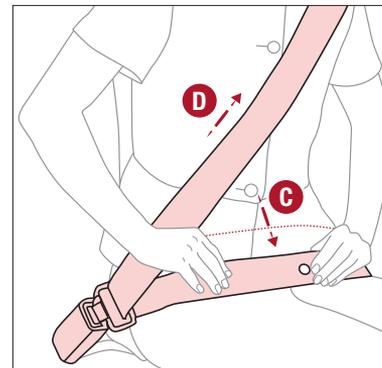

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

- UVO link:** Purchase/lease of certain 2020 and newer Kia vehicles with UVO link includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year UVO link subscription expires, continued access to the full suite of UVO link available on your Kia will require a paid subscription at the then current subscription rate or your use of certain UVO link features may immediately terminate. Use of UVO link is subject to agreement to the UVO Privacy Policy (available at <https://owners.kia.com/us/en/privacy-policy.html>) and Terms of Service (available at <https://owners.kia.com/us/en/terms-of-service.html>). UVO link is transferable to subsequent owner during the original UVO link service term. Only use UVO link when safe to do so. Kia Access with UVO link App is available from the Apple® App Store® or Google Play™. Kia Motors America, Inc. reserves the right to change or discontinue UVO link at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO link features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit <https://owners.kia.com> or your authorized Kia dealer. Apple and App Store are registered trademarks of Apple Inc. Google and logos are trademarks of Google, LLC.
- Airbags:** For maximum protection, always wear your seat belt.
- Android Auto™:** Android Auto is a trademark of Google, Inc. Android™ is a registered trademark of Google, Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- Apple CarPlay®:** Apple® and Apple CarPlay® are trademarks of Apple, Inc., registered in the U.S. and other countries. Apple CarPlay® runs on your smartphone cellular data service. Normal data rates will apply.
- Bluetooth® Wireless Technology:** The *Bluetooth®* word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A *Bluetooth®* enabled cell phone is required to use *Bluetooth®* wireless technology.
- Driver Assist Features – Highway Driving Assist (HDA), Safe Exit Assist (SEA), Blind-Spot Collision-Avoidance Assist (BCA), Rear Cross-Traffic Collision-Avoidance Assist (RCCA), Forward Collision-Avoidance Assist (FCA), Lane Keeping Assist (LKA), Lane Following Assist (LFA), Rear View Monitor (RVM), Parking Distance Warning-Reverse, Smart Cruise Control (SCC), Navigation-based Smart Cruise Control (NSCC), Leading Vehicle Departure Alert (LVDA), Parking Collision-Avoidance Assist-Rear (PCA-R):** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
- Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- Google Play™ Store** is a trademark of Google, Inc. ©2020 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.
- iPhone®:** iPhone is a registered trademark of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
- Smart Trunk with Auto Open:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.
- Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.
- Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- Seat belts:** For maximum protection, always wear your seatbelt.
- Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2020 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
- Sportmatic®** is a registered trademark of Kia Motors America.
- Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.
- Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
- Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.



KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer

- Standard Audio System - Value* – page 32
For more information, refer to the Car Infotainment System Quick Reference Guide.




- UVO link with Navigation* – page 35
For more information, refer to the Car Infotainment System Quick Reference Guide.




- Android Auto™ / Apple CarPlay® Setup – page 31
- UVO link Activation* / UVO Assistance* – page 33
For further UVO operations, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, refer to pages 30-33


- Smart Cruise Control – page 24
Demonstrate operation.

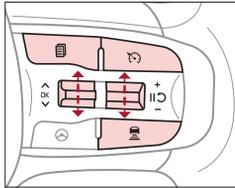

- Wireless Smartphone Charging System* – page 38

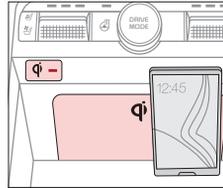

- Bluetooth® Wireless Technology – page 28
Demonstrate operation.

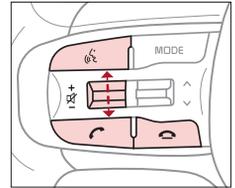

- Tire Pressure Monitoring System (TPMS) – page 5
- Engine Start/Stop Button* – page 20
- Multimedia USB Port – page 36
- Digital Clock – page 36
- Seat Warmers*/Ventilated Seats* – page 42
- Sunvisor – page 50

- Panoramic Sunroof with Power Sunshade* – page 45
- Reverse Parking Collision-Avoidance Assist (PCA) – page 49
- Smart Key* – page 46
- Rear View Monitor (RVM) – page 50
- Passenger Airbag Off Indicator – page 52

DURING DELIVERY

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff & explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

*IF EQUIPPED

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____



K5 CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____


Dealership Name: _____ Sales Consultant: _____ Date: _____

BEFORE DELIVERY

- Confirm "Good Battery" with a Kia battery tester
- Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any supplemental audio user's guides)


KEY FEATURE WALKTHROUGH

- Automatic Climate Control – page 39
Demonstrate Air Flow modes, Defog and Defrosting Windshield.

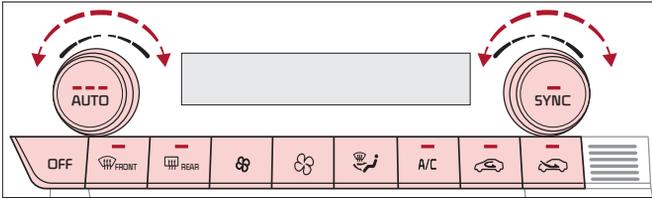


Automatic Climate Control

- Electronic Parking Brake (EPB) and Auto Hold – page 40
Demonstrate operation.

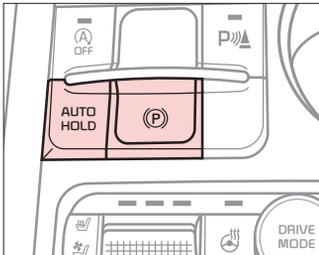

- Windshield Wipers & Washers – page 23

- To operate:
- Move lever Up/Down to change Wiper modes
 - Press switch Up/Down to adjust Intermittent Wipe Speed
 - Pull lever to spray and wipe

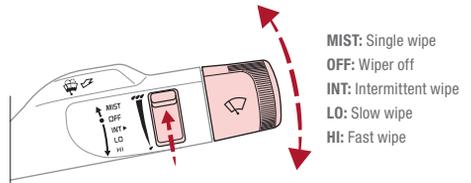

- MIST: Single wipe
- OFF: Wiper off
- INT: Intermittent wipe
- LO: Slow wipe
- HI: Fast wipe

KIA K5 NORMAL MAINTENANCE SCHEDULE TURBO

P=Perform • R=Replace • I=Inspect⁸

(up to 60,000 miles)^A

MAINTENANCE ITEMS - TURBO	MAINTENANCE INTERVALS (MILES)									
	6,000	12,000	18,000	24,000	30,000	36,000	42,000	48,000	54,000	60,000
Add fuel additive ^C	P	P	P	P	P	P	P	P	P	P
Rotate tires	P	P	P	P	P	P	P	P	P	P
Engine Oil & Oil Filter (Every 6,500 miles)	R	R	R	R	R	R	R	R	R	R
Climate control air filter	R	R	R	R	R	R	R	R	R	R
Battery condition	I	I	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I	I	I
Driveshaft and boots	I	I	I	I	I	I	I	I	I	I
Suspension mounting joints	I	I	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I	I	I
Intercooler, in/out hose, air intake hose	I	I	I	I	I	I	I	I	I	I
Air cleaner filter	I	I	I	R	I	I	I	R	I	I
Brake fluid	I	I	I	I	I	I	I	I	I	I
Parking brake	I	I	I	I	I	I	I	I	I	I
Cooling System	I	I	I	I	I	I	I	I	I	I
Fuel lines, hoses and connections	I	I	I	I	I	I	I	I	I	I
Fuel tank air filter/fuel tank and cap ¹⁰		I		I		I		I		I
Dual clutch transmission fluid (Every 37,500 miles)						I				
Transfer case oil (4WD) (Every 37,500 miles) ^F						I				
Spark Plugs (Every 42,000 miles)							R			
Valve clearance ^F										I
Drive belts (First 60,000 miles, then every 15,000 miles) ⁶										I

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO link account by logging into your Kia Access with UVO link App or your account on <https://owners.kia.com> (Vehicles equipped with UVO link only – See page 33 for setup information)

A. See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule.

B. And, if necessary, adjust, correct, clean or replace.

C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

E. Transfer case oil and rear differential oil should be changed anytime they have been submerged in water.

F. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.

G. The drive belt should be replaced when cracks occur or tension is reduced excessively.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

© 2020 Kia Motors America, Inc. All rights reserved.

Consumer - Roadside Assistance: 1-800-333-4KIA (4542)

‡ If equipped.

Part Number: DL210-PS-004R1