

# SEDONA

## Features & Functions Guide



**Delivery First**  
The priority that delivers more

# GETTING TO KNOW YOUR **SEDONA**

## Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

## Using This Guide

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations help to ensure the instructions are easy to follow.

This **Features & Functions Guide**, and the specific operational and safety information it provides, is not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact and assumes no liability in connection with such changes.

[www.kia.com](http://www.kia.com)

Consumer - Roadside Assistance<sup>†16</sup>  
1-800-333-4KIA (4542)

See Back Pages for Vehicle Maintenance Schedule

*Always check the Owner's Manual for complete operating information and safety warnings.*

†LEGAL DISCLAIMERS ON BACK INSIDE COVER

## ESSENTIAL FEATURES

Air Conditioning / Automatic Climate Control*	28
Android Auto™ / Apple CarPlay® Setup	22
Audio System – Standard Audio System*	23
Audio System – UVO eServices Activation*	24
Audio System – UVO eServices*	25
Audio System – UVO eServices with Premium Navigation*	26
Aux/Multimedia USB Ports, Power Outlets, USB Charger Ports & AC Inverter*	31
Bluetooth® Wireless Technology	20
Cruise Control	17
Digital Clock*	31
Passenger Airbag Off Indicator	51
Service Interval Mode	07
Smart Key*	42
Tire Pressure Monitoring System (TPMS)	05
Trip Modes / Trip Computer	06
User Settings	07
Windshield/Rear Wipers & Washers	16

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.*

\*IF EQUIPPED



SEDONA FEATURES & FUNCTIONS GUIDE

VIDEOS & QR CODES	02
-------------------	----

### INSTRUMENT CLUSTER

Instrument Cluster Overview	03
Indicators & Warning Lights	04
Tire Pressure Monitoring System (TPMS)	05
Fuel Economy	05
Drive Mode Integrated Control System*	06
ECO Mode (Active ECO)*	06

### VEHICLE SETTINGS

LCD Instrument Cluster Modes	07
Trip Modes / Trip Computer	07
User Settings	08
Service Interval Mode	08

### DRIVER'S PANEL

Electronic Stability Control (ESC)	09
Hill-Start Assist Control (HAC)	09
Instrument Cluster Control	09
AC Inverter*	09
Blind-Spot Collision Warning (BCW)	10
Rear Cross-Traffic Collision Warning (RCCW)*	10
Lane Departure Warning (LDW)*	11
Forward Collision-Avoidance Assist (FCA)*	12
Manual Folding Mirrors*	12
Power Windows, Window Lock & Central Door Lock	13
Power Folding Outside Mirrors*	13
Power/Heated Outside Mirrors*	13
Automatic Door Lock/Unlock	13
Fuel Filler Lid Release Button	13
Reverse Parking Aid Function*	14
Engine Start/Stop Button*	14

### STEERING WHEEL CONTROLS

Tilt/Telescoping Steering Wheel	15
Headlights & High Beams	15
Turn Signals & Fog Lights*	16
Windshield/Rear Wipers & Washers	16
Cruise Control	17
Smart Cruise Control (SCC) with Stop & Go System*	18
Audio Controls	19
Bluetooth® Wireless Technology	20

### AUDIO SYSTEMS

Android Auto™ / Apple CarPlay® Setup	22
Standard Audio System*	23
UVO eServices Activation*	24
UVO eServices*	25
UVO eServices with Premium Navigation*	26

### CENTER PANEL

Surround View Monitoring (SVM)*	27
Automatic Climate Control*	28
Manual Climate Control*	30
Digital Clock*	31
Aux/Multimedia USB Ports, Power Outlets, USB Charger Ports & AC Inverter	31
Wireless Smartphone Charging System*	32
Electronic Parking Brake (EPB)* / Auto Hold*	33
Automatic Gear Shift with Sportmatic® Shifting	34
Heated Steering Wheel*	35
Seat Warmers / Ventilated Seats*	35

### SEATING

Front Seat Headrest Adjustment	36
Driver Position Memory System*	36
Power Adjustable Driver's Seat*	37
Manual Adjustable Driver's Seat*	37
2nd-Row Seat	38
2nd-Row Walk-In Seat*	38
2nd-Row Tumble (Center) Seat*	39
Unfastening Center Seat Belt	39
3rd-Row Seat - Folding and Stowing	40

### OTHER KEY FEATURES

Remote Keyless Entry (Folding Key)*	41
Double-Turn Lock/Unlock All	41
Smart Key*	42
Map/Room Lamps	43
Sunvisor	43
Sunroof Operation*	44
Parking Distance Warning—Forward* and Reverse*	45
Rear View Monitor	45
Power Sliding Doors	46
Smart Power Liftgate*	46
Hood Release Lever and Latch	48
Fuel Cap / Malfunction Indicator (Check Engine Light)	48
Child-Protector Rear Door Lock	48
Driver Attention Warning (DAW)*	49
HomeLink® with Auto-Dimming Rearview Mirror*	50

### SAFETY FEATURES

Occupant Detection System (ODS) / Passenger Airbag Off Indicator	51
Seat Belts	51

LEGAL DISCLAIMERS . . . . . See Inside Back Cover

NORMAL MAINTENANCE SCHEDULE . . (Back Cover)

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your mobile device using the built-in QR Code Reader or a downloaded QR Code Reader App.

After opening the QR Code Reader App on your mobile device, the app will utilize your device's camera. Center the code in the camera viewing area. With some apps, as soon as the app recognizes the code, it will launch the corresponding video.

With other apps, you will have to snap or “take a picture” of the code. The app will then launch the corresponding video.

For operation specifics, refer to the instructions that come with the QR Code Reader app.

You can also view the videos by visiting the following website: [www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

### QUICK TIPS

1. If you're having trouble scanning codes, check the following:

- The code should be centered and focused in your mobile device's camera screen
- Consider moving your device closer to or farther away from the code
- The code should be well lit, without significant shadow
- Avoid scanning from a significant angle
- Confirm that the device's app supports 2D QR Code scanning
- Try another QR Code Reader App; not all apps are created equal

2. After scanning, if a “connecting” message appears and then nothing happens or there's a “connection error” message, this typically indicates that your device is having trouble connecting to the Internet

### QR CODE

#### One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

**REMINDER:** When accessing videos on your mobile device, standard cellular data rates may apply.

## Instrument Cluster Overview


- A** Tachometer
- B** Turn Signal Indicators
- C** Speedometer
- D** Engine Temperature Gauge
- E** Indicators & Warning Lights
- F** Gear Shift Position Indicator
- G** Odometer / Trip Computer / Tripmeter
- H** Fuel Gauge

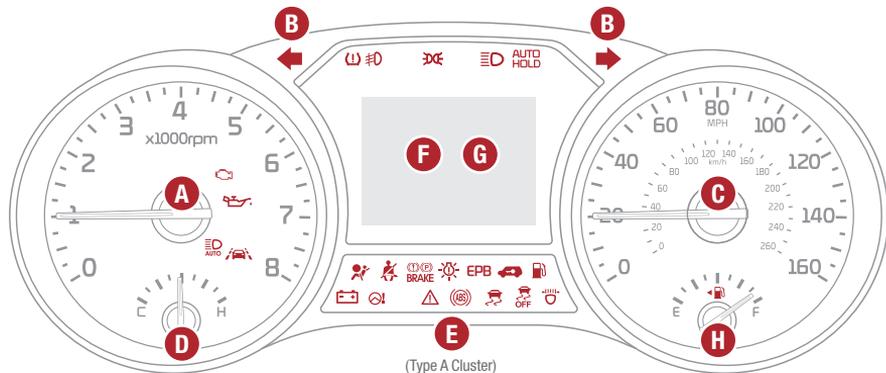

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

## Indicators & Warning Lights

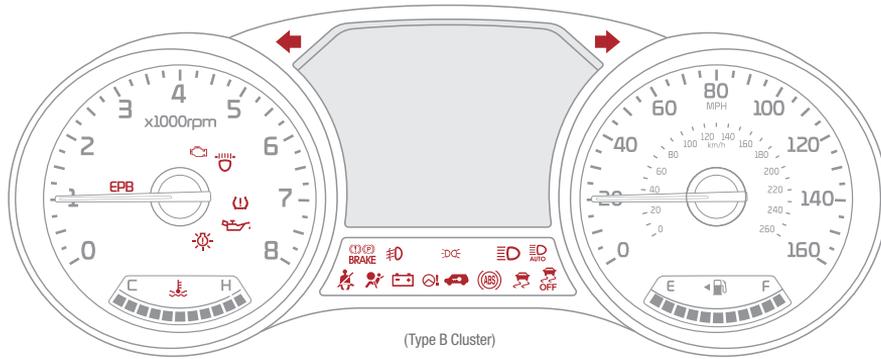

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

- |  |  |  |   |  |   |
|--|--|--|---|--|---|
|  | ECO Mode Indicator Light*  |  | AUTO HOLD Indicator*  |  | Forward Collision-Avoidance Assist (FCA) Warning Light* |
|  | Malfunction Indicator Lamp (MIL)   |  | High Beam Assist Indicator*   |  | Electronic Stability Control (ESC) Indicator Light      |
|  | Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator |  | Seat Belt Warning Light   |  | Electronic Stability Control (ESC) OFF Indicator Light  |
|  | Engine Oil Pressure Warning Light  |  | Airbag Warning Light  |  | Low Fuel Level Warning Light                            |
|  | Electric Parking Brake (EPB) Warning Light*  |  | Charging System Warning Light   |  | CRUISE Cruise Indicator Light*                          |
|  | Adaptive Front-Lighting System-Height (AFS-H)* Warning Light*                          |  | Electronic Power Steering (EPS) Warning Light*  |  | SET Cruise SET Indicator                                |
|  | Master Warning Light   |  | Immobilizer Indicator Light*  |  | Door Ajar Warning Light*                                |
|  | Parking Brake & Brake Fluid Warning Light  |  | ABS Anti-Lock Braking System (ABS) Warning Light  |  | Liftgate Open Warning Light*                            |
|  | Front Fog Light Indicator*   |  | Electronic Brake Force Distribution (EBD) System Warning Light (Two separate indicators on Instrument Cluster lit at same time) |  | Sunroof Open Warning Light*                             |
|  | Light ON Indicator Light   |  | KEY OUT Indicator*  |  | COMFORT Mode Indicator Light*                           |
|  | Washer Fluid Warning Light*  |  | Lane Departure Warning (LDW) System* Indicator Light  |  | Icy Road Warning Indicator Light*                       |
|  | High Beam Indicator  |  |   |  | LED Headlamp Warning Indicator*                         |

## Tire Pressure Monitoring System (TPMS)<sup>†26</sup>

 The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The indicator  is designed to illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn off the Low Tire Pressure Light . See the front driver's door jamb for PSI specification. The Low Tire Pressure Position Indicator  is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate. See dealer for service.

## Fuel Economy

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

Refer to section 4 in the Owner's Manual for more information or snap the QR Code above to view a video.


ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

### QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for at least 20 minutes tires and are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

### REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, visible when the door is opened
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

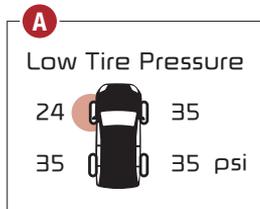

*This illustration is for demonstration purposes only. Actual image on vehicle may vary.*

*Refer to section 6 in the Owner's Manual for more information.*

### QR CODES

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

#### Tire Pressure Monitoring System Video



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

#### Fuel Economy Video


 


[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Drive Mode Integrated Control System\*

The Drive Mode may be selected depending on the driver's preferences and road conditions.

To cycle through the different Drive Modes **A**, press the DRIVE MODE button **B**. The Instrument Cluster will display COMFORT or ECO when selected. When in Normal mode, it will not display in the Instrument Cluster.

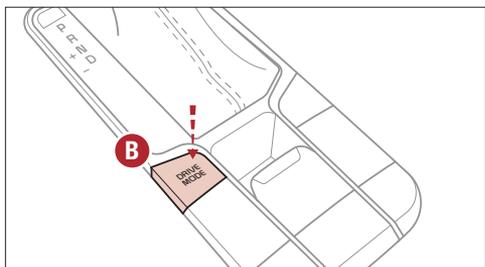

(Located on Center Panel below Gear Shift)\*

### REMINDERS:

- The system is turned ON and in Normal mode when the ignition is in the ON position
- When ECO mode is selected, the indicator will display and the system remains on, even when the ignition is cycled
- Steering effort may be slightly increased in Sport mode

Your vehicle's buttons may differ from those in the illustrations. Refer to section 5 in the Owner's Manual for more information.


## ECO Mode (Active ECO)\*

The Active ECO system is designed to help improve fuel economy by controlling several vehicle components. When activated, it can help optimize drivetrain operations such as engine power and transmission to help improve fuel economy.

To turn ON, press the DRIVE MODE button **B** and scroll through the options until in the ECO mode. The green ECO indicator light **C** in the instrument cluster will illuminate, indicating that Active ECO is operating.

The Active ECO system will remain on even when the ignition is cycled.

To turn Active ECO OFF, press the DRIVE MODE button **B** again and change to another mode.

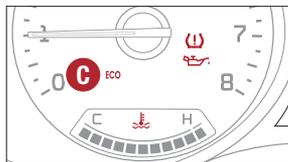

(Located in Instrument Cluster. Type C Cluster shown)

### QUICK TIPS

To help improve your fuel economy:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned

Image is for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.

### QR CODE

#### Drive Mode Integrated Control System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.


Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## LCD Instrument Cluster Modes

Press the Mode button **A** to cycle through different LCD Instrument Cluster Modes:

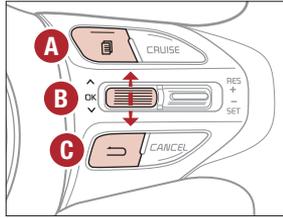

(Type A; Buttons located on Steering Wheel)



**Trip Computer Mode:** Displays driving information for tripmeter, fuel economy, etc.



**Turn-by-Turn Mode\*:** Displays the state of the navigation



**Assist Mode\*:** Displays the state of the Smart Cruise Control with Stop & Go, Lane Departure Warning, Tire Pressure Monitoring System



**User Settings Mode:** Change settings of the doors, lamps and other features



**Master Warning Mode:** Informs on low tire pressure warnings, Blind-Spot Collision Warning (BCW)\* system malfunction and other systems

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*Refer to section 4 in the Owner's Manual for more information.*

## Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving on the display when the Engine Start/Stop button is in the ON position.

To cycle through the LCD Instrument Cluster modes, press the Mode button **A**.

Trip Computer:


- To select and enter Trip Computer mode , press the Select/Reset (OK) button **B** up/down and then press again to enter
- To cycle through and select the different screens (Fuel Economy, Accumulated Info, Drive Info, Digital Speedometer, Smart Shift\*), press the Select/Reset (OK) button **B** up/down and then press again to enter
- When displaying TRIP A or TRIP B screens, press and hold the Select/Reset (OK) button **B** to reset the Tripmeter to zero
- Press the Return button\* **C** to go back to the previous mode/item (Button only available with Type B cluster)

### REMINDERS:

- Appearance of Tripmeter display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

*Your vehicle's steering wheel buttons may differ from those in the illustrations.*

*Refer to section 4 in the Owner's Manual for more information.*

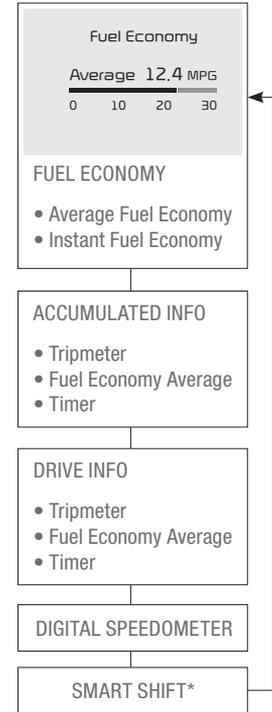


(Type B Cluster)

## User Settings

To enter the User Settings mode in the LCD Instrument Cluster Modes, press the Mode button **A** when the vehicle is at a standstill and with the Engine Start/Stop button\* in the ON position and select User Settings ⚙️ by pressing the OK button **B**.

You can navigate the selections on the display by pressing the OK button **B** up/down, and then selecting the item by pressing the OK button **B** again.

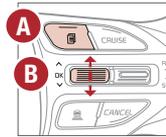

(Type B; buttons located on right side of steering wheel)

### User Settings Mode:

#### Driving Assistance\*

- Smart Cruise Control w/ Stop & Go Reaction\*
- Forward Collision-Avoidance Assist (FCA)\*
- Forward Collision Warning (FCW)\*
- Driver Attention Warning (DAW)\*
- Blind-Spot Collision Warning (BCW)\* Timing
- Blind-Spot Collision Warning (BCW)\* Sound
- Rear Cross-Traffic Collision Warning (RCCW)\*

#### Door/Liftgate

- Automatically Unlock
- Two-Press Unlock
- Smart Liftgate\*

#### Lights

- One-Touch Turn Signal
- Headlight Delay\*

#### Sound

- Parking Distance Warning Volume\*
- Welcome Sound\*

Refer to section 4 in the Owner's Manual for more information.

#### Convenience

- Seat Easy Access\*
- Welcome Mirror/Light\*
- Wiper/Lights Display\*
- Welcome Light\*
- Auto Rear Wiper\*
- Gear Position Pop-up\*
- Icy Road Warning\*

#### Service Interval

- Enable Service Interval
- Adjust Interval
- Reset

#### Other Features

- Fuel Economy Auto Reset
- Fuel Economy Unit
- Temperature Unit
- Tire Pressure Unit\*

#### Language\*

- Choose the language

#### Reset

- Reset to factory defaults (except language and service interval)

## Service Interval Mode

To enter Service Interval Mode, press the Mode button **A**, and scroll to User Settings ⚙️ by pressing the OK button **B** up/down. Then press the OK button **B** again to enter. Then scroll to Service Interval. System will display the number of miles remaining until next service is due, as well as the type of service due.

When service is required, the following will be displayed: **Service Required**.

To reset the Service Interval Mode system, press and hold the Select/Reset button **B** for more than 1 second.

Press the Mode button **A** to go back to the previous mode/item. To turn **Service In OFF**, go to User Settings.

### Service Interval Setting

To set the service interval in User Settings mode:

- Press the Mode button **A** to cycle to User Settings and press the Select/Reset button **B** to enter
- If Service Interval is OFF, press the Select/Reset button **B** to turn ON
- Press the Select/Reset button **B** up/down to select/change the interval setting
- Press the Select/Reset button **B** again to select the interval



(Type B cluster)

These images are for illustrative purposes only. Your vehicle's information may be different. Refer to section 4 in the Owner's Manual for more information.

## QR CODES

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

### LCD Display Video



### LCD Display: Maintenance Video



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Electronic Stability Control (ESC)<sup>†8</sup>

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible.

Press the ESC OFF button **A** to turn Traction Control OFF/ON. Press again to turn ON.

To turn OFF both the Traction Control and Stability Control, press and hold for more than 3 seconds. Press again to turn ON.

### REMINDERS:

- ESC is turned ON by default at vehicle startup. If vehicle power is cycled, ESC will turn ON again
- The ESC Indicator Light  in the instrument cluster will illuminate whenever the ESC is in operation

Refer to section 5 in the Owner's Manual for more information.

## Hill-Start Assist Control (HAC)<sup>†8</sup>

HAC helps prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline. HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

### QUICK TIPS

- HAC provides a 2-second delay before the vehicle may start rolling backwards
- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator – this is normal HAC operation

### REMINDERS:


- HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline

Refer to section 5 in the Owner's Manual for more information.

## Instrument Cluster Control

With parking lights/headlights ON, press button **B** (+) or (-) to adjust the brightness of the instrument panel illumination.


**REMEMBER:** The Instrument Cluster Control does not adjust brightness on the audio head unit screens. Use the display settings in the Setup menu to adjust the brightness on the screen.

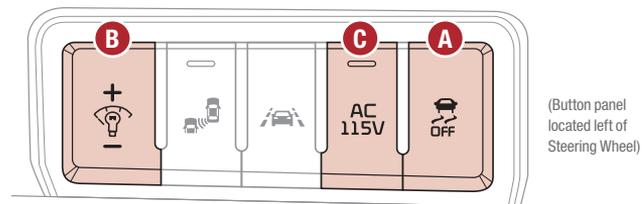

Refer to section 4 in the Owner's Manual for more information.

## AC Inverter\*

The AC Inverter supplies 115V/100W electrical power to operate accessories or equipment. Press the AC Inverter button **C** to activate.

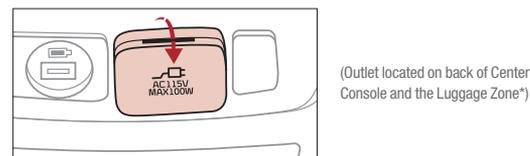

Refer to section 4 in the Owner's Manual for more information.

## Blind-Spot Collision Warning (BCW)\*†6

The BCW system uses radar sensors to help alert the driver in certain situations if it detects an approaching vehicle in the driver's blind spot area before changing lanes. To enable BCW system, go to the User Settings > Driver Assistance > Blind-Spot Collision Warning. To turn BCW on, press the BCW button **A**.

The system will become active when the vehicle is traveling faster than 20 mph and will alert the driver if another vehicle is detected by the radar sensor.

### Blind-Spot Collision Warning (BCW)

**1st-stage alert:** When another vehicle is detected within the BCW system boundary **B**, or a vehicle approaches at a high speed, a yellow indicator will illuminate on the outside rearview mirrors **C**.

**2nd-stage alert:** When the 1st-stage alert is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert.

#### REMINDERS:

- The BCW system will not show a warning if the vehicle speed is only 6 mph above the surrounding vehicles
- If the BCW is turned ON and the ignition is cycled, the BCW system returns to ON

Refer to section 5 in the Owner's Manual for more information.

## Rear Cross-Traffic Collision Warning (RCCW)\*†6

If the RCCW system sensors detect approaching vehicles from the rear left or rear right side of the vehicle **D**, the system will sound an audible alert, the yellow-flashing indicators on the outside rearview mirror will illuminate and a message will appear on the LCD screen when these conditions are met:


- The gear shift is moved into Reverse
- The vehicle is moving slower than 6 mph

To turn the RCCW system on, go to User Settings > Driver Assistance > Rear Cross-Traffic Collision Warning.




#### REMINDERS:

- When vehicle power is cycled, RCCW will remain in the previous state
- When a vehicle is approaching within the sensing range and traveling between 2.5 and 22 mph, the RCCW system will show a warning

Refer to section 5 in the Owner's Manual for more information.

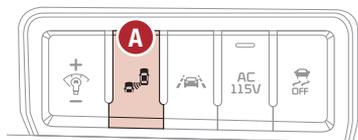

(Button panel located left of Steering Wheel)

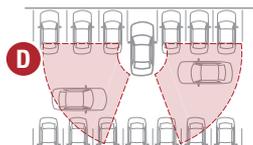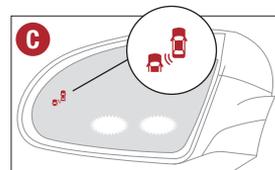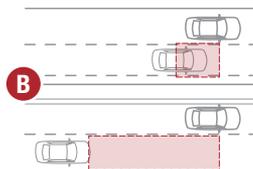

### QR CODE

#### Blind-Spot Collision Warning w/ RCCW Video

To view a video on your mobile device, snap this QR code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

The BCW and RCCW systems are supplemental systems. Do not solely rely on these systems and always pay attention to drive safely.

Images are for illustrative purposes only and may not reflect actual feature or operation.

## Lane Departure Warning (LDW)\*†6

Lane Departure Warning system is designed to detect the lane markers using a front view camera on the windshield and can warn the driver when the vehicle starts departing from the lane.

With the Engine Start/Stop button in the ON position, press the LDW button **A** to turn the system ON. The instrument cluster indicator  will initially illuminate white. It will remain white when the vehicle is traveling slower than 40 mph and the system does not detect the lane markers. When the LDW system detects the lane markers, the LDW icon will illuminate green.

If LDW detects that you are moving outside of your lane, the system may issue a warning on the LCD screen and an alert may sound.


The system will operate under the following conditions:

- The vehicle speed exceeds approximately 40 mph
- The LDW system recognizes the lane the vehicle is traveling in
- The vehicle is between the lane markers

### REMINDERS:

- LDW will not issue a warning if the turn signal or hazard signal is activated
- If the LDW system is set on or off and the ignition is cycled, the system returns to its previous state

Refer to section 5 in the Owner's Manual for more information.

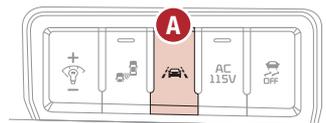

(Button panel located left of Steering Wheel)



When the LDW sensor does not detect the lane traveling in, the lane is not illuminated



When the LDW sensor detects the lane traveling in, the lane is illuminated



When the LDW sensor detects the vehicle veering outside of the lane traveling in, the lane the vehicle is crossing will blink (shown in both images at left)



### QR CODE

#### Lane Departure Warning Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

*Lane Departure Warning (LDW) is not a substitute for safe and proper driving. Always drive safely and use caution. LDW may not always alert the driver if the vehicle is driven outside of its lane.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

## Forward Collision-Avoidance Assist (FCA)\*†6

FCA is designed to help alert the driver and, under certain conditions, temporarily apply emergency braking when rapidly approaching a vehicle that is slowing down, braking or stopped. Initially, FCA provides Forward Collision Warning (FCW) when it detects a potential collision with a vehicle or pedestrian in front, emitting an audible warning and visual alert on the instrument cluster.

If the system detects that the collision risk has increased, FCA automatically applies the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision.

To turn the FCA system on, go to User Settings > Driver Assistance > Forward Collision-Avoidance Assist. The alert settings (Early, Normal, Late) can also be adjusted in the User Settings.

FCA / FCW will become active when the:

- Engine Start/Stop button is ON
- Vehicle is traveling faster than approximately 6 mph
- Electronic Stability Control (ESC) is ON

### REMINDERS:

- FCA / FCW will be activated by default when vehicle power is cycled on, even when previously set to off
- FCA / FCW will not operate when the vehicle is traveling faster than approximately 50 mph
- If FCA is operating and the ESC (Electronic Stability Control) is turned off, the FCA system is automatically turned off
- When FCA is off, the FCA warning indicator is on in the Instrument Cluster

Refer to section 5 in the Owner's Manual for more information.




## Manual Folding Mirrors\*

To fold the mirrors in manually, pull the mirror towards the window.

### QUICK TIP

If needed, pull the mirror firmly until it folds

Refer to section 4 in the Owner's Manual for more information.

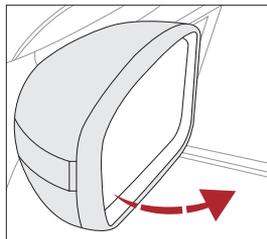

### QR CODE

#### Forward Collision-Avoidance Assist Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

*Forward Collision-Avoidance Assist (FCA)\* / Forward Collision Warning (FCW)\* are not substitutes for safe and proper driving. Always drive safely and use caution. FCA / FCW may not always alert the driver when the vehicle is approaching another vehicle.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

## Power Windows, Window Lock & Central Door Lock

**A** Pull/Press to operate Front Windows Auto Up/Down\*

### QUICK TIP

Press button again to stop Auto Up/Down function.

**B** Press to Unlock/Lock All Doors

**C** Press to disable Rear Passenger Windows and Rear Sunroof\* passenger controls

**REMINDER:** When **C** is pressed, window controls for the Rear Passenger Windows are disabled.

Refer to section 4 in the Owner's Manual for more information.

### QUICK TIPS

- Auto Door Lock/Unlock\* will engage when the gear shift is moved into or out of the P (Park) position
- To turn Auto Door Lock/Unlock\* OFF, go to User Settings\* in the LCD Instrument Cluster modes

## Power Folding Outside Mirrors\*

Press the L or R buttons **D** to select the mirror to adjust.

Press button arrows **E** left/right or up/down to adjust mirror position.

Toggle button **F** left/right to unfold/fold the outside rearview mirrors.

Toggle button **F** to center to automatically fold/unfold mirrors when:

- The Smart Key\* Lock/Unlock buttons are pressed
- The door outside handle button is pressed


### QUICK TIPS

- The mirrors will automatically unfold when the Smart Key\* is within close proximity to the vehicle
- To automatically fold mirrors when exiting vehicle, press the LOCK button once on the Smart Key\*

**REMINDER:** To lock position of mirrors, toggle switch to the neutral (center) position.

Refer to section 4 in the Owner's Manual for more information.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

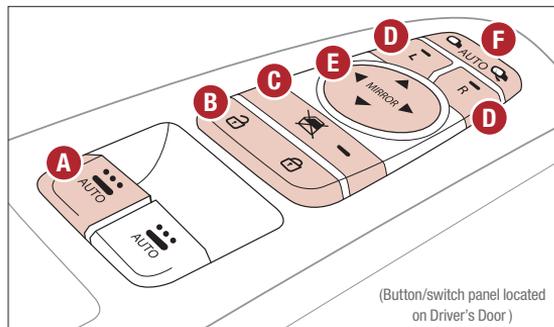

Button configuration may vary depending on vehicle model.

## Power/Heated Outside Mirrors\*

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. The Rear Window Defroster button\* is located on the climate control system panel.

Refer to section 4 in the Owner's Manual for more information.

## Automatic Door Lock/Unlock

When the gear shift is moved into or out of P (Park), all doors will Lock/Unlock. Refer to the User Settings on how to turn Auto Door Lock/Unlock ON/OFF.

Refer to section 4 in the Owner's Manual for more information.

## Fuel Filler Lid Release Button

Press the Fuel Filler Lid Release button to release the fuel door.

Refer to section 4 in the Owner's Manual for more information..

(Button located left of Steering Wheel)



\*IF EQUIPPED

## Reverse Parking Aid Function\*


The left or right mirror buttons **A** need to be depressed for the Reverse Parking Aid Function to operate.

When the gear shift lever is moved into R (Reverse) and while the vehicle is moving backwards, the outside rearview mirrors **B** will rotate downward to aid in reverse parking.

**To turn OFF the function, press the L or R buttons again.**

The outside rearview mirrors will automatically return to their original positions when:

- The Engine Start/Stop Button is in the OFF position
- The gear shift lever is moved to any position except R (Reverse)
- Outside rearview mirror switches are not depressed

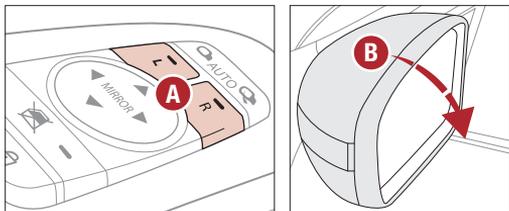

(Button/switch panel located on Driver's Door)

**REMINDER:** When the outside rearview mirror buttons (L or R) **A** are not depressed, the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.

Refer to section 4 in the Owner's Manual for more information.

## Engine Start/Stop Button\*†9

**To start the engine:**

1. Depress the brake pedal
2. Press the ENGINE START/STOP button while the gear shift is in P (Park)



**To turn the engine OFF:** Press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, you must have the Smart Key fob inside the vehicle.

### QUICK TIPS

To use electrical accessories:

#### ACC position

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once (amber light)

#### ON position

- When already in the ACC position (orange light) and without depressing the brake pedal, press the ENGINE START/STOP button again (reddish orange light)
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice (reddish orange light)

Keeping the vehicle in ACC or the ON position for extended periods of time without turning the engine on may discharge the vehicle's battery.

### REMINDEES:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob battery is dead, with the lock button facing the ENGINE START/STOP button, hold the fob up against the ENGINE START/STOP button and press to start the engine while pressing the brake pedal

Refer to section 5 in the Owner's Manual for more information.

### QR CODE

#### Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Tilt/Telescoping Steering Wheel<sup>†25</sup>

To adjust the Steering Wheel, press the Lock-Release Lever **A** down and adjust **B** to the desired angle and **C** distance.

When finished, pull the Lock-Release Lever **A** up to lock the Steering Wheel in place.

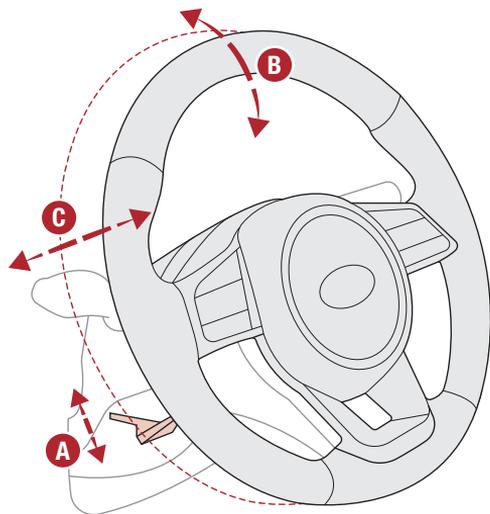

### QUICK TIP


It may be helpful to pull/push the bottom of the Steering Wheel towards/away from you to adjust the desired distance prior to adjusting the angle.

Refer to section 4 in the Owner's Manual for more information.

## Headlights & High Beams

### To operate:

- Rotate the switch to change the Headlight function
- Push the lever to turn High Beams ON
- Pull the lever to flash Headlights / High Beams

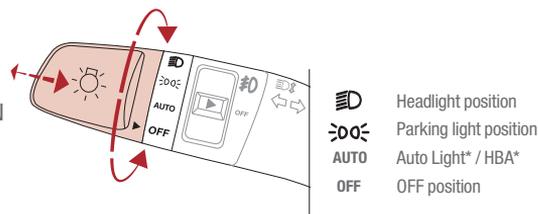

**AUTO Light function\*** — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

**High Beam Assist (HBA)\*** — The High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from oncoming vehicles and road conditions.

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator will illuminate.

### REMINDERS:

- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously


Refer to section 4 in the Owner's Manual for more information.

## Turn Signals & Fog Lights\*

To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Fog Lights - Press switch **A** up/down to turn Fog Lights ON/OFF

**REMINDER:** Headlights must be ON for Fog Light operation.

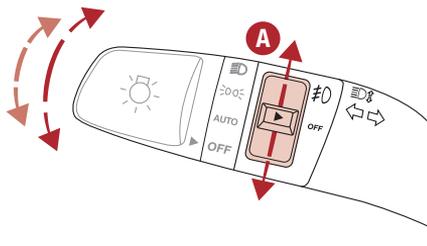

The **One-Touch Lane Change Signal** is activated by briefly pressing the Turn Signal Lever slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times (3/5/7) the Lane Change Signal blinks, go to the User Settings Mode in the LCD Instrument Cluster modes.


Refer to section 4 in the Owner's Manual for more information.

This illustration is for demonstration purposes only. Actual feature on vehicle may vary.

## Windshield Wipers & Washers

To operate:

- Move lever Up/Down to change wiper modes
- Press button **B** Up/Down to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

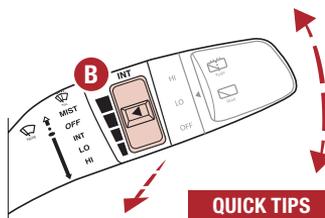

**MIST:** Single wipe

**OFF:** Wiper off

**INT:** Intermittent wipe

**LO:** Slow wipe

**HI:** Fast wipe

### QUICK TIPS


- Pressing button **B** up increases Intermittent wipe frequency and wipe speed. Pressing the button down decreases the frequency of wipes
- Set the wiper to the OFF position when the wiper is not in use

Refer to section 4 in the Owner's Manual for more information.

## Rear Wiper & Washer

To operate:

- Rotate Rear Wiper switch to change Wiper modes
- Push to spray and wipe

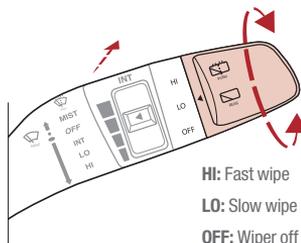

**HI:** Fast wipe

**LO:** Slow wipe

**OFF:** Wiper off


### QUICK TIP

LO and HI sets the wiper speed. There is no intermittent wipe function on the Rear Wipers.

These illustrations are for demonstration purposes only. Actual feature on vehicle may vary.

Refer to section 4 in the Owner's Manual for more information.

## Cruise Control†23

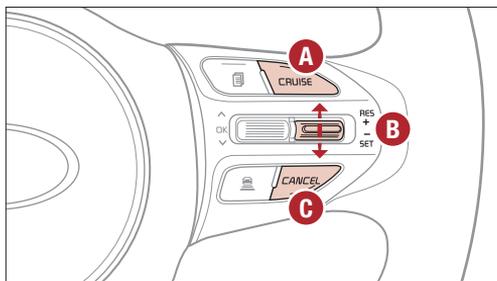

- A CRUISE Control ON/OFF button:** Press to turn the Cruise Control ON/OFF (CRUISE indicator will illuminate on the Instrument Cluster when ON)
- B Resume Cruising Speed button:** Press up to resume or increase the cruising speed  
**Set Cruising Speed button:** Press down to set or decrease the cruising speed
- C Cruise Control CANCEL button:** To cancel the Cruise Control setting, do one of the following:
  - Press the brake pedal
  - Press the CANCEL button

### QUICK TIPS

- Cruise Control is designed to function above 20 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

**REMINDER:** Cruise Control is a part of Smart Cruise Control with Stop and Go\* and can be set as the operating mode. To switch from Smart Cruise Control (SCC) to Cruise Control, press and hold the CRUISE button **A** (the SCC system must not be activated to change modes). Repeat to switch back to SCC mode.

*Your vehicle's steering wheel buttons may differ from those in the illustrations.*

*Refer to section 5 in the Owner's Manual for more information.*

## Smart Cruise Control (SCC) with Stop & Go System\*†6,23

The Smart Cruise Control (SCC) with Stop & Go System is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed. When traffic is detected, the vehicle will slow down to maintain a set distance behind traffic without depressing the accelerator or brake pedal.

With the SCC on and activated and the vehicle-to-vehicle distance set, when the system detects a vehicle slowing or stopping, it can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, the SCC system re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the RES+ button must be pressed to start moving the vehicle.


### To set/adjust the SCC speed:

- Press the CRUISE button **A** to turn the system ON. The CRUISE indicator will illuminate on the instrument cluster. Accelerate/decelerate to the desired speed.
- Press the RES+/SET-button **B** down to set the speed. The SET indicator light will illuminate. The set speed and vehicle-to-vehicle distance will illuminate on the LCD screen. Press the RES+/SET- button **B** up/down to increase/decrease the set speed.

**To adjust the vehicle-to-vehicle distance setting **C****, press the SCC button **D** on the steering wheel. Images on the LCD screen **E** will change when scrolling through the settings.

**To cancel SCC operation:** Press the CANCEL button **F** or press the brake pedal. The CRUISE indicator on the instrument cluster will turn OFF.

**To turn the system OFF,** press the CRUISE button **A**. The CRUISE indicator on the instrument cluster will turn OFF.

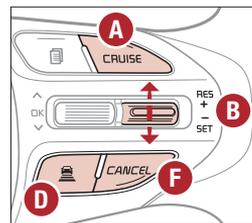

(Type B; buttons located on right side of Steering Wheel)



**REMINDER:** Distances are approximate, based on 56 mph vehicle speed. The SCC vehicle-to-vehicle distance increments are based on vehicle speed.



### QR CODE

#### Smart Cruise Control (SCC) with Stop & Go Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

*Images are for illustrative purposes only and may not reflect actual feature or operation. Actual images or buttons on vehicle may vary.*

*Refer to section 5 in the Owner's Manual for more information.*

## Smart Cruise Control (SCC) with Stop & Go System<sup>\*†6,23</sup> (continued)

### QUICK TIPS

To change the Cruise Control mode from SCC to standard Cruise Control, press and hold CRUISE button **A** (see previous page). Repeat to switch modes again (The SCC system must not be activated to change modes).

For the SCC System to operate:

- When no vehicle is in front, you must be traveling at a minimum speed of 20 mph
- When following a vehicle, there is no minimum speed requirement

When following a vehicle, the system will automatically adjust your cruise speed based on the vehicle detected in front. It may even bring the vehicle to a complete stop if necessary.


### REMINDERS:

- When the ignition is cycled, the SCC is turned on, which is the default setting. The speed setting will need to be reset when ignition is cycled
- If the SCC system is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed that the driver is not aware of
- In standard Cruise Control, the driver needs to manually assess the distance from other vehicles as the system will not apply brakes to slow down automatically in order to turn SCC ON/OFF
- The SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive) and various other conditions. See Owner's Manual for other conditions

*The SCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.*

*Refer to section 5 in the Owner's Manual for more information.*

## Audio Controls<sup>†23</sup>

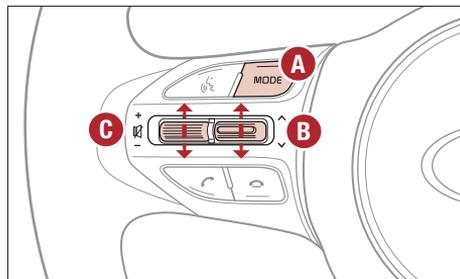

**A Audio MODE button:** Press to cycle through the FM/AM/SiriusXM<sup>®\*\*†20</sup> Media Modes; Audio System ON/OFF: Press to turn the power on

**B Seek/Track button:**  
FM/AM/SiriusXM<sup>®\*\*</sup> Modes: Press up/down to advance through Preset Stations. Press and hold to auto seek  
Media Modes: Press up/down to move the track up/down. Press and hold to fast forward/rewind (except for *Bluetooth*<sup>®</sup> Audio)


**C Volume button:** Press up/down to raise/lower the volume  
**Mute button:** Press to mute all audio

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. For further audio system operation, refer to pages 22-26.*

*Your vehicle's steering wheel buttons may differ from those in the illustrations.*

*Refer to section 4 in the Owner's Manual for more information.*

## Bluetooth® Wireless Technology†5,2,3

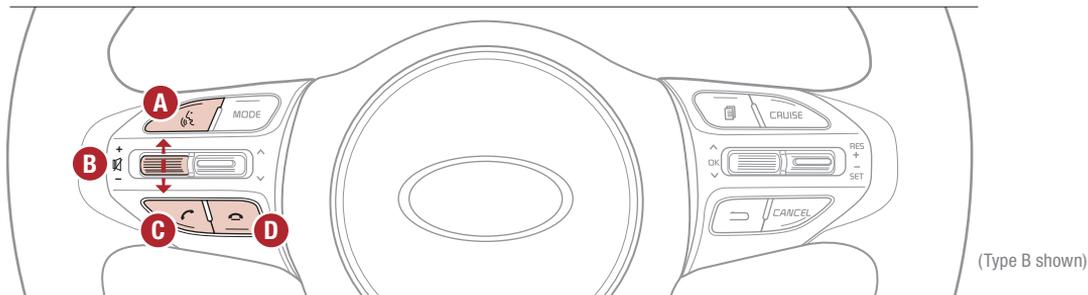

- A Talk button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition
- B Volume button:** Press up/down to raise/lower the speaker volume  
**Mute button:** Press to mute the microphone during a call and to mute the audio system speakers, or to pause Bluetooth® streaming media
- C Receive/Place Call button:** Press to receive/place/transfer calls. If no phone is paired, press the button to pair a phone
- D End Call button:** Press to end a call or cancel a function

For illustrative purposes only. Your actual display, buttons and/or features may vary.

### QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Phone book transfer upload time varies by phone model and with the number of phone book entries
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information, if equipped, refer to the Car Multimedia System User's Manual. For Bluetooth® Wireless Technology FAQs, go to [www.kia.com](http://www.kia.com), Owners section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA.

## Bluetooth® Wireless Technology\*†5,23 (continued)

### Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

#### QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future Bluetooth® connection requests.

### How to Place a Call

Below are methods for placing a call using the Steering Wheel controls:

When using the voice command feature\*, waiting for the system BEEP before speaking the command.

- Option 1: Press the Receive/Place Call button **C** (displays the phone screen with call history)
- Option 2: Press the Talk button\* **A**. Then say the command "Call {name}" or "Dial {number}" followed by contact name or number

For more information, refer to the Car Multimedia System User's Manual.

### Voice Recognition\* and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, \*, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

#### QUICK TIPS

- *Bluetooth®* Music Streaming – If the *Bluetooth®* music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C. Open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

#### QR CODE

### Voice Recognition Tips Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Android Auto™<sup>†3</sup> / Apple CarPlay®<sup>†4</sup> Setup\*

### Android Auto™\*

Setting up Android Auto™:

1. From an Android Auto™ compatible device, download the Android Auto™ app from the Google Play™ Store<sup>†11</sup>
2. Open the Android Auto™ app and proceed with the on-screen instructions to complete setup on the mobile device


How to start Android Auto™:

1. Press the SETUP key on your audio system's control panel
2. Press the DEVICE CONNECTION button, select Android Auto™ then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

### Apple CarPlay®\*

Setting up and starting Apple CarPlay®:

1. On the head unit, press the SETUP key
2. Press the DEVICE CONNECTION button, select Apple CarPlay® then select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
3. Connect the Apple CarPlay® compatible iPhone®<sup>†12</sup> with the vehicle's USB port using the manufacturer's cable provided with your iPhone®
4. From the vehicle's home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

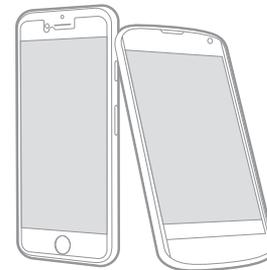

#### REMINDERS:


- Android Auto™ compatibility requirements: USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android™ smartphone and data and wireless plan for applicable feature(s).
- Apple CarPlay® compatibility requirements: Apple Lightning cable, latest iOS software, iPhone® 5 or later and data and wireless plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Using an approved USB cable provided by your smartphone manufacturer is recommended
- Using unapproved USB cables may cause a phone projection error or a system malfunction, black screen, no sound, disconnection, etc.
- Phone projection may not work due to a defect in the phone.

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of the vehicle, and handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*

*For further UVO eServices operation, refer to the Car Multimedia System User's Manual. For other audio system information, refer to pages 22-24.*

## Standard Audio System\*

– FM/AM/Media (USB, AUX, *Bluetooth*® Audio, My Music)\*

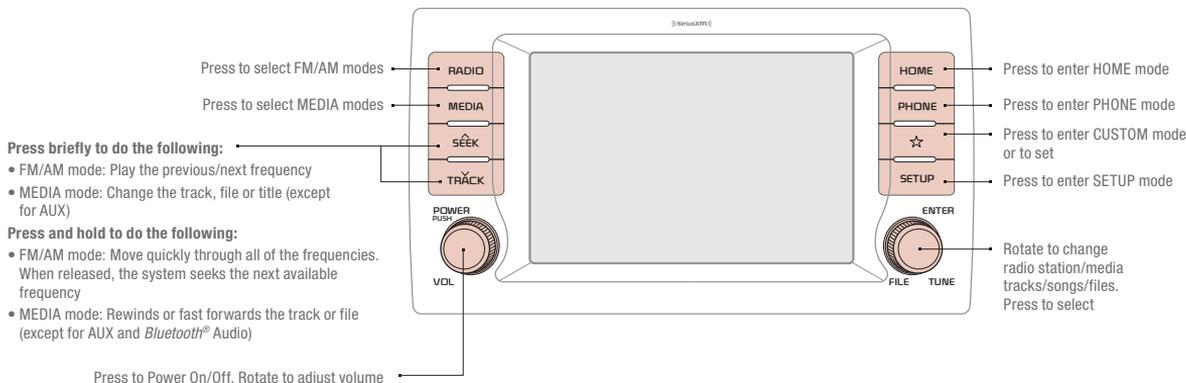

**Radio Presets:** You can listen to FM and AM radio and save frequently used stations.

**How to Save a Preset:** Press and hold the desired slot\*. This saves the current station in the selected slot.

**Custom Key ☆:** A programmable key to provide quick access to one of several available system features.

**To Program the Custom Key:** Press and hold the Custom Key. Select one of the available features you would like the Custom Key to open.

**Sound Settings –** To adjust the Standard Audio Systems sound settings:

1. Press the SETUP key on the audio control unit or the on-screen MENU button, when in MEDIA mode
2. Select the on-screen SOUND button
3. Select the menu item (Position, Tone, Speed Dependent Volume, Beep)
4. Using the touchscreen, press arrows to adjust the settings

## QR CODE

### Standard Audio System Videos

To view these videos on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## QUICK TIPS

- Navigation may be available when connected to Android Auto™ or Apple CarPlay® supported smartphones
- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge
- Prolonged use of the audio control unit in ACC mode may drain the vehicle's battery

**REMINDER:** Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help reduce driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

*Your vehicle's audio system may differ from that in the illustration.*

*For further UVO eServices operation, refer to the Car Multimedia System User's Manual.*

## UVO eServices Activation<sup>\*†1</sup> (Systems equipped with UVO eServices only)

Using a compatible smartphone to access your app store or marketplace, download the Kia UVO eServices app<sup>†1</sup>. In your smartphone's settings, *ensure that location services are enabled*. Using the Kia UVO eServices app<sup>†1</sup>, register for a new <https://owners.kia.com/> account. Follow the "In Car Setup Instructions" on the Kia UVO eServices app to complete the UVO eServices Activation.


**REMINDER:** This vehicle is not equipped with over-the-air system updates.

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*

*For further UVO eServices operation, refer to the Car Multimedia System User's Manual.*

## UVO eServices\*†1

– FM/AM/SiriusXM®†20/Media (USB, My Music, AUX, *Bluetooth*® Audio)

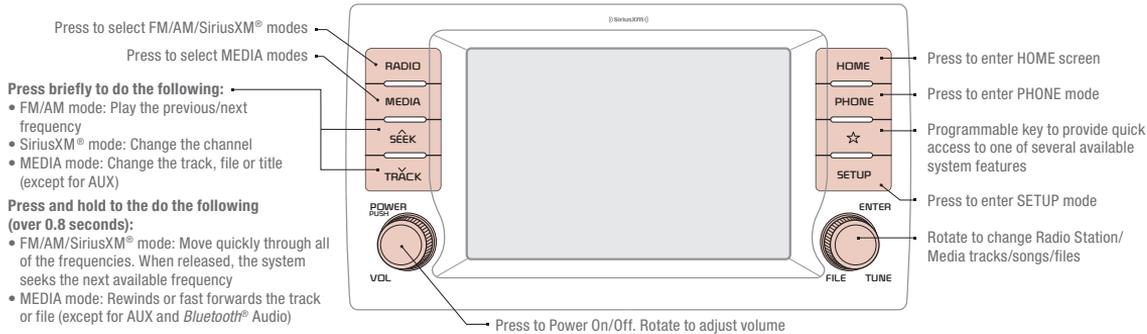

**Sound Settings:** To adjust the audio control unit's sound settings:

1. Press the SETUP key on the audio control unit or the on-screen MENU button, when in MEDIA mode
2. Select the on-screen SOUND button, or SOUND SETTINGS
3. Select the menu item (Position, Tone, Advanced, Default)
4. Use the on-screen buttons to adjust settings

**Radio Presets:** You can listen to FM, AM and SiriusXM® radio and save frequently used stations.

**How to Save a Preset:** Press and hold the desired slot\*. This saves the current station in the selected slot SiriusXM®.

**Smart Favorites:** For the first ten favorite SiriusXM® channels, you may play live or repeat from the beginning of a song or a program segment.

In **Radio** mode, choose SiriusXM®, then select any of the first ten favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

**Custom Key ☆:** A programmable key to provide quick access to one of several available system features.

**To Program the Custom Key:** Press and hold the Custom Key. Select one of the available features you would like the Custom Key to open.

## QR CODE

### UVO eServices Videos

To view these videos on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## QUICK TIPS

- Navigation may be available when connected to Android Auto™ or Apple CarPlay® supported smartphones
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- At any time, you can interrupt UVO eServices Command Feedback by pressing the TALK button on the steering wheel
- Prolonged use of the audio control unit in ACC mode may drain the vehicle's battery

**REMINDER:** To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park. Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Your vehicle's audio system may differ from that in the illustration. For further UVO eServices operation, refer to the Car Multimedia System User's Manual. See your Owner's Manual for other details.

## UVO eServices with Premium Navigation\*†1,14

– FM/AM/SiriusXM®†20/Media (USB, *Bluetooth*® Audio)

**Press briefly to do the following:**

- FM/AM mode: Play the previous/next frequency
- SiriusXM® mode: Change the channel
- MEDIA mode: Change the track, file or title

**Press and hold to do the following (over 0.8 seconds):**


- FM/AM/SiriusXM® mode: Move quickly through all of the frequencies. When released, the system seeks the next available frequency
- MEDIA mode: Rewinds or fast forwards the track or file (except for *Bluetooth*® Audio)

Press to Power ON/OFF. Rotate to adjust Volume

Press to select FM/AM/SiriusXM® modes

Press to enter MEDIA mode

Programmable key to provide quick access to one of several available system features

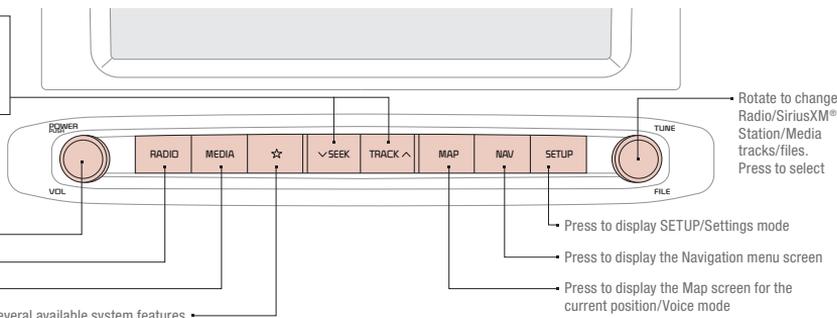

**Sound Settings:** To adjust the sound settings (Fader/Balance, Tone, Touch-Screen Beep ON/OFF and Speed-Dependent Volume Control ON/OFF) from any audio mode:

1. Press the SETUP button on the Audio Control Unit, then the on-screen SOUND button
2. Select the menu item to change settings
3. Use the on-screen buttons to adjust settings

**Radio Presets:** You can listen to FM, AM and SiriusXM® radio and save frequently used stations

**How to Save a Preset:** Press and hold the desired slot\*. This saves the current station in the selected slot

**SiriusXM® Smart Favorites:** For the first ten favorite SiriusXM® channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose SiriusXM®, then select any of the first ten favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

**Custom Key ☆:** A programmable key to provide quick access to one of several available system features.

**To Program the Custom Key:** Press and hold the Custom Key. Select one of the available features you would like the Custom Key to open.

### QUICK TIPS

- The volume level for each source (FM, AM, SiriusXM, USB, etc.) can be set individually in system sound settings. When the source is changed, the volume level will revert to the previously set volume for that source
- Navigation may be available when connected to Android Auto™ or Apple CarPlay® supported smartphones
- Prolonged use of the audio control unit in ACC mode may drain the vehicle's battery
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- At any time, you can interrupt UVO eServices Command Feedback by pressing the TALK button on the steering wheel

### QR CODE

#### UVO eServices with Premium Navigation Videos

To view these videos on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

**REMINDER:** To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park. Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

*Your vehicle's audio system may differ from that in the illustration. For further UVO eServices with Premium Navigation operation, refer to the Car Multimedia System User's Manual.*

## Surround View Monitoring (SVM)\*


The Surround View Monitoring (SVM) system is a parking support system that shows the areas around the front, rear, left, and right sides of the vehicle via four cameras displayed in the audio head unit screen.

### Front SVM operation:


- The camera view will display on the audio system's screen in both Drive and Neutral
- In Drive, the camera view will continue to display until the vehicle speed is above approximately 9 mph
- The camera view will reappear on the audio system's screen whenever the vehicle speed drops below approximately 9 mph if the SVM button **A** is pressed

The Front SVM camera is ON when:

1. The Engine Start/Stop button is On
2. The gear shift is in Drive or Neutral
3. The SVM button **A** is pressed ON (LED illuminated)

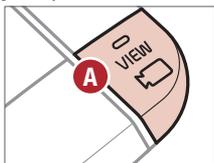

(Located below Gear Shift)

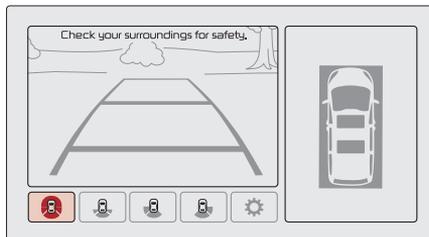

### QUICK TIP

The Front SVM camera will turn off when the gear shift is moved into Park or Reverse or the SVM button is pressed.

### Rear SVM operation:

- The camera view will automatically display on the audio head unit screen when the vehicle is shifted into Reverse
- The camera view will turn off when the vehicle is shifted out of Reverse

**Camera View Modes** – To change camera view modes, press the icons shown below on the audio head unit's screen to select the view mode.

Front SVM - when in Drive & Neutral:

- Displays all of the images around the vehicle
- Displays the front side image
- Displays the front side and left side images simultaneously
- Displays the front side and right side images simultaneously

Rear SVM - when in Reverse:

- Displays all of the images around the vehicle
- Displays the rear side image
- Displays the rear and left side images simultaneously
- Displays the rear and right side images simultaneously

### QR CODE

#### Surround View Monitoring (SVM) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)


**REMINDER:** The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance.

*The Surround View Monitoring (SVM) system is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear of the vehicle.*


*Image is for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to section 4 in the Owner's Manual for more information.*

## Automatic Climate Control\*

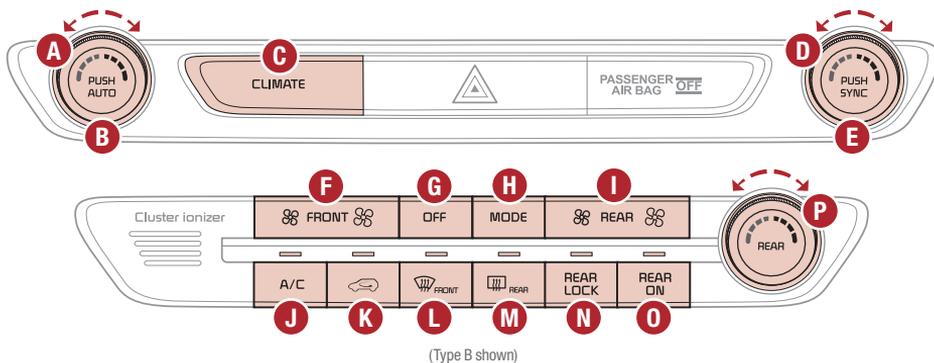

## Rear Climate Control\*

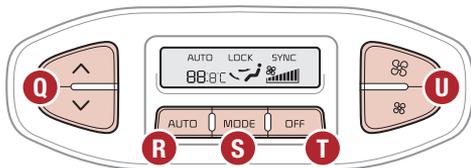

Your Automatic Climate Control system may differ from those in the illustrations.

Refer to section 4 in the Owner's Manual for more information.

- A** Driver's temperature control knob
- B** AUTO (automatic control) button
- C** Climate information screen selection button
- D** Passenger's temperature control knob
- E** SYNC temperature control selection button
- F** Front fan speed control button
- G** Front air conditioning off button
- H** Front mode selection button
- I** Rear fan speed control button
- J** A/C on button
- K** Air intake control button
- L** Front windshield defroster button
- M** Rear window defroster button
- N** Rear control lock button
- O** Rear control on button
- P** Rear temperature control knob
- Q** Rear temperature control buttons
- R** Rear AUTO climate control button
- S** Rear mode selection button
- T** Rear air conditioning off button
- U** Rear fan speed control buttons

## Automatic Climate Control\* (Continued)

### Climate Control Auto Function

1. Press AUTO **B** to select Full Auto Operation. The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Set desired **Temperature A**
3. Press SYNC **E** to select Sync Temperature Control operation, which synchronizes the passenger's temperature to the driver's setting

### Defrost Outside Windshield:

1. Set **Fan Speed F** to the highest position
2. Set **Temperature A** to **Hot**
3. Press the **Front Defrost** button  **L**

### Defog Inside Windshield:

1. Set Front **Fan Speed F** to the highest position
2. Set **Temperature A** to the highest position
3. Press the **Front Defrost** button  **L**

### QUICK TIPS

- Defrost Mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach the desired temperature and reduce humidity
- Keep the inside glass as clean as possible to reduce window fogging

### Auto Defogging System

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default. To cancel Auto Defogging, press the Front Defrost button  for three seconds when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button  for three seconds.

### Air Flow Modes

To select Air Flow Modes, press the MODE button **H** to cycle through to desired mode:



### REMINDERS:

- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

### QR CODE

#### Auto Defogging System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

*Your Automatic Climate Control system may differ from those in the illustrations.*

*Refer to section 4 in the Owner's Manual for more information.*

## Manual Climate Control\*

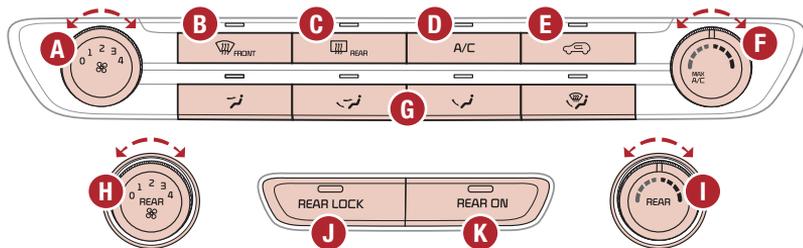

- A** Front fan speed control knob
- B** Front window defroster button
- C** Rear window defroster button
- D** Air conditioning button
- E** Air intake control button
- F** Front temperature control knob
- G** Front mode selection buttons
- H** Rear fan speed control knob
- I** Rear temperature control knob
- J** Rear control lock button
- K** Rear control on button

### Defrost Outside Windshield:

1. Set **Fan Speed** **A** to the highest position
2. Set desired **Temperature** **F**
3. Press the **Front Defrost** button  **A**

### Defog Inside Windshield:

1. Set **Fan Speed** **A** to desired position
2. Set desired **Temperature** **F**
3. Press the **Front Defrost** button  **B**


### QUICK TIPS

- Defrost Mode activates A/C and opens Fresh Air Vent
- MAX A/C Mode automatically engages Recirculated Air
- Keep the inside glass as clean as possible to reduce window fogging

**REMINDER:** Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit).

Your Manual Climate Control system may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.

## Rear Climate Control\*

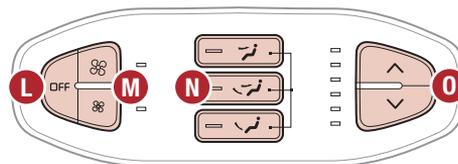

- L** Rear air conditioning OFF button
- M** Rear fan speed control buttons
- N** Rear mode selection buttons
- O** Rear temperature control buttons

### Air Flow Modes

To select Air Flow Modes, press the Mode selection buttons **G**:

-  Face-Level
-  Bi-Level
-  Floor-Level
-  Floor/Defrost-Level

## Digital Clock\*

### Audio Head Unit:


Press the SETUP key then the DATE/TIME button to display the Time and Date setting screen. Then use the on-screen buttons to adjust time and date.

### QUICK TIPS

- Press the RETURN button on the navigation screen to ensure changes are saved
- When needed, Daylight Savings must be enabled in the Settings screen
- To access manual date and time setting, turn GPS time OFF in the Clock Settings (UVO eServices with Premium Navigation System\*)

For more information, refer to the Car Multimedia System User's Manual.

## Aux/Multimedia USB Port, Power Outlets, USB Charger Ports & AC Inverter

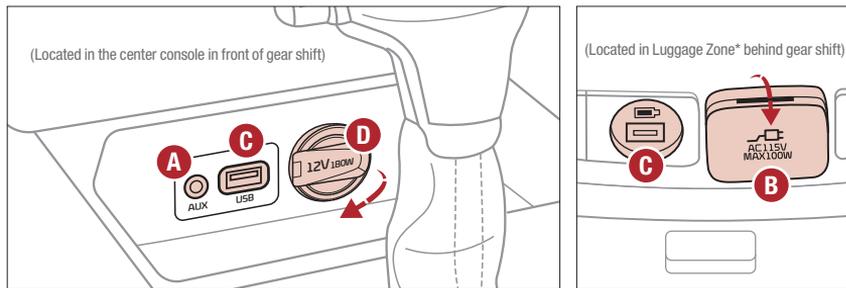

**AUX/Multimedia USB Port A** – Use the AUX port to connect audio devices and the Multimedia USB port to connect USB audio devices and smartphones.

**AC Inverter\* B** – 115V/100 watt power inverters are located in the back of the center console and in the luggage zone\* (See page 8 for ON/OFF button information).

**USB Charger Ports\* C** are located in the center panel and in the back of the center console.

**Power outlets D** are located on the center panel, in front of the gear shift.

### QUICK TIP

The power outlets are inactive when the Engine Start/Stop\* button is OFF.

### REMINDERS:

- Using the power outlets (accessory plugs) and AC Inverter for prolonged periods of time with the ENGINE START/ STOP button in the ACC position (Engine OFF) may cause the battery to discharge
- Use only the charging cables that your device manufacturer supplied. Third party cables may cause damage to your device
- The USB data port (Multimedia USB port) is located next to the Power Outlets. The USB Charger ports do not support data transfer


For more information, refer to the Car Multimedia System User's Manual.

## Wireless Smartphone Charging System\*

1. Enable Wireless Smartphone Charging System in the User Settings Mode on the Instrument Cluster's LCD
2. Place a compatible smartphone on the center of the charging pad **A**
3. The indicator light **B** may change to amber once the wireless charging begins
4. Once charging is complete, the amber light may change to green

### QUICK TIPS

- The smartphone must be a compatible phone with Qi function available
- Wireless charging must be enabled in user settings
- If wireless charging does not work, move the smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging as to not impede the charging area
- For wireless charging to occur, all doors (excluding rear hatch) must be closed & the Smart Key Fob must be detected inside the vehicle

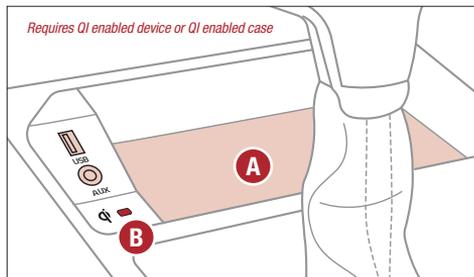

### REMINDERS:

- Avoid placing other metal items in the bin while charging as to not impede the charging area
- This vehicle is equipped with wireless charging technology which allows for a device to be charged using inductive charging; however, device compatibility varies. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance – Device position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate includes foreign objects, such as coins or pens, and phone case thickness
- If the driver door is opened, charging will be disabled

Refer to section 4 in the Owner's Manual for more information.

### QR CODE

#### Wireless Charging Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Electronic Parking Brake (EPB)\*

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

### Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light is illuminated on the instrument cluster.

### Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive.

To release EPB manually, depress the brake pedal and then press the EPB switch **A** with the ignition switch in the ON position. Ensure that the indicator light **Ⓟ BRAKE** is OFF.

### QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline/decline, pull up the EPB switch for more than 3 seconds for a firmer EPB application
- Pull up and hold the EPB switch a second time to increase brake pressure if parked on a decline or incline

### REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Refer to section 5 in the Owner's Manual for more information.

## Auto Hold\*

Auto Hold temporarily maintains the vehicle at a standstill even if the brake pedal is released.

Auto Hold can be turned ON/OFF using the AUTO HOLD switch **B** on the center panel.

Before Auto Hold will operate, the driver's door, engine hood and trunk must be closed, and the driver's seat belt must be fastened.

The Auto Hold indicator has four states:

**White: Standby** - With vehicle in Park and at a standstill, and AUTO HOLD switch **B** turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

**Green: Engaged** - When coming to a complete stop and depressing the brake pedal, the Auto Hold indicator changes from white to green.

**OFF (not illuminated)** - The indicator will turn OFF when the AUTO HOLD switch **B** is turned OFF or when the EPB is manually turned ON.

**Yellow: Malfunction** - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

### REMINDERS:

- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes
- Auto Hold turns off when ignition is cycled

Refer to section 5 in the Owner's Manual for more information.


### QR CODE

#### Electric Parking Brake Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

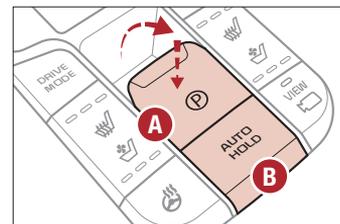

## Automatic Gear Shift with Sportmatic<sup>®</sup>\*+22 Shifting

**P:** Park

**R:** Reverse

**N:** Neutral

**D:** Drive

**[+]:** Manual Mode Upshift

**[-]:** Manual Mode Downshift


**Manual Mode:** To enter Manual mode, move shift lever from D to left gate **A**.

To shift while in Manual mode, move shift lever up [+] to upshift or down [-] to downshift **A**.

### QUICK TIPS

- Press brake pedal and depress release button to move the gearshift from N to P, N to R or from P to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

Refer to section 5 in the Owner's Manual for more information.

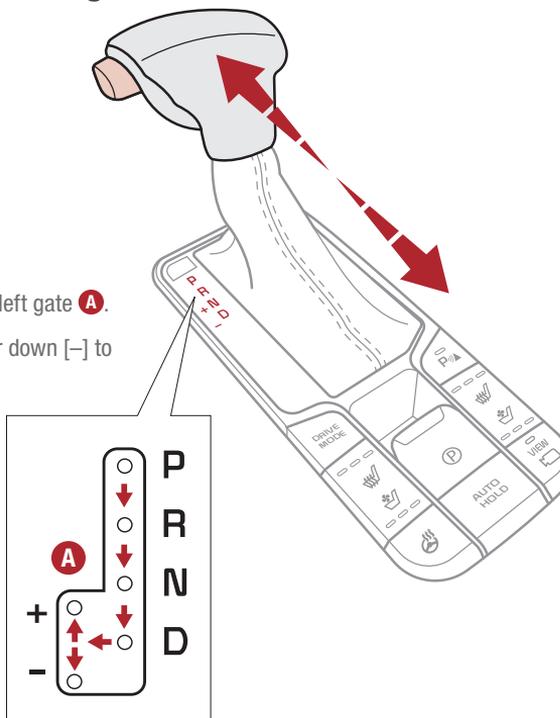

### QR CODE

#### Sportmatic<sup>®</sup> Shifting Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Heated Steering Wheel\*

Press the Heated Steering Wheel button **A** to turn the Steering Wheel Heater on/off while the ENGINE START/STOP button is in the ON position. The Steering Wheel Heater will turn off automatically in 30 minutes, or when the button is pressed again to deactivate.

### QUICK TIPS

- If the ignition is turned OFF and then ON again within 30 minutes of the Steering Wheel Heater being turned ON, the system will remain in the ON position
- The system does NOT turn off when the ignition is cycled. To turn off the system, press the Heated Steering Wheel button

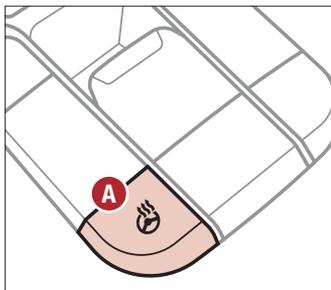


(Buttons located below Gear Shift)

**REMINDER:** If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

Refer to section 4 in the Owner's Manual for more information.

## Seat Warmers / Ventilated Seats\*†19


**Seat Warmers button B** - Press the button once for high setting (3 LEDs lit). Press the button twice for medium setting (2 LEDs lit). Press the button a third time for low setting (1 LED lit) and again to turn OFF. Hold the button to turn off Seat Warmer.

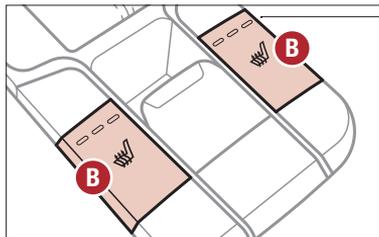

Warming  
(Yellow LED)

(Buttons located below Gear Shift)  
(Type A shown)

**Seat Warmers / Ventilated Seats\* button C** - Press top/ bottom of the button once for high setting (3 LEDs lit). Press the button twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF. Hold the button to turn off the Seat Warmers / Ventilated Seats.

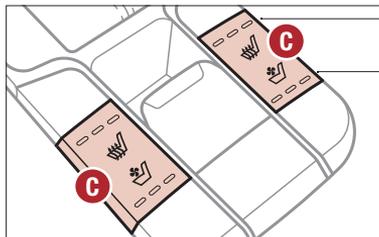

Warming (Yellow LED)  
Ventilating (Blue LED)

(Buttons located below Gear Shift)  
(Type A shown)

**REMINDER:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

*These illustrations are for demonstration purposes only. Actual features on vehicle may vary.*

Refer to section 4 in the Owner's Manual for more information.

### QR CODE

#### Heated and Ventilated Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)


### QUICK TIPS

- With the Seat Warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF by default. To turn the system ON, press the button to turn ON

## Front Seat Headrest Adjustment<sup>†10</sup>

**To raise headrest:** Pull headrest up.

**To lower headrest:** Press lock **A** and then press the headrest down.

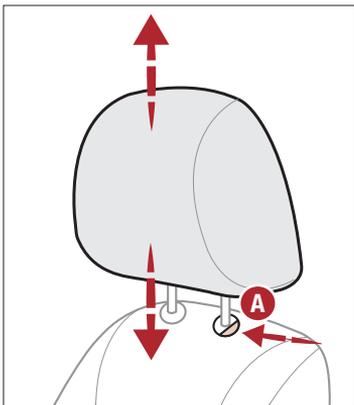

### QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

**REMINDER:** Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident.

*These illustrations are for demonstration purposes only. Actual features on vehicle may vary.*


*Refer to section 3 in the Owner's Manual for more information.*

## Driver Position Memory System\*

The integrated system stores into memory the position of the Driver's Seat and the Outside Rearview Mirrors.

To store positions into memory, first place the Gear Shift into P (Park) while the Engine Start/Stop button\* is in the ON position. Then:

1. Adjust the Driver's Seat and the Outside Rearview Mirrors
2. Press the SET button **B** on the control panel. System will beep once
3. Press one of the memory buttons **C** within 5 seconds. The system will beep twice when memory has been stored

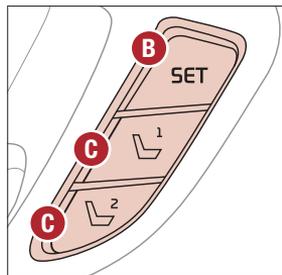

(Buttons located on Driver's Door Panel)

*These illustrations are for demonstration purposes only. Actual features on vehicle may vary.*

## Easy Access Function\*



- The system will automatically move the driver's seat forward when the ignition or the Engine Start/Stop button is pressed to ON or the ACC position
- The system will automatically move the driver's seat rearward when the ignition or the Engine Start/Stop button is pressed to OFF
- To activate or deactivate the Easy Access Function, go to User Settings in the LCD Instrument Cluster modes

**REMINDER:** Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

*Refer to section 3 in the Owner's Manual for more information.*

## Power Adjustable Driver's Seat<sup>\*†17</sup>

Move/press controls to adjust Seat forward/backward, Seat Cushion up/down, Seatback recline or Lumbar up/down/forward/backward\*

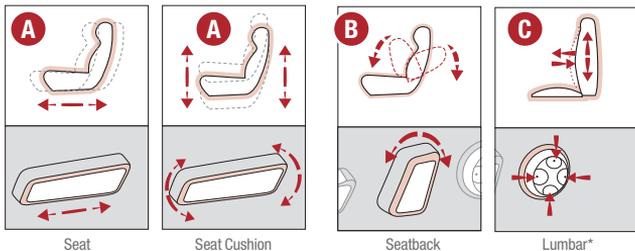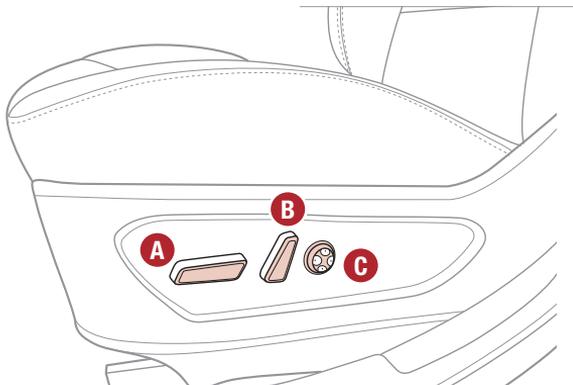

**REMINDER:** Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

Refer to section 3 in the Owner's Manual for more information.

## Manual Adjustable Driver's Seat<sup>\*†17</sup>


Pull lever **D** to slide the Seat forward/backward

Pull lever **E** up several times to raise the Seat Height

Push lever **E** down several times to lower the Seat Height

Pull lever **F** to adjust the Seatback recline

Press **G** to adjust the Lumbar support

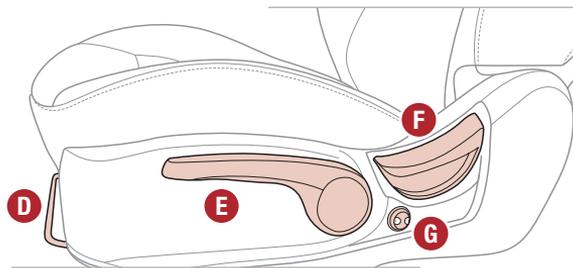

### QUICK TIP

When adjusting the seat forward or backward, ensure the seat clicks or locks into place before driving the vehicle.

Refer to section 3 in the Owner's Manual for more information.

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

These illustrations are for demonstration purposes only. Actual features on vehicle may vary.


## 2nd-Row Seat<sup>†17</sup>

### Folding 2nd-Row Seat

1. Lower the 2nd-Row Seat Headrest to the lowest position
2. Pull up on the Seatback folding lever **A** or strap\* and fold the Seatback down

### Unfolding 2nd-Row Seat

1. Lift the folding Seatback lever **A** and move the Seatback backward
2. Then lift the lever **A** again or return Seatback to an upright usable position

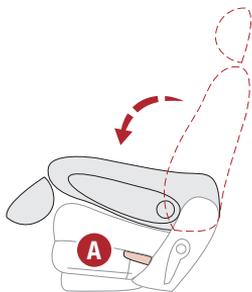

#### QUICK TIPS

- When you return the Seatback to its original position, ensure it locks (clicks) into place
- It may be necessary to slide the front Seat forward and adjust the front Seatbacks to fully lower the rear seats
- Lower Rear Headrests to the lowest position

**REMINDER:** The lever must return to its original position for the Seatback to lock.

#### QUICK TIP


- For specific information on how to use the 2nd- and 3rd-Row Center Seat Belts, please refer to your Owner's Manual.

*These illustrations are for demonstration purposes only. Actual features on vehicle may vary. Refer to section 3 in the Owner's Manual for more information.*

## 2nd-Row Walk-In Seat<sup>\*†17</sup>

To get in and out of the 3rd-Row Seat, adjust the 2nd-Row Walk-In Seat as follows:

1. Lift the 2nd-Row Seat armrest
2. Adjust the headrest to the lowest position
3. Accessing from outside of the vehicle: Pull up the Walk-In Lever **A** – the seat will stand up and the headrest will fold automatically **C**
4. Accessing from the 3rd-Row seat: Pull the release strap **B** – the seat will stand up and the headrest will fold automatically **C**
5. Return the 2nd-Row Seat to its original position and push until it locks (clicks) into place and the headrest unfolds

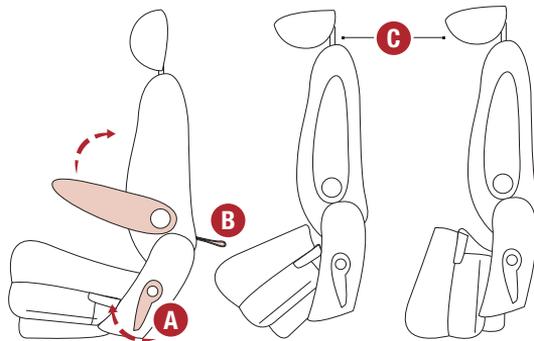

### Walk-In Seat Adjustment\*

To adjust the 2nd Row Walk-In Seat, press button **D** for desired seatback angle, forward/backward.

Press button **E** to adjust seat cushion forward/backward.

**REMINDER:** Do not use the button while front passenger seat is occupied.

#### QR CODE


### Sedona 2nd and 3rd Row Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

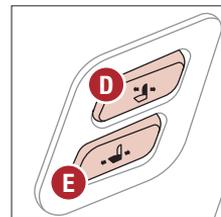


(Buttons located on the side of the passenger's seatback)

*Refer to section 3 in the Owner's Manual for more information.*

## 2nd-Row Tumble (Center) Seat\*<sup>+17</sup>

### Removing the Tumble Seat

1. Insert the seat belt into the belt assembly cover, and the seat belt buckle into the seat cushion pocket
2. Lower the headrest **A** to the lowest position
3. Slide the Seat backward to the farthest position
4. Pull up the recline strap **B** and fold the Seatback forward
5. Pull the removal strap **C** and lift the back of the Tumble Seat forward
6. Pull up the catch release lever **D** under the Tumble Seat cushion and lift out of the anchors

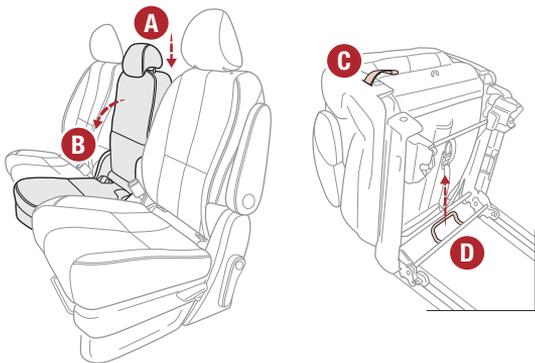


Refer to section 3 in the Owner's Manual for more information.

#### QUICK TIP

For specific information on how to use the 2nd- and 3rd-Row Center Seat Belts, please refer to your Owner's Manual.

### Installing Tumble Seat

1. Place and align the Tumble Seat properly **E**
2. Lower the Tumble Seat and push down firmly until it clicks into place
3. Ensure the Tumble Seat is latched securely by the green indicator
4. Pull up the Tumble Seatback recline strap **F**, lift the Seatback backward until it locks (clicks) into place
5. Return the Seat Belt to its proper position

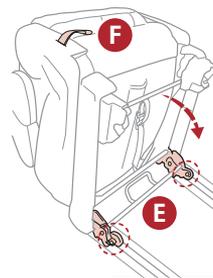


#### REMINDERS:

- Never install or remove the Tumble Seat while there are occupants in the 3rd-Row Seat
- Make sure to raise up both the left and right side seatbacks before installing the tumble seat

### Unfastening Center Seat Belt

1. If the Seat Belt is buckled, press the release button on the buckle
- To retract the center seatbelt webbing **G** in the 2nd and/or 3rd rows, use the lap belt tongue plate **H** to push the "release button" in the small slot on the center belt buckle **J**

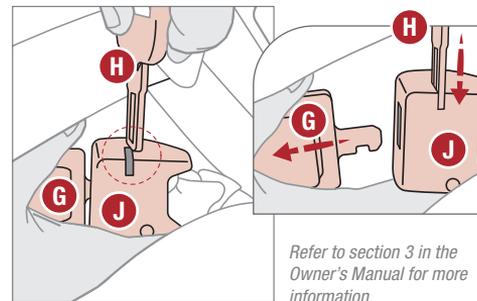

Refer to section 3 in the Owner's Manual for more information.

#### QR CODE

##### Unfastening Center Seat Belt Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

*These illustrations are for demonstration purposes only. Actual features on vehicle may vary. Refer to section 3 in the Owner's Manual for more information.*

## 3rd-Row Seat – Folding and Stowing\*†17

### Folding 3rd-Row Seat

1. Fully lower headrest **A**
2. Pull Seat folding strap located in the back of the Seatback **B**
3. Fold Seat down **C**

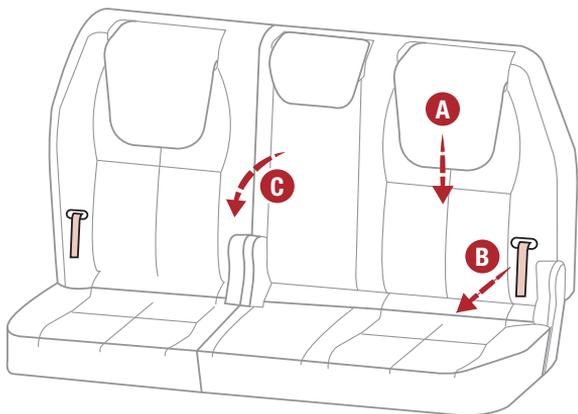

#### QUICK TIP

For specific information on how to use the 2nd- and 3rd-Row Center Seat Belts, please refer to your Owner's Manual.

*These illustrations are for demonstration purposes only. Actual features on vehicle may vary.*

*Refer to section 3 in the Owner's Manual for more information.*


### Stowing 3rd-Row Seats\*

The rear seats can be folded and stowed in the luggage compartment for additional cargo space.

1. Fully lower headrests **D**
2. Pull release lever **E** and push Seat firmly in place
3. Press seat down firmly in stowing area

#### REMINDERS:

- The seat straps on the front and back of the 3rd-Row Seat are for folding only
- Do not stow the seat while the Seatback is folded down as this may cause damage to the mechanism

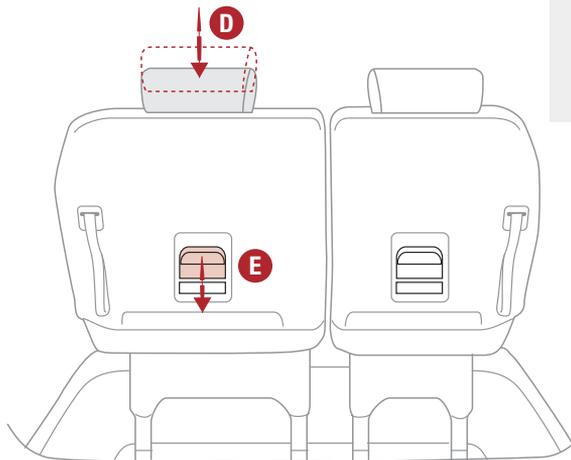

#### QR CODE

### Sedona 2nd and 3rd Row Seat Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Remote Keyless Entry (Folding Key)\*

- A** Press the release button to unfold the key
- B** Press to lock All Doors
- C** Press to unlock Driver's Door: Press twice in 4 seconds to unlock All Doors and Liftgate, and manually open
- D** Press and hold left/right button to automatically open/close the Power Sliding Doors\*
- E** Manual Liftgate\*: Press and hold for more than 1 second to unlock the Liftgate and manually open

Power Liftgate\*: Press and hold for more than 1 second for the Power Liftgate to automatically open/close

- F** Press and hold more than a half second for the Panic Alarm. To turn OFF the Alarm, press any button

### REMINDERS:

- The Manual Liftgate does not automatically open when the **E** button is pressed
- The Liftgate unlocks when the Smart Key fob is within close proximity of the rear liftgate


*Remote button configuration may vary depending on vehicle options.*

*Refer to section 4 in the Owner's Manual for more information.*


## Double-Turn Lock/Unlock All

- Turn counterclockwise once to unlock the Driver's Door
- Turn counterclockwise again within 4 seconds to unlock All Doors
- Turn clockwise once to lock All Doors

*Refer to section 4 in the Owner's Manual for more information.*

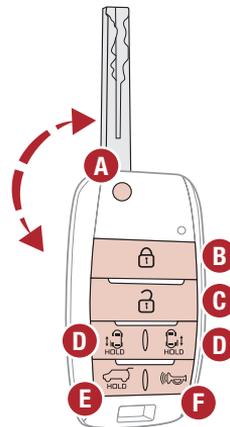

(Type B shown)

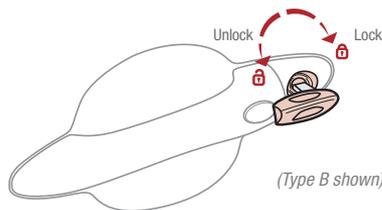

(Type B shown)

### QR CODE

#### Kia Key Fob Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Smart Key\*†9

- A** Press to lock All Doors
- B** Press to unlock the Driver's Door. Press twice within 4 seconds to unlock All Doors
- C** Power Sliding Doors:
  - Option 1 - Press and hold the left/right button to automatically open/close the Power Sliding Doors\*
  - Option 2 - With the Smart Key fob on your person, pull the Power Sliding Door handle once and the door will open/close automatically
- D** **Manual Liftgate\***: Press and hold for more than 1 second to unlock the Liftgate. Then lift by the handle to manually open the Liftgate

**REMINDERS:**

- The Liftgate does not automatically open when the **D** button is pressed
- The Liftgate unlocks when the Smart Key fob is within close proximity of the vehicle


**Power Liftgate\***: Press and hold for the Power Liftgate to open automatically. Press again at any time to stop. Press again to automatically close

**Smart Power Liftgate\***: When enabled, the liftgate will open automatically as you approach the rear of the vehicle with the Smart Key fob with you (For more details, see page 44)

- E** Press and hold for more than a half second for the Panic Alarm. To turn off the Alarm, press any button


**Driver's Door Lock/Unlock button **G**:**

- Press the button once to unlock the Driver's Door
- Press again within 4 seconds to unlock All Doors
- Press again to lock All Doors

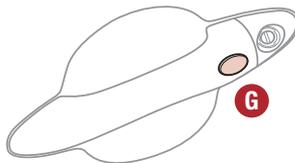**Mechanical Key **F**:**

- Press the button on the back of the key fob to release the Mechanical Key
- Use to unlock the Driver's Door
- Use to enable/disable the Child-Protector Rear Door Lock
- Use to lock the glove box

**REMINDER:** When reinserting the mechanical key, make sure it is pushed all the way in until there is a click sound.

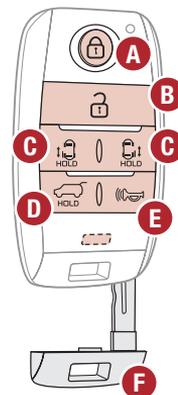

(Type B shown)

**QUICK TIPS**

- The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine

**QR CODES**

To view these videos on your mobile device, snap these QR Codes or visit the listed website.

Refer to page 2 for more information.

**Engine Start/Stop Button & Smart Key Video****Kia Key Fob Video**

[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

*Remote button configuration may vary depending on vehicle options.*

*Refer to section 4 in the Owner's Manual for more information.*

## Map/Room Lamps

### Automatic turn off function\*

The interior lights automatically turn off approximately 30 seconds after the Engine Start/Stop button is OFF.

### Map/Room Lamp Operation

Press the lens **A** to turn the Map Lamp ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

When the  button **B** is pressed, the following occurs:

- When any door or the liftgate is opened, the Map and Room Lamps turn ON
- When doors are unlocked from the Smart Key or key removed from ignition, the Map and Room Lamps turn ON for approximately 30 seconds or until a door is opened
- When doors are closed, the lamps will gradually turn OFF after approximately 30 seconds
- When all doors are locked or the ignition is turned ON, the Map Lamp will turn OFF immediately


When the  button **C** is pressed, the lamps stay ON continuously.

Room Lamp – Press the lens **D** to turn the Room Lamp ON/OFF.


#### QUICK TIPS

- When the doors are unlocked by the Smart Key\*, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in the armed stage
- Using interior lights for an extended period of time may cause battery discharge

**REMINDER:** When the Room Lamp lens is pressed ON it will remain ON, even when the Map Lamp switch is in the OFF position.

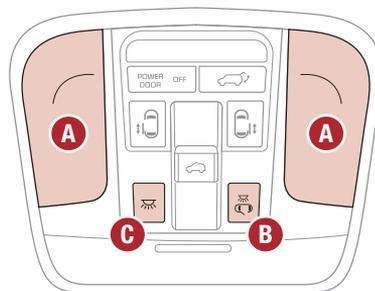

Front

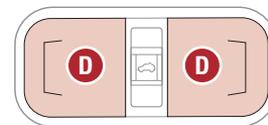


Rear

(Lamp controls located in the overhead consoles). Type A shown.

Refer to section 4 in the Owner's Manual for more information.

## Sunvisor<sup>†24</sup>

Use the Sunvisor to shield direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

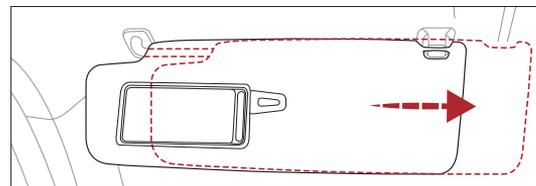

#### REMINDEERS:

- The Sunvisor may not shield all direct light
- The Sunvisor may impair visibility if not adjusted properly
- Be aware of the seating position when adjusting or swinging Sunvisor around to or from the front or side windows
- Do not operate the vehicle if the Sunvisor is impairing your visibility

Refer to section 4 in the Owner's Manual for more information.

## Sunroof Operation\*

The Sunroof and Sunshade operation is controlled through a multidirectional switch/lever. The ignition needs to be in the ON position to operate the Sunroof/Sunshade.

The front and rear Sunroof/Sunshade are operated from separate controls.

### Front Sunshade and Sunroof Controls:

- **Auto Open:** Slide lever **A** backward to the farthest position and release.
- **Auto Close (Sunroof only):** Slide the lever **A** forward to the farthest position and release.

### Slide the Sunroof (with Sunshade open):

- **Open:** Press the Sunroof lever **A** backward and press again forward/backward until you reach the desired detent position (manual slide feature).
- **Close:** Press the Sunroof lever **A** forward and press again forward/backward until you reach the desired detent position (manual slide feature)

### Tilt the Sunroof:

- To raise, push the lever **A** upward; to lower, push the lever **A** forward.

**REMINDER:** The Front Sunroof will automatically open all the way. The Rear Sunroof will only partially open. To open all the way, slide the Rear Sunroof lever again.

### Rear Sunshade and Sunroof Controls:


- **Auto Open:** Slide lever **B** backward to the farthest position and release.
- **Auto Close (Sunroof only):** Slide the lever **B** forward to the farthest position and release.

### Slide the Sunroof (with Sunshade open):


- **Open:** Press the Sunroof lever **B** backward and press again forward/backward until you reach the desired detent position (manual slide feature).
- **Close:** Press the Sunroof lever **B** forward and press again forward/backward until you reach the desired detent position (manual slide feature)

### Tilt the Sunroof:

- To raise, push the lever **B** upward; to lower, push the lever **B** forward.

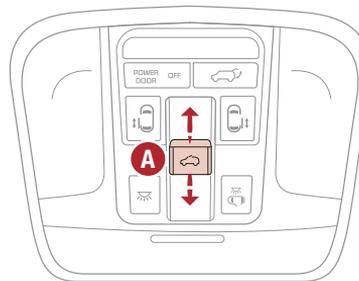

 (Front overhead console for Front Sunroof controls)



(Front overhead console for Rear Sunroof controls)

## QR CODE

### Sunroof Operation Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## QUICK TIP

To stop the Sunroof/Sunshade at any position, push or pull the Sunroof control lever in any direction.


## REMINDEES:

- When the Power Window Lock is depressed, the Rear Sunroof controls cannot operate the Rear Sunroof
- The Sunshade needs to remain OPEN while the Sunroof is open and the vehicle is moving
- Do not adjust the Sunroof or Sunshade while driving. This could result in loss of control of the vehicle

Refer to section 4 in the Owner's Manual for more information.

## Parking Distance Warning—Forward\* and Reverse\*<sup>†6</sup>

The Parking Distance Warning—Forward\* and Reverse\* is a supplemental system that is designed to assist the driver by chiming if any object is detected within the sensing area to the front, rear and side of the vehicle when moving forward or backing up.

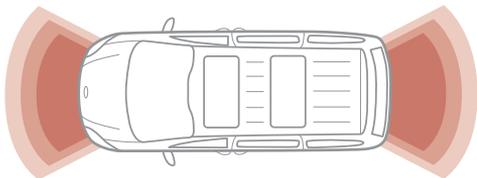

To activate, press button **A** (LED illuminated). The system is also activated when the ignition is ON and the gear shift is moved into R (Reverse). To deactivate the system, press the Parking Distance Warning—Forward\* and Reverse\* button **A** (LED not illuminated).



(Button located below Gear shift)

### REMINDERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

*The Parking Distance Warning—Forward\* and Reverse\* is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Parking Distance Warning—Forward\* and Reverse\* may not detect every object in front of or behind the vehicle.*

*These illustrations are for demonstration purposes only. Actual features on vehicle may vary.*



*Refer to section 4 in the Owner's Manual for more information.*

## Rear View Monitor<sup>†6</sup>

The Rear View Monitor system is a supplemental system that displays the view behind the vehicle through the audio control head unit screens while the vehicle is in Reverse.

### The Rear View Monitor activates when the:

- Ignition or the Engine Start/Stop button\* is in the ON position (Green Light)
- Gear Shift Lever is in the R (Reverse) position

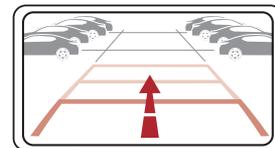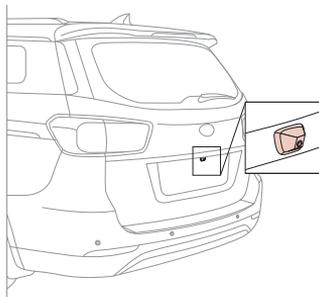

(Navigation screen display shown)

### REMINDERS:


- The Rear View Monitor is ON by default when the ignition is cycled
- The screen image above is for illustration purposes only. The actual image or graphics may differ in your vehicle

*The Rear View Monitor is not a substitute for proper and safe backing-up procedures. The Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.*


*Refer to section 4 in the Owner's Manual for more information.*

## Power Sliding Doors\*


Using the overhead controls, press the left/right Power Sliding Door button **A** on the overhead controls, on the Center Pillars **B** or on the key fob **C** to automatically open/close the sliding doors.

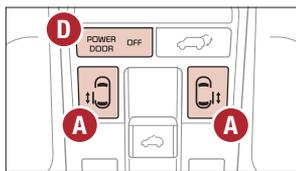

(Buttons located in overhead controls)

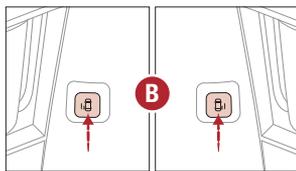

(Buttons located on center pillars)

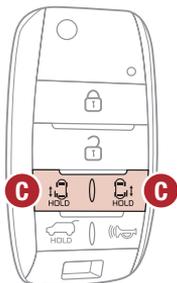

(Type B shown)

**REMINDER:** If the POWER DOOR OFF button is depressed, the Smart Power Liftgate\* will not operate.

**Power Door OFF Button** - When button **D** is ON (not depressed), the power sliding door and power liftgate can be controlled with the buttons on the center pillar trim **B** or liftgate. Also, the doors will open/close automatically when pulling the handles from the inside or outside.


Refer to section 4 in the Owner's Manual for more information.

## Smart Power Liftgate\*<sup>+21</sup>

### Opening from Inside the Vehicle:

Press the Smart Power Liftgate Open/Close button\* **D** to automatically open/close the Liftgate. Depress the POWER DOOR OFF button\* **E** to disable.

**REMINDER:** If POWER DOOR OFF button is pressed, the Smart Power Liftgate button on the Smart Key will be disabled.

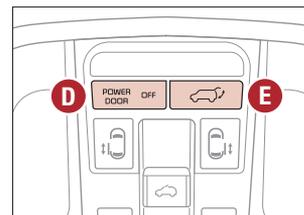


(Buttons located on overhead console)

### Opening from Outside the Vehicle:

To open the Smart Power Liftgate\* automatically, press the Liftgate Release button **F** on the exterior of the Liftgate.

Automatically close by pressing the Smart Power Liftgate Close button\* **G**.

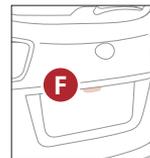

### Smart Power Liftgate Height Adjustment:

For your convenience, the liftgate opening height is adjustable. To program the opening height, perform the following:

1. Open the liftgate and manually position liftgate to your preferred opening height
2. Depress and hold the close button on the liftgate for 3 seconds or more
3. The system will beep 3 times when the programming is complete

Refer to section 4 in the Owner's Manual for more information.



(Button located on inside edge of liftgate)

## Smart Power Liftgate\*<sup>†21</sup> (continued)

### Smart Key:

To open the Smart Power Liftgate\*, press and hold the Smart key Liftgate button **A** until the Liftgate begins opening. Press again to close.

**REMINDER:** Pulling the Liftgate upward by the handle or pressing the button a second time will interrupt the automatic opening of the Smart Power Liftgate.

### Smart Power Liftgate\*

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate\* is about to open.

Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate\* **B**.



The Smart Power Liftgate\* feature is OFF by default. To enable the Smart Power Liftgate\*, go to User Settings in the LCD Instrument Cluster modes.

### QUICK TIP

- During the Smart Power Liftgate alert, the Smart Power Liftgate can be deactivated with the Smart Key by pressing any button on the key fob
- The open height can be adjusted. For information on how to set the open height, see page 43 or your Owner's Manual

### REMINDEES:

- All doors are closed and locked after about 15 seconds
- If the POWER DOOR OFF button is depressed, the Smart Power Liftgate will not operate
- The Smart Power Liftgate feature will not operate when the doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles, a door is not locked or closed or the Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage to deactivate the Smart Power Liftgate function
- Ensure obstacles and people are out of the way of the Liftgate

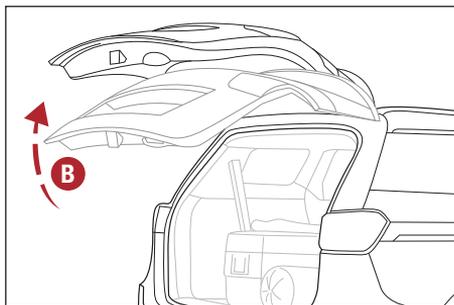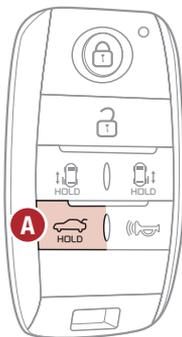

Refer to section 4 in the Owner's Manual for more information.

### QR CODE

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

### Smart Power Liftgate Video



### Power Liftgate Opening Height Adjustment Video




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Hood Release Lever and Latch


### Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood
3. Pull out the support rod from the Hood and set into place to hold the Hood open

**REMINDER:** Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake.

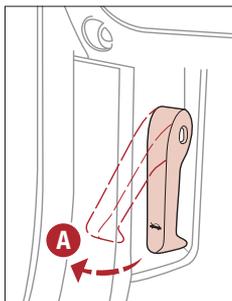

(Lever located near floor below Driver's Panel)

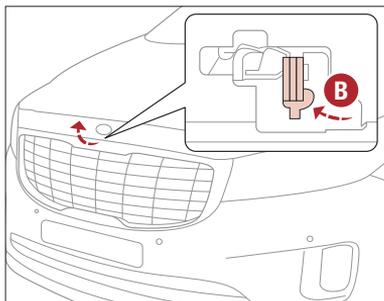

(Secondary latch located inside lip of Hood)

### Closing the Hood:

Lower the Hood by pressing the front center of the Hood. Then, press down to securely lock in place.

#### REMINDEES:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake


Refer to section 4 in the Owner's Manual for more information.

## Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent the Malfunction Indicator  from illuminating.

#### REMINDEES:

- The Fuel Filler Door Release button is located on the driver's button panel, left of the Steering Wheel
- It is normal operation when tightening to hear one click and then when Fuel Cap is released, it clicks back

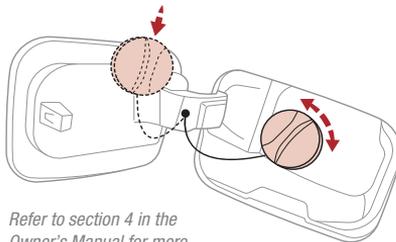

Refer to section 4 in the Owner's Manual for more information.

#### QR CODE

#### One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.




[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Child-Protector Rear Door Lock

Located on the front edge of the rear passenger doors, move the Child-protector rear door lock to the lock position  to disable the inner door handles from opening the rear passenger doors.

Refer to section 4 in the Owner's Manual for more information.

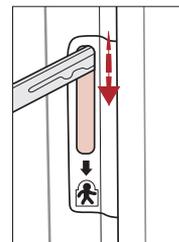

(Located on the front edge of the rear passenger doors)

## Driver Attention Warning (DAW)\*†7

The DAW system is designed to detect certain inattentive driving practices and, in certain situations, can give a warning signal to the driver to take a break from driving.

The DAW system is set to OFF by default. To turn the DAW System ON, turn the ignition on and then select User Settings in the LCD Display on the Instrument Cluster. Then go to Driving Assist and select Driver Attention Warning. Set the DAW System to Normal or Early.

### Driver Attention Warning (DAW) System modes:

**OFF:** The Driver Attention Warning system is deactivated **A**.

**Normal:** The Driver Attention Warning system alerts the driver of inattentive driving practices.

**High Sensitivity\*/ Early\*:** The Driver Attention Warning system alerts the driver of inattentive driving practices faster than Normal mode.

If the DAW System is activated, the DAW information will appear on the LCD Display **B** when you select the ASSIST mode .

A message, “Consider taking a break,” appears on the LCD display and a warning sounds to suggest the driver to take a break when the driver’s attention level is below 1 **C**.



### REMINDERS:


- The setup of the DAW system will be maintained, as selected, when the ignition is cycled
- When activated, the DAW system does not display the “Consider taking a break” message when the total trip driving time is less than 10 minutes
- The DAW system will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 40 mph

*These illustrations are for demonstration purposes only. Actual features on vehicle may vary.*

*Refer to section 5 in the Owner’s Manual for more information.*

## HomeLink® with Auto-Dimming Rearview Mirror\*†12

- A** HomeLink® button
- B** HomeLink® button
- C** Indicator light
- D** HomeLink® button
- E** Glare detection sensor
- F** Automatic dimming ON
- G** Automatic dimming OFF

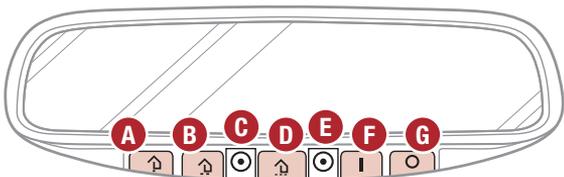

HomeLink® with Auto-Dimming Rearview Mirror\* is designed to reduce glare from a vehicle's headlights located in the rear and also to connect up to three electronic transmitters into one location.

- To turn automatic dimming ON, press **I** button **F**
- To turn automatic dimming OFF, press **⊠** button **G**

**REMINDER:** Mirror indicator light **C** will illuminate when automatic dimming is ON.

### QUICK TIPS

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing programmed buttons will delete all trained transmitters

### How to Sync Transmitter with HomeLink®\*\*

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and center **E** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A**, **B** or **D** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light **C** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the “learn” or “smart” button on the garage door’s motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times

### Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

### Erasing programmed buttons:

Press and hold the left **A** and center **D** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

*If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink® Repeater Kit. For more information, go to [www.HomeLink.com](http://www.HomeLink.com) or call (800) 355-3515, or refer to section 4 in the Owner's Manual.*

### QR CODE

#### HomeLink Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

## Seat Belts<sup>+18</sup>


### To properly fasten your seat belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**.  
Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**

### Seat Belt Retractor Locks<sup>+18</sup>

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.


During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to reduce the risk of injury.

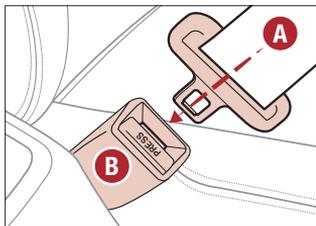

#### QUICK TIP

The seat belt warning chime operates for driver's seat only.

Refer to section 3 in the Owner's Manual for more information.

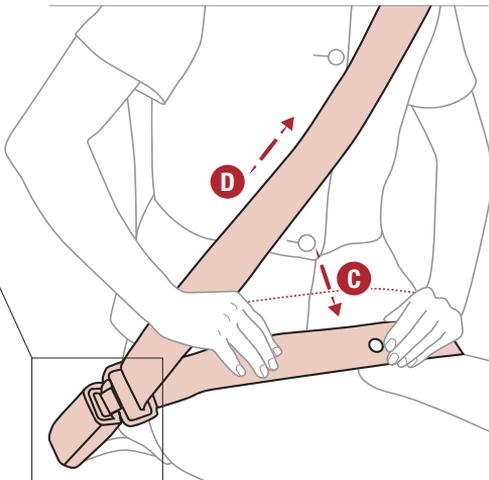

## Occupant Detection System (ODS)<sup>+15</sup> / Passenger Airbag Off Indicator<sup>+2</sup>

ODS is designed to detect the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the "PASSENGER AIRBAG OFF" light will illuminate.



(Type B shown)

Refer to section 3 in the Owner's Manual for more information.



**Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.**

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

**Safety Features:** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

- 1. UVO eServices:** Purchase of certain new Kia vehicles includes complimentary access to UVO eServices (length of access period varies by vehicle model, trim and model year) starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary term of UVO eServices expires, your access to UVO eServices may immediately terminate. Use of UVO eServices is subject to agreement to the UVO Privacy Policy (available at <https://owners.kia.com/us/en/privacy-policy.html.html>) and Terms of Service (available at <https://owners.kia.com/us/en/terms-of-service.html.html>). UVO eServices transferrable to subsequent owner during the original UVO eServices service term. Only use UVO eServices when safe to do so. UVO eServices App is available from the App Store® or Google Play™ Store. Kia Motors America, Inc. reserves the right to change or discontinue UVO eServices at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO eServices features may vary by make, model year and trim level. Features and specifications are subject to change. For more on details and limitations, visit <https://owners.kia.com> or your authorized Kia dealer. Google and logos are trademarks of Google, Inc. App Store is a service mark of Apple, Inc.
- 2. Airbags:** For maximum protection, always wear your seat belt.
- 3. Android Auto™:** Android Auto is a trademark of Google, Inc. Android™ is a registered trademark of Google, Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- 4. Apple CarPlay®:** Apple® and Apple CarPlay® are trademarks of Apple, Inc., registered in the U.S. and other countries. Apple CarPlay® runs on your smartphone cellular data service. Normal data rates will apply.
- 5. Bluetooth® Wireless Technology:** The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.
- 6. Driver Assist Features - Blind-Spot Collision Warning (BCW), Rear Cross-Traffic Collision Warning (RCCW), Smart Cruise Control (SCC) with Stop & Go, Lane Departure Warning (LDW), Rear View Monitor, Parking Distance Warning-Forward\* and Reverse, Forward Collision-Avoidance Assist (FCA)\* / Forward Collision Warning (FCW)\*:** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- 7. Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- 8. Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- 9. Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
- 10. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- 11. Google Play™ Store** is a trademark of Google, Inc. © 2020 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.
- 12. HomeLink®:** HomeLink® is a registered trademark of Genix Corporation
- 13. iPhone®:** iPhone is a registered trademark of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- 14. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- 15. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
- 16. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
- 17. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- 18. Seat belts:** For maximum protection, always wear your seatbelt.
- 19. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- 20. SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com).** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2020 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
- 21. Smart Power Liftgate®:** Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.
- 22. Sportmatic®** is a registered trademark of Kia Motors America.
- 23. Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- 24. Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.
- 25. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
- 26. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.




# SEDONA CUSTOMER DELIVERY CHECKLIST


## KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer:


- Android Auto™ / Apple CarPlay® Setup\* – page 22
- UVO eServices Activation\* – page 24
- Standard Audio System\* – page 23

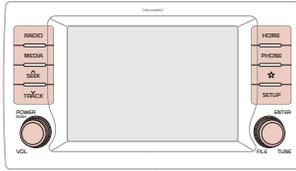


- UVO eServices System\* – page 25  
For further operational information, refer to the Car Multimedia System User's Manual

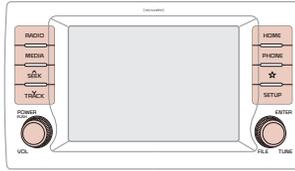

 
- UVO eServices with Premium Navigation\* – page 26  
For further operational information, refer to the Car Multimedia System User's Manual




- SCC w/S&G / Cruise Control – page 18  
Demonstrate operation

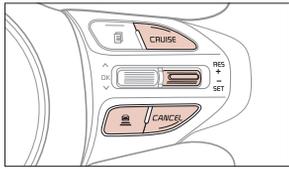

- Bluetooth® Wireless Technology – page 20  
Demonstrate operation

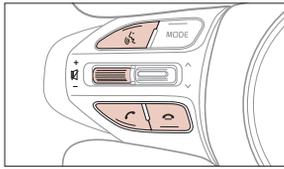

- Smart Power Liftgate\* – page 45

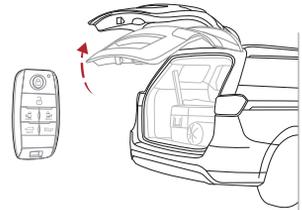

- Tire Pressure Monitoring System (TPMS) – page 5
- Blind-Spot Collision Warning (BCW)\* – page 10
- Lane Departure Warning (LDW)\* – page 11
- Engine Start/Stop Button – page 14
- Clock Setup – page 31
- Aux/Multimedia USB Ports, Power Outlets, USB Charger Ports & AC Inverter\* – page 31
- Seat Warmers / Ventilated Seats\* – page 35

- Smart Key\* – page 42
- HomeLink® with Auto-Dimming Rearview Mirror\* – page 50
- Sunroof Operation\* – page 44
- Parking Distance Warning–Forward\* and Reverse – page 47
- Sunvisor – page 43
- Rear View Monitor – page 47
- Passenger Airbag Off Indicator – page 51

\*if equipped

## DURING DELIVERY

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: \_\_\_\_\_ Date: \_\_\_\_\_

Sales Manager: \_\_\_\_\_ Date: \_\_\_\_\_

Customer: \_\_\_\_\_ Date: \_\_\_\_\_



# SEDONA CUSTOMER DELIVERY CHECKLIST

Owner's Name: \_\_\_\_\_ VIN: \_\_\_\_\_ Mileage: \_\_\_\_\_

 
Dealership Name: \_\_\_\_\_ Sales Consultant: \_\_\_\_\_ Date: \_\_\_\_\_

## BEFORE DELIVERY


- Test and confirm "Good Battery" using a Kia battery tester and affix Results Label
- Verify all tire pressures are to spec (see driver's door label) LF \_\_\_\_\_ LR \_\_\_\_\_ RF \_\_\_\_\_ RR \_\_\_\_\_
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any Audio System User's Manual)

## KEY FEATURE WALKTHROUGH

- Air Conditioning: Automatic/Manual/Rear Climate Control – pages 28-30 – Demonstrate Air Flow Modes, Defog and Defrosting Windshield Fan Speed




Automatic\*

 

Manual\*


- Front Seat Headrest Adjustment – page 36

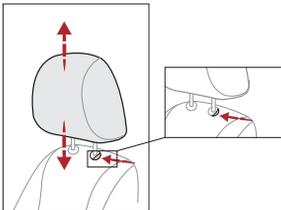

- Windshield / Rear Wipers & Washers – page 16

To operate:


- Move lever Up/Down to change Wiper modes
- Press button to adjust Intermittent Wipe
- Pull lever to spray and wipe

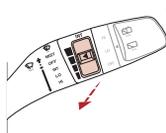

MIST: Single wipe  
 OFF: Wiper off  
 INT: Intermittent wipe  
 LO: Slow wipe  
 HI: Fast wipe

To operate:

- Rotate Rear Wiper switch to change Wiper modes
- Push to spray and wipe

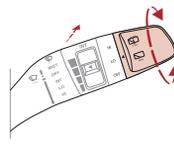

HI: Fast wipe  
 LO: Slow wipe  
 OFF: Wiper off

(up to 60,000 miles)\*

**MAINTENANCE INTERVALS (MILES)**

MAINTENANCE ITEMS	7,500	15,000	22,500	30,000	37,500	45,000	52,500	60,000
Rotate tires (Every 6,500 miles)	P	P	P	P	P	P	P	P
Add fuel additive <sup>1</sup>	P	P	P	P	P	P	P	P
Engine Oil & Filter	R	R	R	R	R	R	R	R
Climate control air filter	R	R	R	R	R	R	R	R
Air cleaner filter	I	I	I	R	I	I	I	R
Battery condition	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I
Power steering fluid*	I	I	I	I	I	I	I	I
Power steering pump, belt and hoses*	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Driveshaft and boots	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Brake fluid	I	I	I	R	I	I	I	R
Fuel tank air filter † <sup>2</sup>		I		I		I		I
Parking brake (foot type)				I		I		I
Vapor hose and fuel filler cap		I		I		I		I
Cooling System				I		I		I
Fuel lines, hoses and connections				I				I
Valve clearance <sup>3</sup>								I
Drive belts (First 60,000 miles, then every 15,000 miles) <sup>4</sup>								I

**QUICK TIP**

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO eServices account by logging into your Kia eServices app or your account on <https://owners.kia.com> (Vehicles equipped with UVO eServices only – See page 24 for setup information)

\* See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule

\*\* And, if necessary, adjust, correct, clean or replace

† If equipped

1. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives

2. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

3. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary  
4. The drive belt should be replaced when cracks occur or tension is reduced excessively

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.