

SPORTAGE

Features & Functions Guide



Delivery First
The priority that delivers more

WELCOME TO THE KIA FAMILY!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and – above all – your satisfaction.

USING THIS FEATURES & FUNCTIONS GUIDE

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

VIDEOS AND QR CODES

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your mobile device using the built-in QR Code Reader or a downloaded QR Code Reader App.

After opening the QR Code Reader App on your mobile device, the app will utilize your device's camera. Center the code in the camera viewing area - With some apps, as soon as the app recognizes the code, it will launch the corresponding video.

With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video.

For operation specifics, refer to the instructions that come with the QR Code Reader app. You can also view the videos by visiting the following website: www.youtube.com/KiaFeatureVideos.

QUICK TIPS

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code scanning
 - Try another QR Code Reader app; not all apps are created equal
2. After scanning, you may experience a "connection error" message or a "connecting" message with no subsequent response. These messages typically indicate that your device is having trouble connecting to the Internet

QR CODE

One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to this page for more information.



www.youtube.com/KiaFeatureVideos

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia's most used features:

1 Smart Key	40
2 Fuel Filler Lid Release	42
3 Power Adjustable Driver's Seat* / Front Seat Headrest Adjustment	38-39
4 Seat Warmers / Ventilated Seats*	37
5 Reclining/Folding Rear Seats	39
7 Front & Rear Windshield Wipers & Washers	17
9 Smart Cruise Control (SCC)*	18
12 Smart Power Liftgate*	46
13 Normal Maintenance Schedule	50, Back Cover
14 User Settings – Instrument Cluster	08
16 Bluetooth® Wireless Technology	22-23
17 UVO link Activation / UVO Assistance	26
18 UVO link* / UVO link with Navigation*	28-29
19 Android Auto™ / Apple CarPlay® Setup	24

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

www.kia.com
 Consumer Affairs - Roadside Assistance¹¹⁸:
 1-800-333-4KIA (800-333-4542)

Always check the Owner's Manual for complete operating information and safety warnings.



VIDEOS & QR CODES Inside Front Cover

INSTRUMENT CLUSTER

Instrument Cluster Overview	03
Indicators & Warning Lights	04
Tire Pressure Monitoring System (TPMS)	05
Fuel Economy	05
Drive Mode Integrated Control System	06
ECO Mode (Active ECO).	06

VEHICLE SETTINGS

LCD Instrument Cluster Modes*	07
Trip Modes / Trip Computer	07
Instant Fuel Consumption Mode*	07
User Settings Mode	08
Service Interval Mode	08

ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)

Blind-Spot Collision Warning (BCW)*	09
Rear Cross-Traffic Collision Warning (RCCW)*	09
Forward Collision-Avoidance Assist (FCA)*	10
Lane Keeping Assist (LKA)*	11
Driver Attention Warning (DAW)*	12

DRIVER'S PANEL

Instrument Cluster Control	13
Electronic Stability Control (ESC)	13
Hill-Start Assist Control (HAC)	13
Power Liftgate Open/Close Button*	13
Power Windows, Window Lock & Central Door Lock	14
Automatic Door Lock/Unlock	14
Power Folding Outside Mirrors*	14
Heated Outside Mirrors*	14
Engine Start/Stop Button*	15

STEERING WHEEL CONTROLS

Headlights & High Beams	16
Turn Signals & Fog Lights*	17
Windshield Wipers & Washers	17
Rear Wiper & Washer	17
Smart Cruise Control (SCC)*	18
Cruise Control (CC)	19
Tilt/Telescoping Steering Wheel	20
Heated Steering Wheel*	20

AUDIO SYSTEMS

Audio Controls	21
Bluetooth® Wireless Technology	22
Android Auto™ / Apple CarPlay® Setup	24
Standard Audio System*	25
UVO link Activation* / UVO Assistance*	26
Kia Access with UVO link App Download	27
Kia Access with UVO link App Features Guide	27
UVO link*	28
UVO link with Navigation*	29

CENTER PANEL

Multimedia USB Port, Power Outlets & USB Charger Port	30
Digital Clock	30
Wireless Smartphone Charging System*	31
Automatic Climate Control*	32
Manual Climate Control*	33
Automatic Gear Shift with Sportmatic® Shifting	34
Paddle Shifters*	34
Electronic Parking Brake (EPB)*	35
Auto Hold*	35
Downhill Brake Control	36
AWD (All-Wheel Drive) Lock*	36
Forward/Reverse Parking Distance Warning (PDW)	36
Rear View Monitor (RVM)	37
Seat Warmers* / Ventilated Seats*	37

SEATING

Power Adjustable Driver's Seat*	38
6-Way Manual Adjustable Driver's Seat*	38
Reclining/Folding Rear Seats	39
Unfastening Center Seat Belt	39
Front Seat Headrest Adjustment	39

OTHER KEY FEATURES

Smart Key*	40
Remote Keyless Entry (Folding Key)*	41
Double-Turn Lock/Unlock All	41
Fuel Cap / Malfunction Indicator	42
Fuel Filler Lid Release	42
HomeLink® with Auto-Dimming Rearview Mirror*	43
Map/Room Lamps	44
Panoramic Sunroof with Power Sunshade*	44
Power Liftgate*	45
Smart Power Liftgate*	46
Liftgate Release Button	46
Sunvisor	47
Hood Release Lever and Latch	47
Tire Mobility Kit	48

SAFETY FEATURES

Seat Belts	49
Child-Protector Rear Door Lock	49
Occupant Detection System (ODS) / Passenger Airbag Off Indicator	49

NORMAL MAINTENANCE - TURBO 50


NORMAL MAINTENANCE - NON-TURBO Back Cover

LEGAL DISCLAIMERS Inside Back Cover

Instrument Cluster Overview

- A** Tachometer
- B** Turn Signal Indicators
- C** Speedometer
- D** Engine Coolant Temperature Gauge
- E** Indicator & Warning Lights
- F** Gear Shift Position, Odometer, Trip Modes / Trip Computer, Exterior Temperature
- G** Fuel Gauge

← Arrow direction indicates the side of the vehicle the fuel door is located

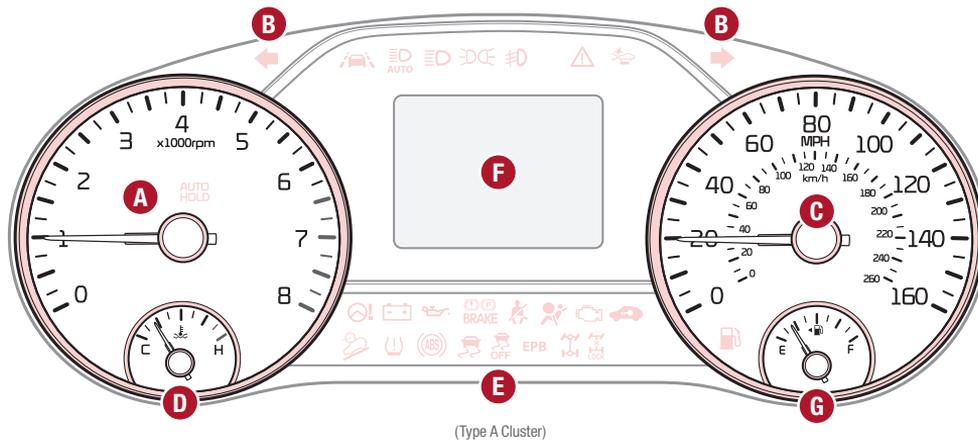


This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations.

For more information on the instrument cluster and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual.

Indicators & Warning Lights

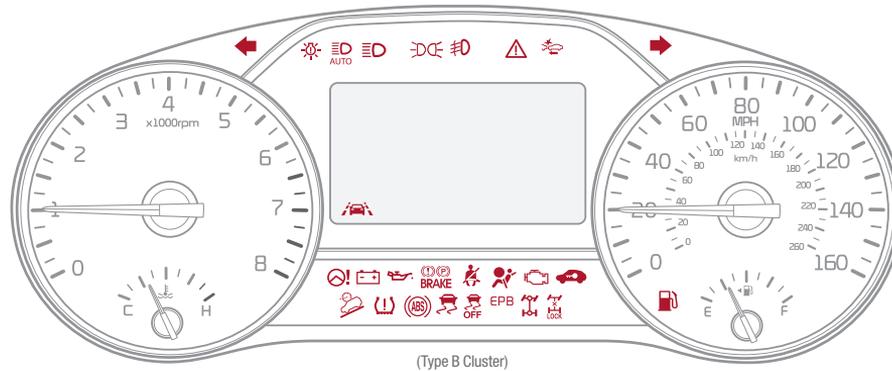

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations.

For more information on the instrument cluster and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual.


- | | | | | | |
|--|---|--|--|--|--|
| | Turn Signal Indicator Lights | | Lane Keeping Assist Indicator Light | | Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator |
| | Low Engine Oil Level Warning Light | | Electric Power Steering (EPS) Warning Indicator | | Anti-lock Braking System (ABS) Warning Light |
| | ECO Indicator Light | | Charging System Warning Light | | Electronic Stability Control (ESC) Indicator Light |
| | Sport Mode Indicator Light* | | Engine Oil Pressure Warning Light | | Electronic Stability Control (ESC) OFF Indicator Light |
| | High Beam Assist Indicator Light* | | Parking Brake & Brake Fluid Warning Light | | All Wheel Drive (AWD) Warning Light* |
| | High Beam Indicator Light | | Seat Belt Warning Light | | AWD LOCK Indicator Light* |
| | Light ON Indicator Light | | Airbag Warning Light | | Low Fuel Level Warning Light |
| | Front Fog Light Indicator* | | Malfunction Indicator Light | | Auto Hold Indicator Light* |
| | Master Warning Light* | | Cruise Indicator Light* | | Icy Road Warning Indicator Light* |
| | Electric Parking Brake (EPB) Warning Light* | | Electronic Brakeforce Distribution (EBD) System Warning Light (Two separate indicators on Instrument Cluster lit at same time) | | Immobilizer Indicator Light* |
| | Cruise Control SET Indicator* | | Downhill Brake Control (DBC) Indicator Light | | LED Headlamp Warning Light* |
| | Forward Collision-Avoidance Assist | | | | |

Tire Pressure Monitoring System (TPMS)

 The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The indicator  will illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Indicator . See front driver's door jamb for PSI specification. The Low Tire Pressure Position Indicator **A** is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated.

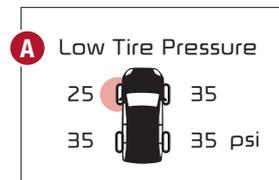

The above images are for illustrative purposes only and may not reflect actual display

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate. See dealer for service.

Refer to section 6 in the Owner's Manual for more information.

Fuel Economy

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

Refer to section 4 in the Owner's Manual for more information or snap the QR Code above to view a video.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for 20 minutes, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, visible when the door is opened
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

QR CODES

To view these videos on your mobile device, snap these QR codes or visit the listed website.

Refer to inside front cover for more information.

Tire Pressure Monitoring System Video



www.youtube.com/KiaFeatureVideos

Fuel Economy Video




www.youtube.com/KiaFeatureVideos

Drive Mode Integrated Control System

The Drive Mode may be selected based on the driver's preferences and road conditions.

To cycle through the different Drive Modes **A**, press the DRIVE MODE button **B**. The instrument cluster will display SPORT or ECO when selected. When in NORMAL mode, it will not display in the instrument cluster.

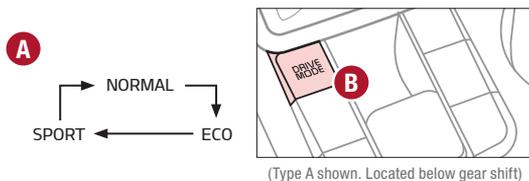

REMINDERS:

- When the vehicle is placed in ECO mode, it will remain in ECO mode even when the ignition is cycled. SPORT mode will default to NORMAL mode after the ignition is cycled
- Steering effort may be slightly increased in Sport mode
- When ECO mode is selected, the following may occur to help improve fuel economy:
 - Acceleration may be slightly reduced even when the accelerator is fully depressed
 - Air conditioner performance may be limited
 - Shift pattern of the automatic transmission may change
 - Engine noise may increase
 - System's power will be limited when driving uphill
- When SPORT mode is selected, fuel economy may decrease

Your vehicle's buttons may differ from those in the illustrations.

Refer to section 5 in the Owner's Manual for more information.

ECO Mode (Active ECO)

Active ECO is designed to help improve fuel economy by controlling several vehicle components. When activated, it can help optimize drivetrain operations such as engine power and transmission to help improve fuel economy.

To turn ON, press the DRIVE MODE button **B** and scroll through options until in the ECO mode. The green ECO indicator light **C** in the instrument cluster will illuminate, indicating that Active ECO is operating. Active ECO will remain on even when the ignition is cycled.

To turn Active ECO OFF, press the DRIVE MODE button **B** again and change to another mode.



(Located in instrument cluster)

QUICK TIPS

To help improve your fuel economy:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned

QR CODE

Drive Mode Integrated Control Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

Image is for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner's Manual for more information.

LCD Instrument Cluster Modes

Press the Mode button **A** to cycle through different LCD Instrument Cluster Modes:



Trip Computer Mode: Displays driving information for fuel economy, accumulated info, etc.



Turn-by-Turn Mode*: Displays the route state of the navigation system



Driving Assist: Displays the Smart Cruise Control with Stop and Go*, Lane Keeping Assist, Driver Attention Warning, and TPMS info



User Settings Mode: Change settings of the Driver Assistance, doors, lights, sound, convenience, service interval and other features



ESC*: Displays the state of the Electronic Stability Control



Master Warning Mode: Informs of warning messages related to the vehicle, TPMS†, Blind-Spot Collision Warning (BCW)*†, and is only displayed when one or more systems is not operating normally

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Refer to section 4 in the Owner's Manual for more information.

Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving. It appears on the display when the ignition switch or the Engine Start/Stop button* is in the ON position.

To cycle through the different LCD Instrument Cluster modes, press the Mode button **A**.


When in Trip Computer mode , press the Move/Reset/Set/OK button **B** up/down to cycle through the screens. When displaying trip information or the fuel economy screens, press and hold the OK button **B** to reset the Tripmeter to zero.

REMINDERS:


- Appearance of Tripmeter display may differ, as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Refer to section 4 in the Owner's Manual for more information.

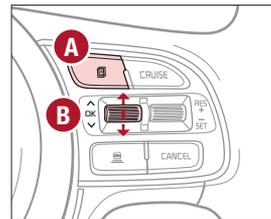

(Type A; Controls located on Steering Wheel)

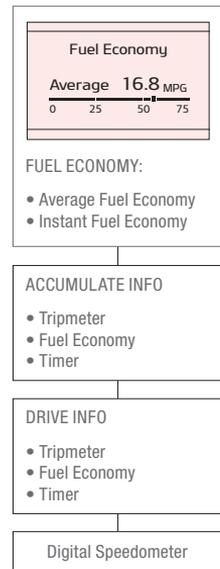

(Type B Cluster)

Instant Fuel Consumption Mode*

Press the Mode button **A** and cycle to the Fuel Economy screen in the Trip Computer to display Instant Fuel Consumption, which calculates fuel consumption during the past few seconds.

REMINDERS:

- Instant Fuel Consumption Mode is not to be used in calculation of or as a reference for AVERAGE fuel economy
- If the vehicle speed exceeds 1 mph (1.6 km/h) after being refueled with more than 1.6 gallons (6 liters), the average fuel economy will be cleared to zero (---)

Refer to section 4 in the Owner's Manual for more information.

User Settings Mode

To enter the User Settings mode in the LCD Instrument Cluster Modes, ensure vehicle is at a stand still, shift lever in Park, and Engine Start/Stop button or Key in the ON position. Then select User Settings  by pressing the Move/Reset (OK) button  up/down.

You can navigate the selections on the display by pressing the OK button  up or down. Select the item by pressing the OK button .

User Settings Modes:

Driving Assistance*

- Smart Cruise Control Reaction*
- Driver Attention Warning
- Lane Safety
- Forward Collision-Avoidance Assist
- Forward Collision Warning
- Blind-Spot Collision Warning Timing*
- Rear Cross-Traffic Collision Warning*

Door/Liftgate

- Automatically Lock
- Automatically Unlock
- Two-Press Unlock*
- Power Liftgate*
- Smart Liftgate*

Lights

- One-Touch Turn Signal
- Headlight Delay

Sound

- Parking Distance Warning Volume*
- Cluster Voice Guidance Volume*
- Blind-Spot Collision Warning Sound*
- Welcome Sound*

Refer to section 4 in the Owner's Manual for more information.

Convenience

- Welcome Mirror/Light*
- Wireless Charging System*
- Wiper/Light Display*
- Gear Position Pop-up*
- Auto Rear Wiper (in Reverse)*
- Icy Road Warning*

Service Interval

- Enable Service Interval
- Adjust Interval
- Reset

Other Features

- Fuel Economy Auto Reset
- Speed Unit*
- Fuel Economy Unit
- Temperature Unit
- Tire Pressure Unit*

Language


- Choose the language

Reset

- All menus in the User Settings mode are reset back to factory settings, except language and service interval

Service Interval Mode

To enter Service Interval Mode, press the Mode button  and cycle to Service Interval Mode  in the User Settings. Then press the OK button  to enter. System will display tire pressure status, number of miles remaining until next service is due, as well as the type of service due.

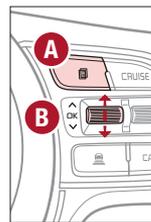

(Type A; Controls located on Steering Wheel)

When service is required, the following will be displayed: **Service Required.**

To reset the Service Interval Mode system, press and hold the OK button  for more than 1 second.

To turn **Service In** OFF, go to User Settings.

Service Interval Setting

When in the **Service In** screen, set the service interval in User Settings mode:

- Press the Mode button  to cycle to User Settings
- Scroll down to Service Interval and select
- If Service Interval is not checked, press the OK button  to turn ON
- Press the OK button  up/down to select/change the interval setting
- Press the OK button  to select the interval



(Images are for illustration purposes only and may vary)

QR CODES

To view these videos on your mobile device, snap these QR codes or visit the listed website. Refer to inside front cover for more information.

LCD Display Video



LCD Display: Maintenance Video



www.youtube.com/KiaFeatureVideos

Refer to section 4 in the Owner's Manual for more information.

Blind-Spot Collision Warning (BCW)^{†6}

BCW uses rear corner radar sensors in the rear bumper to monitor and warn the driver in certain situations if it detects an approaching vehicle in the driver's blind spot area and before changing lanes. The light on the Blind-Spot Safety button **A** will illuminate when turned ON. The outside rearview mirror warning lights will also illuminate for 3 seconds when the system is first turned on **B**. The system will become active when the vehicle is traveling faster than 20 mph and will warn the driver if another vehicle is detected by the rear corner radar sensor.

To activate BCW, go to User Settings by pressing the Mode button on the Steering Wheel. Select Driver Assistance > Blind-Spot Safety and then press the OK button. Select Warning Only or Off.

1st-stage warning: When another vehicle is detected within the BCW boundary **C**, a yellow indicator will illuminate on the outside rearview mirrors.

2nd-stage warning: When the 1st-stage warning is on and the driver activates a turn signal, a flashing yellow indicator will illuminate on the outside rearview mirrors and the system will sound an alert.





Rear Cross-Traffic Collision Warning (RCCW)^{*†6}

If RCCW detects approaching vehicles on the rear left or rear right side of the vehicle **D**, the system will sound an audible alert, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the LCD screen. RCCA may activate the Electronic Stability Control (ESC) to help avoid an imminent collision. RCCA may temporarily apply braking power when an approaching vehicle is detected within a certain distance next to or behind the vehicle. RCCW is designed to operate under these following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 6 mph

REMINDERS:

- When BCW is ON and the vehicle power is cycled to OFF then ON again, the BCW system returns to ON
- RCCW can be turned OFF/ON in User Settings from the LCD Instrument Cluster modes
- In certain situations when vehicle power is cycled, the RCCW will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling between 2.5 and 22 mph, RCCW will show a warning
- Warning sound can be adjusted in User Settings

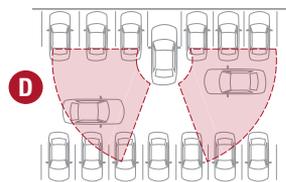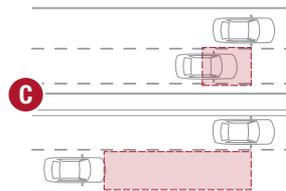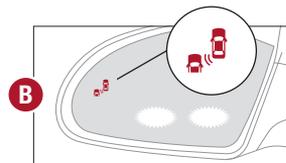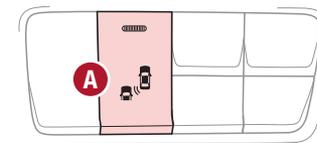

QR CODE

Blind-Spot Collision Warning w/ RCCW Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

BCW and RCCW are supplemental systems. Do not solely rely on these systems and always pay attention to the road and its conditions.

Images are for illustrative purposes only and may not reflect actual operation.

Refer to section 5 in the Owner's Manual for more information.

Forward Collision-Avoidance Assist†6

FCA is designed to detect and monitor a vehicle ahead or detect a pedestrian in the roadway through front view camera recognition and front radar signals to warn the driver that a collision is imminent, and if necessary, apply emergency braking. Initially, FCA provides Forward Collision Warning (FCW) when it detects a potential collision with a vehicle or pedestrian in front emitting an audible warning and visual warn on the instrument cluster. If the system detects that the collision risk has increased, FCA automatically applies the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision.

FCA can be enabled by going to the User Settings in the Instrument Cluster. Go to Driver Assistance > Forward Collision-Avoidance Assist.

The Warning Time can be adjusted by going to User Settings > Driver Assistance > Forward Collision Warning > Early, Normal or Late.

FCA will become active when the:

- Engine Start/Stop button is ON
- Vehicle is traveling faster than 5 mph
- Electronic Stability Control (ESC) is ON

QUICK TIP

The FCA Warning Volume can be adjusted in the User Settings* or the Vehicle Settings* on the audio head unit

REMINDERS:

- FCA will be activated by default when the vehicle power is cycled on, even when previous setting is off
- If FCA is operating and ESC (Electronic Stability Control) is turned off, FCA is automatically turned off
- When FCA is off, the FCA warning indicator is on in the Instrument Cluster



Forward Collision-Avoidance Assist is not a substitute for safe and proper driving.

Always drive safely and use caution. FCA/FCW may not always alert the driver when the vehicle is approaching another vehicle.

Refer to section 5 in the Owner's Manual for more information.

QR CODE

Forward Collision-Avoidance Assist Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

Lane Keeping Assist (LKA)^{†6}

With the Engine Start/Stop button in the ON position, press the Lane Safety button  to turn the system ON. The instrument cluster indicator  will illuminate white. It will remain white when vehicle is traveling slower than 40 mph and the system does not detect the lane markers. When LKA detects the lane markers and can assist the steering, the LKA icon will illuminate green.

If LKA detects that you are moving outside of your lane, the system may give an audible warning and display a Lane Departure Warning on the instrument cluster. If the vehicle continues to move outside of the lane, LKA will provide steering inputs, trying to prevent the vehicle from moving outside its lane.

LKA is the operating mode by default when the Lane Safety button is depressed to ON. To switch between modes (Active LKA, LKA and Lane Departure Warning), go to User Settings in the Instrument Cluster, select Driver Assistance, then Lane Safety.

The three available modes are:

Active LKA – Provides more frequent steering inputs than standard LKA

Lane Keeping Assist – Guides driver to keep vehicle within lanes and provides steering inputs when vehicle is about to deviate from the lane

Lane Departure Warning – Alerts driver when the system detects the vehicle leaving the lane. In this mode the system will not provide steering inputs

All systems will operate under the following conditions:

- The vehicle exceeds approximately 40 mph
- The vehicle is between the lane markers
- The LKA system recognizes the lane the vehicle is traveling in


QUICK TIP

The FCA Warning Volume can be adjusted in the User Settings* or the Vehicle Settings* on the audio head unit

REMINDERS:

- LKA will not issue a warning if the turn signal or hazard signal is activated
- LKA will return to its previous state when the ignition is cycled
- When the vehicle changes lanes without a turn signal, LKA may sound an audible warning

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

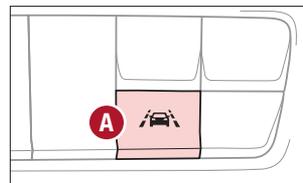

(Button located in panel to the left of steering wheel)



When the front-view camera detects the lanes the vehicle is traveling in, the indicators are illuminated



When the front-view camera does not detect the lanes the vehicle is traveling in, the indicator will not illuminate



When the front-view camera detects the vehicle moving outside of the lane the vehicle's traveling in, a yellow indicator will illuminate, either on the left or right lane



Lane Keeping Assist is not a substitute for safe and proper driving. Always drive safely and use caution. LKA may not always alert the driver if the vehicle is driven outside of its lane. Refer to section 5 in the Owner's Manual for more information.

QR CODE

Lane Keeping Assist Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

*IF EQUIPPED

†LEGAL DISCLAIMERS ON BACK INSIDE COVER

ADAS

Driver Attention Warning (DAW)*†7

DAW is designed to alert the driver if it detects inattentive driving practices and, in certain situations, can give a warning signal to take a break from driving.

DAW is set to OFF by default. To turn DAW ON, turn the ignition on and then select User Settings in the LCD Display on the Instrument Cluster. Go to Driver Assistance > Driver Attention Warning > High Sensitivity or Normal Sensitivity. Select Off to disable.

Driver Attention Warning modes:

OFF: Driver Attention Warning is deactivated **A**

Normal Sensitivity: Driver Attention Warning warns the driver of his/her inattentive driving practices

High Sensitivity: Driver Attention Warning warns the driver of his/her inattentive driving practices faster than Normal mode

If DAW is activated, the DAW information will appear on the LCD Display **B** when you select the Driving Assist mode .

A message, “Consider taking a break,” appears on the LCD display and a warning sounds to suggest the driver to take a break when the driver’s attention level is below one bar **C**.



REMINDERS:


- The setup of DAW will be maintained, as selected, when the ignition is cycled
- When activated, DAW does not display “Consider taking a break” message when the total trip driving time is less than 10 minutes
- DAW will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 40 mph

Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

Refer to section 5 in the Owner's Manual for more information.

Instrument Cluster Control

With parking lights/headlights ON, toggle switch **A** up (+) or down (-) to adjust the brightness of the instrument panel illumination.

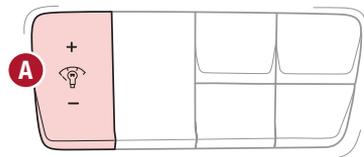

(Buttons located on left of Steering Wheel)

Refer to section 4 in the Owner's Manual for more information.

Electronic Stability Control (ESC)^{†8}

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned ON for daily driving whenever possible.

Go to User Settings in the Instrument Cluster to turn ESC OFF/ON.

REMINDERS:

- ESC is turned ON by default at vehicle startup. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light in the instrument cluster will illuminate whenever the ESC is in operation

Refer to section 5 in the Owner's Manual for more information.

Hill-Start Assist Control (HAC)^{†8}

HAC helps prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline.

The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator – this is normal operation
- HAC provides a two-second delay before the vehicle may start rolling backward


REMINDERS:

- The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline

Refer to section 5 in the Owner's Manual for more information.

Power Liftgate Open/Close Button*

Press the **B** button for approximately one second to open/close the liftgate.

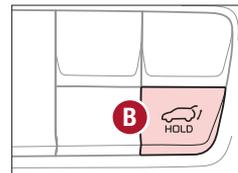

(Buttons located to the left of Steering Wheel)

Refer to section 4 in the Owner's Manual for more information.


Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate Driver's Window Auto Up/Down*

QUICK TIP

Press button again to stop Auto Up/Down function

- B** Press to Lock/Unlock All Doors (also unlocks Fuel Door)
C Press to disable Rear Passenger Windows

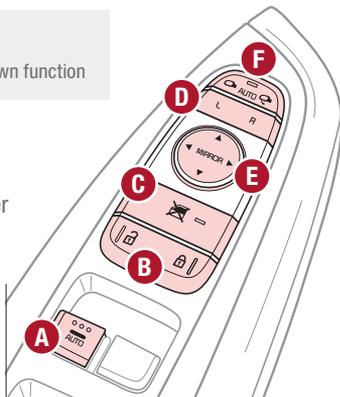

QUICK TIPS

While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:

- If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
- If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

REMINDER: When pressed **C**, the rear passengers cannot operate the window controls.

Button configuration may vary depending on vehicle model. Refer to section 4 in the Owner's Manual for more information.

Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

Refer to section 4 in the Owner's Manual for more information.

Power Folding Outside Mirrors*

- D** Press the L or R buttons to select the mirror to adjust
E Press button arrows left/right or up/down to adjust mirror position
F Toggle button left/right to unfold/fold the outside rearview mirrors
 Toggle button to center to automatically fold/unfold mirrors when:
- Smart Key* lock/unlock buttons are pressed
 - Outside door handle button is pressed
 - Driver approaches the vehicle with the Smart Key*

REMINERS:

- When mirror button **F** is in the center, press the Lock button on the Smart Key to automatically fold the mirrors
- To lock position of mirrors, toggle switch to the left position
- The mirrors will automatically unfold when the Smart Key* is within close proximity to the vehicle (if activated in User Settings)

Refer to section 4 in the Owner's Manual for more information.

Heated Outside Mirrors*

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. The Rear Window Defroster button* is located on climate control system panel.

Refer to section 4 in the Owner's Manual for more information.


Engine Start/Stop Button*†9

To start the engine:

1. Depress the brake pedal
2. Press the Engine Start/Stop button while the gear shift is in P (Park) or N (Neutral)

To turn the engine OFF, press the Engine Start/Stop button.

To use the Engine Start/Stop button, you must have the Smart Key fob on your person or inside the vehicle.

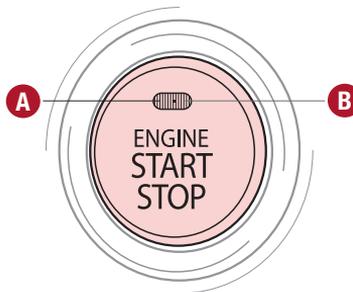

QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button once (amber light **A**)

On position

- When already in the ACC position (amber light **A**) and without depressing the brake pedal, press the Engine Start/Stop button again (red light **B**)

Keeping the vehicle in ACC or the ON position for extended periods of time without turning the engine on may discharge the vehicle's battery

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the Engine Start/Stop button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob battery is dead, with the lock button facing the Engine Start/Stop button, hold the fob up against the Engine Start/Stop button and press and hold until the engine starts

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 5 in the Owner's Manual for more information.

QR CODE

Engine Start/Stop Button and Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.




www.youtube.com/KiaFeatureVideos

Headlights & High Beams

To operate:

- Rotate lever to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights / High Beams

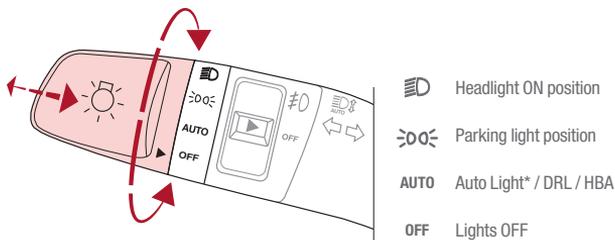

AUTO Light* — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically, depending on the amount of light outside the vehicle.

Refer to section 4 in the Owner's Manual for more information.

Daytime Running Lights (DRL)

DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Fog lights are on
- Engine is turned off
- Switch is in the OFF position

REMINDER: DRL only operates during the daytime.

High Beam Assist (HBA)

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator  will illuminate.

REMINDEERS:

- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously
- If the light switch is switched to the headlight position, HBA will turn off and the low beams will be on continuously
- When the HBA indicator illuminates on the instrument cluster, the HBA is not working properly. See an authorized Kia dealer for service


Refer to section 4 in the Owner's Manual for more information.

Turn Signals & Fog Lights*

To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Slightly move lever up/down to activate One-Touch Lane Change Signal
- Fog Lights - Press switch **A** up/down to turn Fog Lights ON/OFF

REMINDER: Headlights must be ON for fog light operation.

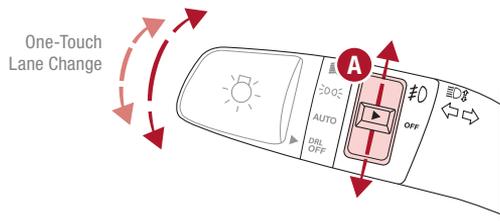

One-Touch Lane Change Signal is activated by briefly pressing the Turn Signal Lever up/down slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times (3/5/7) the Lane Change Signal blinks, go to the User Settings Mode in the LCD Instrument Cluster and select Lights, then One-Touch Turn Signal.

For illustrative purposes only. Your actual display, buttons and/or features may vary.


For more information on the User Settings Mode, please refer to section 4 in the Owner's Manual.

Windshield Wipers & Washers

Front Wiper & Washer

To operate front wipers and washers:

- Rotate switch to adjust Wiper mode
- Move lever Up/Down to change Wiper modes
- Press INT switch **B** up/down to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

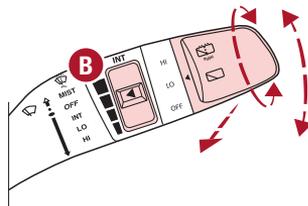


MIST: Single wipe
OFF: Wiper off
INT: Intermittent Wipe
LO: Slow Wiper Speed
HI: High Wiper Speed

Rear Wiper & Washer*

To operate rear wipers and washers:

- Rotate Rear Wiper switch to change Wiper modes
- Push lever to spray and wipe

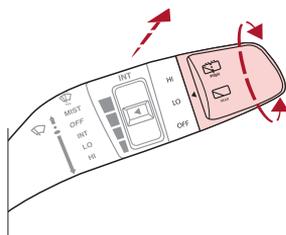

HI: Continuous wipe
LO: Slow wipe
OFF: Wiper off

QUICK TIPS

- Moving switch **B** up increases intermittent wipe frequency and wipe speed. Moving switch **B** down decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use

QUICK TIP

LO and HI sets wiper speed. No intermittent wipe function is available on rear wipers

Refer to section 4 in the Owner's Manual for more information.

Smart Cruise Control (SCC)*†6

Smart Cruise Control is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed. When traffic is detected, the vehicle will slow down to maintain a set distance behind traffic without depressing the accelerator or brake pedal.

With the SCC on and activated, the vehicle distance set, and the system detects a vehicle slowing or stopping, the system can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC system re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the RES+ button must be pressed to start moving the vehicle.

To set/adjust SCC speed:

- Press the Driving Assist **CRUISE** button **A** to turn system ON and set speed. The CRUISE indicator will illuminate on the instrument cluster
- Accelerate/decelerate to the desired speed
- Press (SET-) button **B** down to set speed. The set speed and vehicle distance will illuminate on the LCD screen
- Press button **B** up or down to adjust the set speed


To adjust the sensitivity of SCC: Press the Mode/Menu button on the Steering Wheel **C**. With the OK button, when in User Settings mode, select Driver Assistance, then SCC Reaction. Then select Slow, Normal or Fast.

To set the vehicle distance: Press the Vehicle Distance button **D** on the steering wheel. The image on the LCD screen **E** will change when scrolling through the settings.

To cancel SCC operation: Press the CANCEL button **F** or press the brake pedal. The CRUISE indicator on the instrument cluster will turn OFF.

To turn SCC system OFF: Press the Driving Assist **CRUISE** button **A**. The CRUISE indicator on the instrument cluster will turn OFF.

To switch modes: Press and hold button **D** for more than two seconds to switch between standard Cruise Control and Smart Cruise Control.

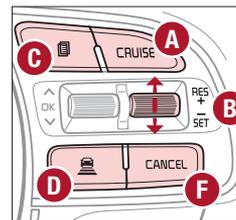

(Type B; buttons located on right side of Steering Wheel)



QR CODE

Smart Cruise Control (SCC) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may vary on actual vehicle.

The SCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

Refer to section 5 in the Owner's Manual for more information.

Smart Cruise Control (SCC)*†6 (continued)

QUICK TIPS

For SCC to operate:

- When no vehicle is in front, you must be traveling at a minimum speed of 20 mph
- When following a vehicle, you must be traveling at a minimum speed of 6 mph

When following a vehicle, the system will automatically adjust your cruise speed based on the vehicle detected ahead. If the vehicle detected remains at a standstill for more than 3 seconds, the system will disable

REMINDERS:

- Driving Assist **CRUISE** button must be ON in order to turn SCC ON/OFF
- SCC can operate when the vehicle is driving faster than 6 mph
- SCC is activated when ignition is turned on. Speed will need to be reset when ignition is cycled on
- SCC is turned ON again when the ignition is cycled off, then on again. The speed setting will need to be reset when ignition is cycled
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See Owner's Manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed that the driver is not aware of
- When following a vehicle, the system will automatically adjust your cruise speed based on the vehicle detected in front

Cruise Control (CC)†23

A Driving Assist CRUISE button: Press to turn the Cruise Control ON/OFF


B RES+ button: Press up to resume or increase cruising speed

SET- button: Press down to set or decrease cruising speed

C CANCEL button: To cancel Cruise Control, do one of the following:

- Press the brake pedal
- Press the CANCEL button

D Switch modes: To switch between standard Cruise Control and Smart Cruise Control (SCC), press and hold for more than two seconds

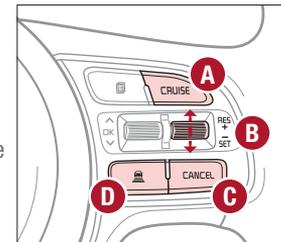

QUICK TIPS

- Cruise Control is designed to function at above approximately 25 mph
- Cruise Control will not activate until the brake pedal has been depressed at least once after ignition ON or engine starting

REMINDER: In standard Cruise Control, the driver needs to manually assess the distance from other vehicles as the system will not automatically apply brakes

Refer to section 5 in the Owner's Manual for more information.

Tilt/Telescoping Steering Wheel

To adjust the Steering Wheel, press the lock-release lever **A** down and adjust to the desired angle **B** and then the distance **C**.


When finished, pull the lock-release lever **A** up to lock Steering Wheel in place.

QUICK TIP

It may be helpful to pull/push bottom of Steering Wheel towards/away from you to adjust desired distance prior to adjusting the angle


Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle.

Refer to section 4 in the Owner's Manual for more information.

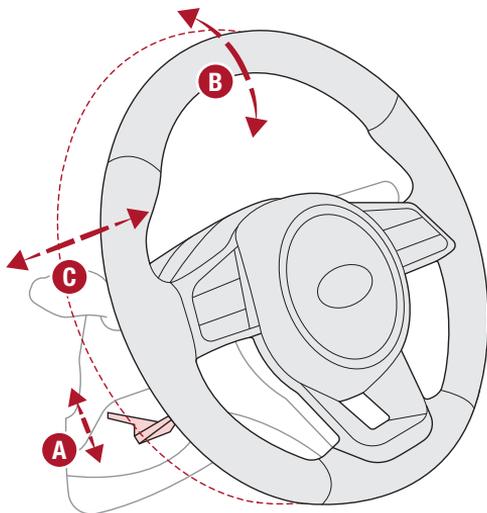

Heated Steering Wheel*

While the Engine Start/Stop button is in the ON position, press the Heated Steering Wheel button **C** to turn the steering wheel heater ON/OFF. The steering wheel heater will turn off automatically in 30 minutes, or when button **C** is pressed again to deactivate.

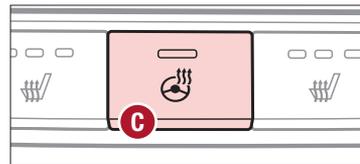

(Located on center panel)

QUICK TIP

If ignition is cycled, the Heated Steering Wheel turns OFF. Press button again to turn ON

REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.


Refer to section 4 in the Owner's Manual for more information.

Audio Controls†23

- D Audio MODE button:** Press to cycle through FM/AM/SiriusXM®/ Media modes. Press to turn power on; Press and hold to turn power off; press and hold to go to Advanced Setting / Steering Wheel mode (UVO link with Navigation)
- E Seek/Preset button**
Radio Mode (FM/AM/SiriusXM®):* Press to advance through Preset Stations. Press and hold to Auto Seek
Media Modes: Press to move Track Forward/Back. Press & hold to Fast Forward/Rewind (except for Bluetooth® Audio)
- F Volume button:** Press up/down to raise/lower volume
Mute button: Press to mute all audio (in some Media modes the media pauses when pressed)

QUICK TIP


Pressing the Audio Mode button for more than 1 second will turn Audio Mode ON/OFF

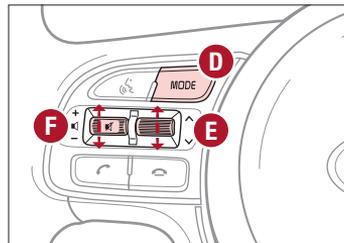

Your vehicle's steering wheel buttons may differ from those in the illustrations. For further audio system operation, refer to pages 22-29. Refer to section 4 in the Owner's Manual for more information.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Bluetooth® Wireless Technology†5,23

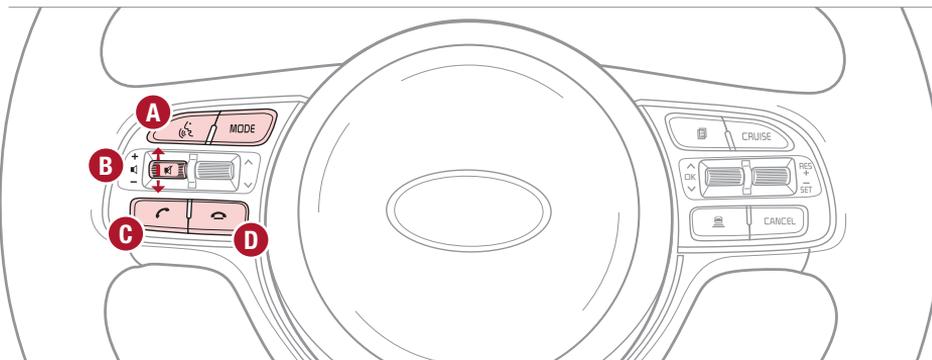

A Talk button: Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition

B Volume button: Press up/down to raise/lower speaker volume

Mute button: Press to mute the microphone during a call and to mute the audio system speakers, or to pause *Bluetooth*® streaming media

UVO link with Navigation system* – When enrolled with a UVO link subscription, press this button to activate the UVO Voice Assist to use navigation guidance and search destinations

C Receive/Place Call button: Press to receive/place calls. If no phone is paired, press button to pair a phone

D End Call button: Press to end a call, reject an incoming call or cancel a function

QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and *Bluetooth*® Wireless Technology chip programming, functionality may differ from one phone to another

For *Bluetooth*® Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for *Bluetooth*® Technology at (800) 333-4KIA.

Refer to your Owner's Manual for more specific *Bluetooth*® Wireless Technology phone pairing and operation instructions.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Bluetooth® Wireless Technology†5,23 (continued)

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future *Bluetooth*® connection requests

How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call using the Steering Wheel controls:

- Option 1: Press the Receive/Place Call button **C** (system displays the call history with the most recent calls)
- Option 2*: Press the Talk button **A** (system will BEEP to indicate it is ready for call placement). Then say the command "Call {name}" or "Dial {number}"

REMINDER: *Bluetooth*® Wireless Technology audio and calling functions are supported when connected to a *Bluetooth*® enabled device

Voice Recognition and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the *Bluetooth*® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips:

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

QUICK TIPS

- The system may register or pair multiple *Bluetooth*® devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- *Bluetooth*® Music Streaming: If the *Bluetooth*® music is inaudible or too low, turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C. The noise from an A/C fan operating at higher speeds or wind noise from open windows or sunroof can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

QR CODE

Voice Recognition Tips Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

Android Auto™*†3 / Apple CarPlay® Setup*†4

Setting up Android Auto™:

1. From an Android Auto™ compatible device, download the Android Auto™ app from the Google Play™ Store
2. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device

How to start Android Auto™:

1. Press the SETUP key on your audio system's control panel
2. Press the PHONE PROJECTION or DEVICE CONNECTION button , select Android Auto™ then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps


QUICK TIPS

- Android Auto™ / Apple CarPlay® Randomly Disconnects:
 - Ensure the USB cable is certified by the phone manufacturer for both power and data
 - Clean the phone's port, which the USB cable connects to, with disposable compressed air
 - The Phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the phone manufacturer's website for Android Auto™ / Apple CarPlay® app concerns

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Setting up and starting Apple CarPlay®:

1. On the head unit, press the SETUP key
2. Press the PHONE PROJECTION or DEVICE CONNECTION button , select Apple CarPlay® then select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
3. Connect the Apple CarPlay® compatible iPhone® with the vehicle's USB port using the manufacturer's cable provided with your iPhone®
4. From the vehicle's home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

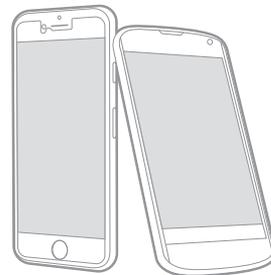

REMINDERS:

- Android Auto™ compatibility requirements: Micro-USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android™ smartphone and data and wireless plan for applicable feature(s)
- Apple CarPlay® compatibility requirements: Apple Lightning cable, latest iOS software (above iOS 10) and data and wireless plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Using an approved USB cable provided by your smartphone manufacture is recommended
- Using unapproved USB cables may cause a phone projection error or a system malfunction, black screen, no sound, disconnection, etc.
- Phone projection may not work due to a defect in the phone
- Ensure Apple CarPlay® and Siri® are enabled in your iPhone® settings

For further UVO operation, refer to the Car Infotainment System Quick Reference Guide.

For other audio system information, refer to pages 21-29.

Standard Audio System* FM/AM/Media (USB, *Bluetooth*® Audio)*


Press briefly to do the following:

- FM/AM mode: Play the previous/next frequency
- MEDIA mode: Change the track, file or title

Press and hold to do the following (over 0.8 seconds):

- FM/AM mode: Move quickly through all of the frequencies. When released, the system seeks the next available frequency
- MEDIA mode: Rewinds or fast forwards the track or file (except for *Bluetooth*® Audio)

- Press to Power ON/OFF. Rotate to adjust Volume
- Press to select FM/AM modes
- Press to select MEDIA modes
- Press to go to Custom (Set) Menu

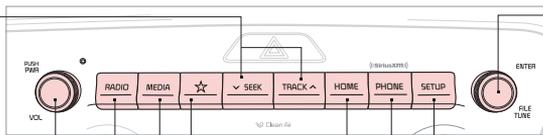

In Radio/Media modes, rotate knob to search for stations/channels/tracks/songs/files. Press the knob to receive the selected channel/track/song/file

- Press to display Setup/Settings mode
- Press to select PHONE mode
- Press to return to HOME menu

Sound Settings – To adjust the Standard Audio Systems sound settings:

1. Press the SETUP key on the audio control unit or the onscreen MENU button, when in MEDIA mode
2. Select the onscreen SOUND button
3. Select the menu item (Position, Volume, Tone, Priority, Advanced)
4. Using the touchscreen, press arrows to adjust the settings

SiriusXM® Smart Favorites – For the first ten favorite SiriusXM® channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose SiriusXM®, then select any of the first ten favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Radio Presets: You can listen to FM and AM radio and save frequently used stations. To Save a Preset, press and hold the desired slot. This saves the current station in the selected slot.

Custom Key ☆ – A programmable key to provide quick access to one of several available system features. To program the Custom Key, press the SETUP button, then press the Custom Key ☆. Select one of the available features you would like the Custom Key to open.

QUICK TIP

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth*® Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to BT Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using *Bluetooth*® Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- When connected to Android Auto™ or Apple CarPlay® on your smartphone, the device's navigation system may also be available
- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge
- Prolonged use of the audio control unit in ACC mode may drain the vehicle's battery

QR CODE

Standard Audio System Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

REMEMINDER: To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Your vehicle's audio system may differ from that in the illustration. For further audio system operation, refer to pages 21-29. For more information, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.


UVO link Activation*+1

Follow these steps to activate your UVO link system:

1. Enter the activation screen on your vehicle's head unit:
 - a. Press SETUP key
 - b. Press UVO icon
 - c. Press Activate UVO
2. Read and agree to Terms of Service and Privacy Policy and press SUBMIT
3. Enter smartphone number or email address to receive a verification code, then press SUBMIT
4. Follow these steps to receive your verification code using your phone SMS or email:
 - a. Check your phone SMS or email for verification code
 - b. Open the link in your SMS or email. A page will open requesting that you create your account

Note: If you already have a Kia Owners Portal account using the phone number as your login ID, you will need to provide your password prior to receiving the verification code

- c. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT. A page will open displaying your verification code
- d. Enter the code in the head unit and press ACTIVATE
- e. Go back to the page with your verification code and press "I have entered my PIN." A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy

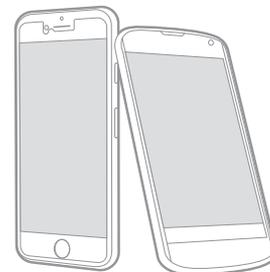

REMINDER: This vehicle is not equipped with over-the-air system updates.

For further UVO link operations, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, refer to pages 21-29.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

UVO Assistance*+1


Virtual Assistant  **A** – Press to connect to the UVO Center to hear information about the UVO features

UVO Voice Local Search  **B** – Press to connect to the search function to find points of interest or other locations, like "cafe"

Roadside Assist  **C** – Press to connect to the UVO Center where you can request vehicle towing services

REMINDER: These buttons may be located in the rearview mirror or the overhead console.

For more information, refer to the Car Infotainment System Quick Reference Guide. On certain models, UVO Assistance buttons are located on the Rearview Mirror.

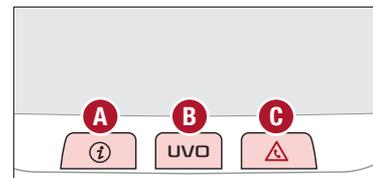

(Buttons on rearview mirror*)

Kia Access with UVO link App Download

Go to an app marketplace to download the new Kia Access with UVO link App. Once you download, make sure you register your vehicle and start an account (refer to UVO link Activation page). Get to know your new Kia and the available convenient features on the app.

QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with a good wireless signal strength in order to use UVO. If these conditions are not met, voice commands may fail or take a long time to execute
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature at least 10 minutes before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within the 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- In order to preserve the vehicle battery, UVO will not turn on seven days after the last ignition was on. You will need to restart the vehicle with a key fob in order to use UVO again



Kia Access with UVO link App Features Guide

The Kia Access with UVO link App Features Guide is a step-by-guide helping you utilize the app to its full potential by detailing how to set up and use each feature and adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Climate
- Schedule Charge
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles

Kia App Screen for illustrative purposes only. Actual App screen and functionality may vary.

For further UVO link operations, refer to the Car Infotainment System Quick Reference Guide.

QR CODES

Download the **Kia Access with UVO link App** by clicking this dynamic QR code. Some phone's operating systems may need to be updated to scan dynamic QR codes.



Click this dynamic QR code to access the **Kia Access with UVO link App Features Guide**. Some phone's operating systems may need to be updated to scan dynamic QR codes



UVO link*†1

FM/AM/SiriusXM®†21/Media (USB, Bluetooth® Audio)


Press briefly to do the following:

- FM/AM mode: Play the previous/next frequency
- SiriusXM™ mode: Change the channel
- MEDIA mode: Change the track, file or title

Press and hold to do the following (over 0.8 seconds):

- FM/AM mode: Move quickly through all of the frequencies. When released, the system seeks the next available frequency
- MEDIA mode: Rewinds or fast forwards the track or file (except for Bluetooth® Audio)

- Press to Power ON/OFF. Rotate to adjust Volume
- Press to select FM/AM/SiriusXM® modes
- Press to select MEDIA modes
- Press to go to Custom (Set) Menu

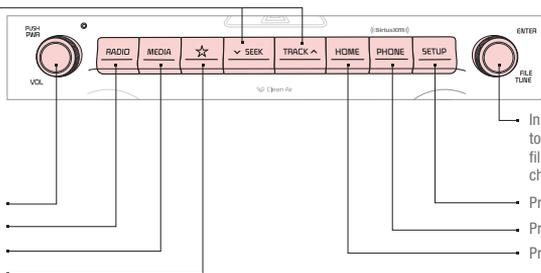

REMINDER: To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

In Radio/SiriusXM®/Media modes, rotate knob to search for stations/channels/tracks/songs/files. Press the knob to receive the selected channel/track/song/file

- Press to display Setup/Settings mode
- Press to select PHONE mode
- Press to return to HOME menu

Sound settings: To adjust the audio system sound settings:

1. Press the SETUP key on the audio control unit or the onscreen SETUP button in ALL MENUS
2. Select the onscreen SOUND button, or SOUND SETTINGS
3. Select the menu item (Position, Tone, Priority Advanced, Default, Beep)
4. Use the onscreen buttons to adjust settings
5. Press the return button to save settings

Radio Presets: You can listen to FM, AM and SiriusXM™ radio and save frequently used stations

How to Save a Preset: Press and hold the desired slot. This saves the current station in the selected slot

SiriusXM™ Smart Favorites: For the first ten favorite SiriusXM™ channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose SiriusXM™, then select any of the first six favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key ☆ – A programmable key to provide quick access to one of several available system features.

To Program the Custom Key: Press and hold the SETUP button, then press the Custom Key ☆. Select one of the available features you would like the Custom Key to open.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, Bluetooth® Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to BT Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using Bluetooth® Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- Using Android Auto™ or Apple CarPlay® and a supported smartphone, the phone's Navigation App may be displayed on the head unit
- At any time, you can interrupt the Voice Command Feedback by pressing the TALK button on the Steering Wheel
- Prolonged use of the audio system in ACC mode may drain the vehicle's battery
- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge

QR CODE

UVO link Videos

To view these videos on your mobile device, snap this QR Code or visit the listed website. Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

Your vehicle's audio system may differ from that in the illustration. For further audio system operation, refer to pages 21-29. For more information, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

UVO link^{†1} with Navigation*^{†14} FM/AM/SiriusXM^{®†21}/Media (USB, Bluetooth[®] Audio)


Press briefly to do the following:

- FM/AM mode: Play the previous/next frequency
- SiriusXM[™] mode: Change the channel
- MEDIA mode: Change the track, file or title

Press and hold to do the following (over 0.8 seconds):

- FM/AM mode: Move quickly through all of the frequencies. When released, the system seeks the next available frequency
- MEDIA mode: Rewinds or fast forwards the track or file (except for Bluetooth[®] Audio)

- Press to Power ON/OFF. Rotate to adjust Volume
- Press to select FM/AM/SiriusXM[®] modes
- Press to select MEDIA modes
- Press to go to Custom (Set) Menu

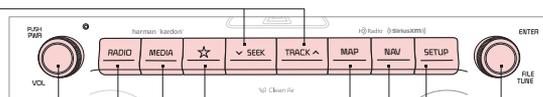

REMINDER: To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

In Radio/SiriusXM[®]/Media modes, rotate knob to search for stations/channels/tracks/songs/files. Press the knob to receive the selected channel/track/song/file

- Press to display Setup/Settings mode
- Press to select navigation mode
- Press to display the MAP screen for the current position mode

To adjust the sound settings (Position, Volume Tone, Priority, Navigation Volume, Advanced, Default, Beep) from any audio mode:

1. Press the SETUP key on the audio control unit or the onscreen SETUP button in ALL MENUS
2. Select the onscreen SOUND button, or SOUND SETTINGS. Select the menu item to change settings
3. Use the onscreen buttons to adjust settings. Press the Return button to save settings

Radio Presets: You can listen to FM, AM and SiriusXM[™] radio and save frequently used stations. **How to Save a Preset:** Press and hold the desired slot. This saves the current station in the selected slot

SiriusXM[™] Smart Favorites: For the first ten favorite SiriusXM[™] channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose SiriusXM[™], then select any of the first six favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast

Custom Key ☆ – A programmable key to provide quick access to one of several available system features.

To Program the Custom Key: Press and hold the SETUP button, then press the Custom Key ☆. Select one of the available features you would like the Custom Key to open.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, Bluetooth[®] Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to BT Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using Bluetooth[®] Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- Prolonged use of the audio system in ACC mode may drain the vehicle's battery
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- At any time, you can interrupt the Voice Command Feedback by pressing the TALK button on the steering wheel

QR CODE

UVO link with Navigation Video

To view these videos on your mobile device, snap this QR Code or visit the listed website. Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

Your vehicle's audio system may differ from that in the illustration. For further audio system operation, refer to pages 21-28. For more information, refer to the Car Infotainment System Quick Reference Guide.


Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Multimedia USB Port, Power Outlets & USB Charger Port

Power Outlets A: Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet

Multimedia USB Port B: Use Multimedia USB port to connect USB audio devices and smartphones

USB Charger Port C: Devices can be recharged using a USB cable. The Engine Start/Stop button needs to be in the ACC/ON/START position to operate the USB Charger Port

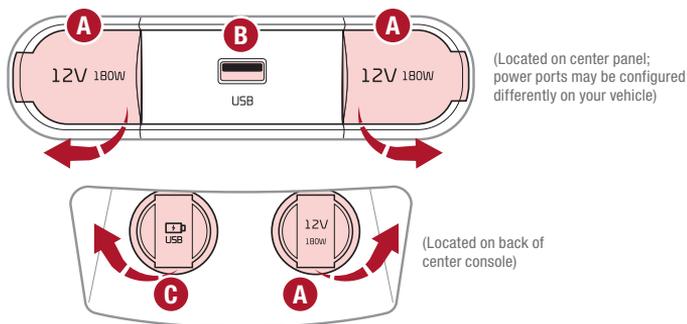

Digital Clock

Press the SETUP key on the audio head unit, then press the onscreen Date/Time button to enter the clock settings. Then use the onscreen buttons to navigate through setup and return to exit.

QUICK TIPS

- When needed, Daylight Savings must be enabled in the Clock Settings screen
- To access manual date and time setting, turn GPS time OFF in the Clock Settings (UVO link with Navigation*)

For more information, refer to the Car Infotainment System Quick Reference Guide.

QUICK TIPS

- The power outlets are inactive when ignition is in the OFF position
- The Multimedia USB data port is located next to the Power Outlets. The USB Charger Port does not support data transfer
- The Multimedia USB Port in the center panel charges slower than the USB Charger Ports throughout the vehicle

REMINDERS:

- Using the power outlets and the USB ports for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) could cause the battery to discharge
- Kia recommends that you only use USB cables made by your device's manufacturer. Third-party USB cables may cause damage to your device

For more information on the Aux/USB Ports and Power Outlets, refer to section 4 in the Owner's Manual.

Wireless Smartphone Charging System*


1. Enable Wireless Charging in the User Settings mode, select Convenience then Wireless Charging System
2. All doors must be closed
3. Place a compatible smartphone on the center of the charging pad
4. Indicator light **A** may change to amber once wireless charging begins
5. Once charging is complete, the amber light may change to green

QUICK TIPS

- For wireless charging to occur, all doors (excluding rear hatch) must be closed and the Smart Key Fob must be detected inside the vehicle
- For best results, place smart-phone on the center of the charging pad
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber.
- Avoid placing other metal items in the bin while charging as to not impede the charging area

REMINDERS:

- The smartphone must be a compatible phone with Qi function available
- Avoid placing other metal items in the bin while charging as to not impede the charging area
- This vehicle is equipped with wireless charging technology which allows for a device to be charged using inductive charging; however, device compatibility varies.
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance – Your device's position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate include foreign objects, such as coins or pens, and phone case thickness
- If driver door is opened, charging will be disabled

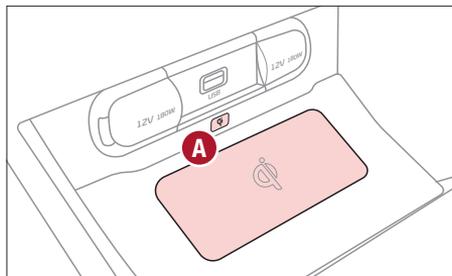

QR CODE

Wireless Charging Video

To view these videos on your mobile device, snap this QR Code or visit the listed website. Refer to inside front cover for more information.




www.youtube.com/KiaFeatureVideos

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 4 in the Owner's Manual for more information.

Automatic Climate Control*

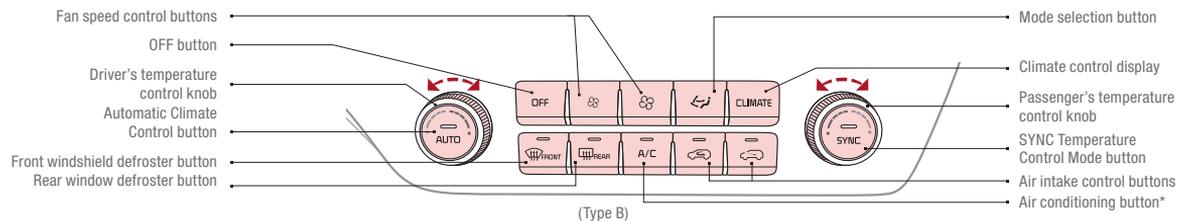

Climate Control Auto Function

1. Press **AUTO** to select Full Auto Operation - The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected and the ambient condition
2. Set desired Temperature
3. Press **SYNC** to sync the left and right temperature control

Defrost Outside Windshield:

1. Set **Temperature** to **Hot**
2. Press the **Front Defrost** button

Defog Inside Windshield:

1. Set **Fan Speed** to highest position
2. Set **Temperature** to highest position
3. Press the **Front Defrost** button

Air Flow Modes

To select Air Flow Modes, press the mode selection button to cycle to the desired mode:



Auto Defogging System (ADS):

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default and will operate when the Climate Control system is ON. To cancel Auto Defogging, when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button for three seconds.

QUICK TIPS

- Defrost mode activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator may NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control or SYNC Temperature Control

QR CODE

Auto Defogging System (ADS) Video

To view a video on your mobile device, snap this QR Code or visit the listed website.


Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

Your Automatic Climate Control system may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.

Manual Climate Control*

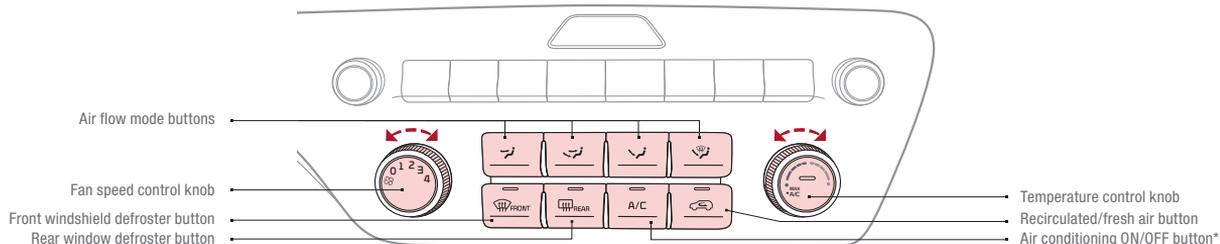

Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Press the **Front Defrost** button 

Defog Inside Windshield:

1. Set **Fan Speed** to desired position
2. Set **Temperature** to desired position
3. Press the **Front Defrost** button 

Air Flow Modes

To select Air Flow modes, press the Mode selection buttons:

-  Face-Level
-  Bi-Level
-  Floor-Level
-  Floor/Defrost-Level

QUICK TIPS

- Set the mode to the desired position. To defrost  mode activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- MAX A/C mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to reduce window fogging

REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

Your Manual Climate Control system may differ from those in the illustrations. See section 4 in the Owner's Manual for more details.

Automatic Gear Shift with Sportmatic® Shifting†22

- P:** Park **[+]:** Manual Mode Upshift
R: Reverse **[-]:** Manual Mode Downshift
N: Neutral
D: Drive

Manual Mode:

To enter Manual mode, move shift lever from D to left gate **A**.
 To shift while in Manual mode, move shift lever up [+] to upshift or down [-] to downshift **A**

QUICK TIPS

- Press brake pedal and depress release button to move gear shift from N to P, N to R or from P to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

REMINDERS:

- When in P (Park), if the Release button is not pressed while shifting, the transmission does not shift
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the power liftgate lid control, turn off the auto rain sensing wipers and fold in the mirrors

Refer to section 5 in the Owner's Manual for more information.

Paddle Shifters*


Paddle Shifters are operable when the shift lever is moved into the left gate of the D position (Manual mode).

Paddle Shifting: Pull the [+] or [-] paddle shifter once to shift up or down one gear.

REMINDER: When in Manual mode, pulling the left and right paddle shifters at the same time will NOT shift gears.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 5 in the Owner's Manual for more information.

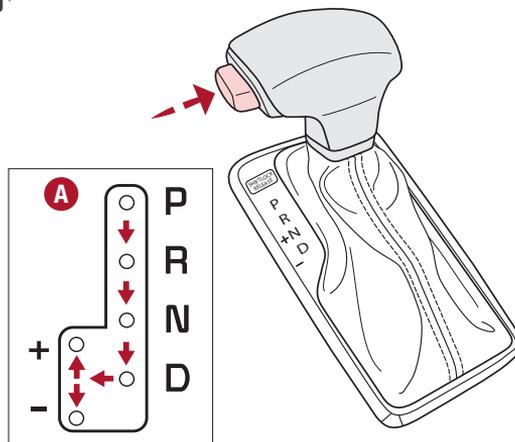

QR CODE


Sportmatic® Shifting Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

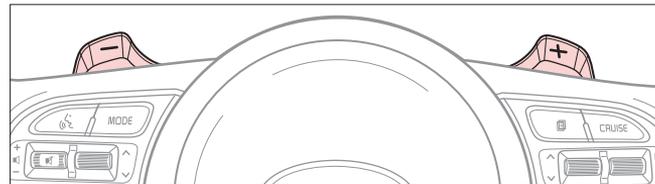

Electronic Parking Brake (EPB)*

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light is illuminated on the instrument cluster.

If parked on a steep incline/decline, pull up the EPB switch for more than 3 seconds for a firmer EPB application.

Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive. To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- Pull up and hold EPB switch a second time to increase brake pressure if parked on a decline or incline

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Refer to section 5 in the Owner's Manual for more information.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

Auto Hold*

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD button **B** on the center panel below the gear shift. Before Auto Hold will operate, the driver's door, engine hood and liftgate must be closed, and the driver's seat belt must be fastened.

The AUTO HOLD indicator on the Instrument Cluster has four states:

White: Standby - With vehicle at a standstill and AUTO HOLD button **B** pressed ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

Green: Engaged - When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

Off (not illuminated) - The indicator will turn off when the AUTO HOLD button **B** is manually pressed off or when the EPB is manually turned on.

Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

REMINDERS:

- Auto Hold only operates when vehicle is in Drive or Neutral
- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes

Refer to page 4 for location of Instrument Cluster indicators.

Refer to section 5 in the Owner's Manual for more information.


QR CODE

Electric Parking Brake Video

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

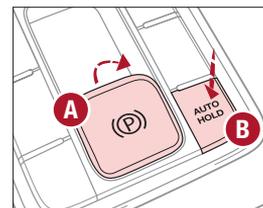

(Type B shown. Located below gear shift)

Downhill Brake Control (DBC)⁺⁸

DBC helps drivers maneuver down steep hills by automatically applying braking inputs, allowing drivers to concentrate on steering.

Press button **A** to turn DBC ON/OFF.



(Type A shown. Located below gear shift)

QUICK TIPS

- When on, DBC will turn OFF when button is pressed again or vehicle speed is over 38 mph
- If the red indicator illuminates, the DBC system may have malfunctioned. Take your vehicle to an authorized Kia dealer and have the system checked

REMINDER: DBC defaults to OFF when ignition is cycled.

The DBC system is a supplemental system and does not replace the need for the driver to apply the brakes. Pay attention to road and traffic conditions and be prepared to depress the brakes.

Refer to section 5 in the Owner's Manual for more information.

AWD (All-Wheel Drive) Lock*

When you select AWD LOCK mode  (indicator is illuminated) by pressing the AWD LOCK button **B**, the AWD LOCK mode increases the drive power when driving on wet pavement, snow-covered roads and/or on unpaved roads.

- This mode is used for climbing or descending sharp grades, driving on unpaved roads, driving on sandy and muddy roads, etc., to improve traction
- This mode automatically begins to deactivate at speeds above 38 mph and is shifted to AWD AUTO mode at speeds above 38 mph. If the vehicle decelerates to speeds below approximately 38 mph, however, the transfer mode is shifted into AWD LOCK mode again


When the AWD LOCK mode is deactivated, a shock may be felt as the drive power is delivered entirely to the front wheels. This shock is not a mechanical failure.

The AWD system is a supplemental system only. It is the driver's responsibility to drive carefully depending on road and traffic conditions. Refer to section 5 in the Owner's Manual for more information.

Forward/Reverse Parking Distance Warning (PDW)^{†6}

The Forward/Reverse Parking Distance Warning (PDW) is a supplemental system that is designed to assist the driver by chiming if certain objects are detected within the sensing area to the front and rear of the vehicle when moving forward or backing up.

The system is activated when the ignition is ON and the vehicle is in R (Reverse). To deactivate the system, press the Forward/Reverse Parking Distance Warning (PDW) button **C**.

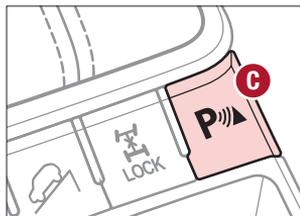

(Type A shown. Located below gear shift)

Refer to section 4 in the Owner's Manual for more information.



REMINDERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

Forward/Reverse Parking Distance Warning (PDW) is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when moving the vehicle forward or in reverse. Forward/Reverse Parking Distance Warning (PDW) may not detect every object in front of or behind the vehicle.


Image is for illustrative purposes only and features or functions may vary on actual vehicle.

Rear View Monitor (RVM)^{†6}

Rear View Monitor is a supplemental system that displays the view behind the vehicle through the audio head unit screens while the vehicle is in Reverse.

Rear View Monitor activates when the:

1. Engine Start/Stop* button is in the ON (Red light) position
2. Gear Shift Lever is in the R (Reverse) position

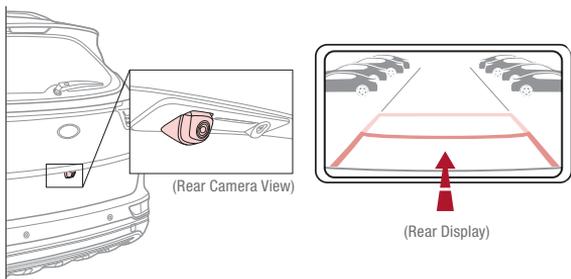

REMINDERS:

- Through normal use and after inclement weather or washing, the rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens
- While Rear View Monitor is active the volume will be lowered on all audio modes
- The screen image above is for illustrative purposes only. The actual image or graphics may differ in your vehicle
- While the Rear View Monitor is active the volume will be lowered on all audio modes

Always drive carefully and use caution when backing up.

The Rear View Monitor is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Rear View Monitor may not display every object behind the vehicle.

Refer to section 4 in the Owner's Manual for more information.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.


Seat Warmers / Ventilated Seats^{*†20}

B Seat Warmers:

- Press button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

C Ventilated Seats:

- Press button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

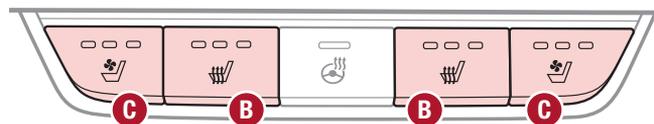

(Buttons located on center panel)

QUICK TIPS

- System is OFF by default. To turn system ON, press the seat warmer switch
- With the seat warmer switch in the ON position, the heating system in the seat turns off or on automatically depending on the seat temperature
- When the Climate Control System's temperature is turned up to high heat, the Seat Warmers turn on automatically

REMINDER: Use extreme caution when using the seat warmers to avoid burns. Refer to section 4 in the Owner's Manual for more information.

QR CODE

Heated and Ventilated Seats Video



To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

Power Adjustable Driver's Seat*†17

Move/Press controls to adjust Seat forward/backward, Seat Cushion height, Seatback recline or Lumbar* forward/backward.

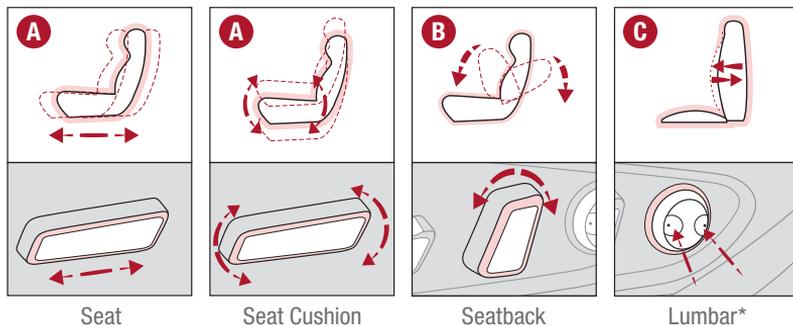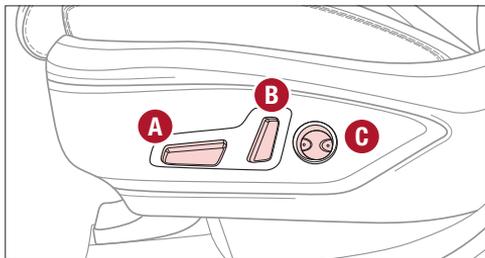

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.
For illustrative purposes only. Your actual display, buttons and/or features may vary.
Refer to section 3 in the Owner's Manual for more information.

6-Way Manual Adjustable Driver's Seat*†18


Pull lever **D** to slide seat forward/backward.

Pull lever **E** up several times to raise Seat Height.

Push lever **E** down several times to lower Seat Height.

Pull lever **F** to adjust seatback recline.

Press **G** to adjust lumbar support.

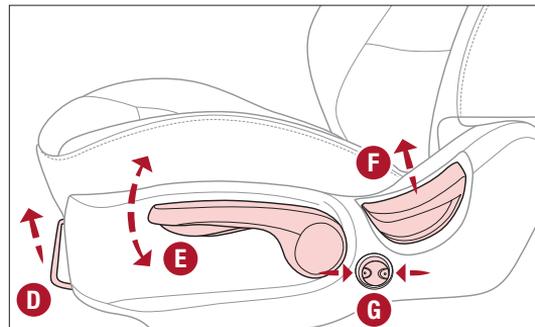

QUICK TIPS

When adjusting seat forward or backward, ensure seat clicks or locks into place before driving vehicle

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For more information on 6-Way Manual Adjustable Driver's Seat operation, refer to section 3 in the Owner's Manual.

Reclining/Folding Rear Seats†18

(Seat type with lever in front)


To recline the Rear Seatback:

1. Pull lever **A** up to unlock seat
2. Holding the lever **A** up, adjust Seatback to desired position **B**
3. Release the lever **A** and ensure the Seatback is locked in place

QUICK TIP

When adjusting seat forward or backward, ensure seat clicks or locks into place before driving the vehicle

Refer to section 3 in the Owner's Manual for more information.

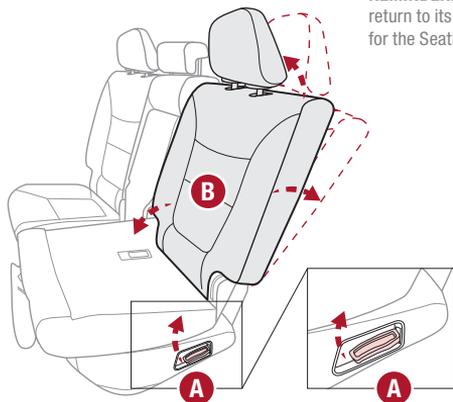


To fold the Rear Seatback:

1. Set the front seatback in the most upright position and if needed, slide the seat forward.
2. Lower the headrest to the lowest position
3. Insert the rear seat belt buckle into the pocket between the rear seatback and cushion. Insert the seatbelt webbing in the guide
4. Lift seatback folding lever **A** up to unlock seat
5. Fold Seatback flat

REMINDER: The lever must return to its original position for the Seatback to lock.

Unfastening Center Seat Belt

1. If Seat Belt is buckled, press the release button on the buckle
2. To retract the 2nd-Row Center Seatbelt **C** into the headliner, press the “release button” on the buckle by inserting the seat belt tongue plate **D** in the small slot on the center buckle **E**

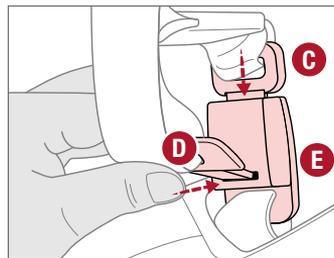

Refer to section 3 in the Owner's Manual for more information.

QR CODE

Unfastening Center Seat Belt Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

Front Seat Headrest Adjustment†10

To raise headrest — Pull headrest up to the desired position.

To lower headrest — Press lock **F**, then press the headrest down.


QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

REMINDEES:

- The headrest only moves up and down as described above. It does not adjust forward or backward
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident
- Button may be hard to see if headrest is in its lowest position

Refer to section 3 in the Owner's Manual for more information.

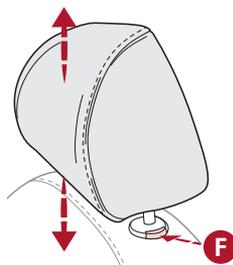


Smart Key*

- A** Press to lock All Doors
 - B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors and Liftgate
 - C** **Manual Liftgate***: Press and hold for more than 1 second to unlock Liftgate. Then lift by the handle to manually open Liftgate
- REMINDERS:**
- The Liftgate does not automatically open when the **C** button is pressed
 - The Liftgate unlocks when the Smart Key fob is within close proximity of the vehicle
- Power Liftgate***: Press and hold for Power Liftgate to open automatically. Press again at any time to stop. Press and hold again to automatically close.
- D** Press and hold for more than a half-second for Panic Alarm. To turn off Alarm, press any button
 - E** Press to release Mechanical Key **G** (Button on reverse side of fob)

Remote button configuration may vary depending on vehicle options. For more information on the Mechanical Key, please refer to section 4 in the Owner's Manual.

Driver's Door Lock/Unlock button **F**:


- Press button once to unlock Driver's Door
- Press again within 4 seconds to unlock All Doors
- Press again to lock All Doors

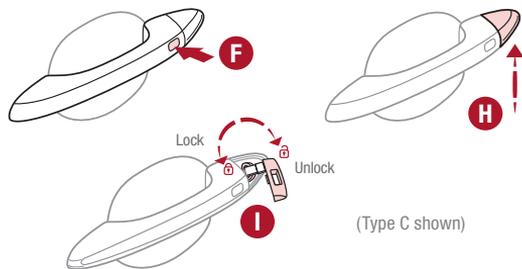

Mechanical Key **G**:

1. Pull out door handle
2. Remove door handle keyhole cover with Mechanical Key by pressing up into slot as shown **H**
3. Insert Mechanical Key **I** and turn right to unlock Driver's Door. Turn twice within 4 seconds to unlock all doors
4. Insert Mechanical Key and turn left to lock Driver's Door
5. Return keyhole cover to its original position

Use to turn Child-Protector Rear Door Lock.

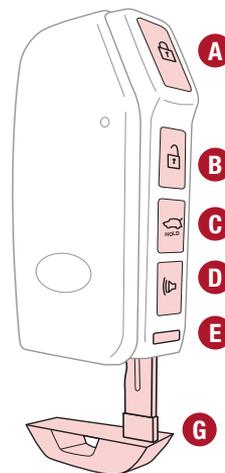

QR CODE

Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.




www.youtube.com/KiaFeatureVideos

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cell or smartphone. To help prevent this, store each device separately
- When reinserting the mechanical key into the fob, make sure it is pushed all the way in until there is a click sound

Remote Keyless Entry (Folding Key)*

- A** Press the release button to unfold the key
- B** Press to lock all doors
- C** Press to unlock driver's door. Press twice in 4 seconds to unlock all doors and Liftgate
- D Manual Liftgate***: Press and hold for more than 1 second to unlock Liftgate. Then lift by the handle to manually open Liftgate
- Power Liftgate***: Press and hold for Power Liftgate to open automatically. Press again at any time to stop. Press and hold again to automatically close
- E** Press and hold more than 1 second for Panic Alarm. To turn OFF Alarm, press any button

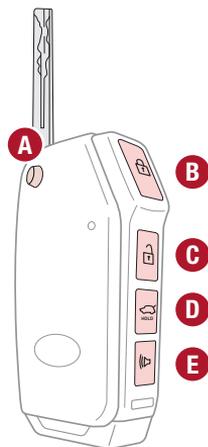


REMINDERS:

- The Liftgate does not automatically open when the button **D** is pressed
- Remote button configuration may vary depending on vehicle options
- The Liftgate unlocks when the Smart Key fob is within close proximity of the Liftgate

Refer to section 4 in the Owner's Manual for more information.

Double-Turn Lock/Unlock All

- Turn clockwise once to unlock driver's door
- Turn clockwise again within 4 seconds to unlock all doors
- Turn counterclockwise once to lock all doors

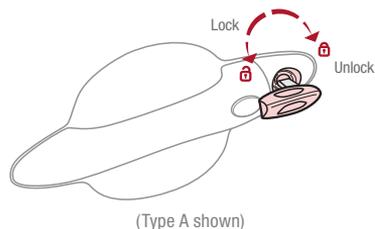

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Kia Key Fob Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.




www.youtube.com/KiaFeatureVideos

Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

REMINDERS:

- To open the fuel door, press the right edge of the fuel door
- It is normal operation when tightening to hear one click, and then when Fuel Cap is released, it clicks back

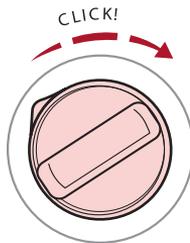


Refer to section 4 in the Owner's Manual for more information.

Fuel Filler Lid Release

To open the Fuel Filler lid:

1. Press the right center edge of the Fuel Filler lid **A**
2. Pull the Fuel Filler lid out to fully open **B**

To open the Fuel Cap, turn it counterclockwise **C**

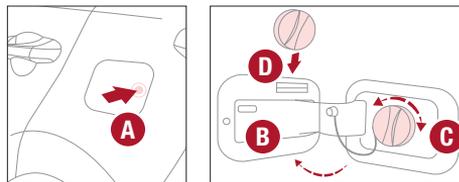

QUICK TIP

Place the Fuel Cap on the inside of the Fuel Filler Lid when fueling **D**

REMINDERS:

- The fuel filler lid will unlock when Driver's door is unlocked
- To unlock fuel filler lid:
 - Press the unlock button on your smart key
 - Press the Central Door unlock button on armrest trim of driver's door
 - Pull the driver's inside door handle outward
 - The fuel filler lid will lock when all doors are locked
- To lock fuel filler lid:
 - Press the lock button on your smart key
 - Press the Central Door lock button on armrest trim of driver's door
 - All doors and fuel filler lid will automatically lock after the vehicle speed exceeds 9 mph

Refer to section 4 in the Owner's Manual for more information.

QR CODE

One-Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

HomeLink® with Auto-Dimming Rearview Mirror*†12

Designed to help reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters in one location. Press the on/off button **F** to turn the auto-dimming function on or off.


REMINDER: Mirror indicator light will illuminate when automatic dimming is ON.

How to Sync Transmitter

- Press and release **A**, **B** or **D** button:
 - If the indicator **C** flashes slowly in red, go to Step 3 (Programming)
 - If the indicator **C** is continuously turned ON or flashes rapidly in red several times, go to Step 2 (Erasing)
- Press and hold the button you wish to erase the program for approximately 15-25 seconds until the LED flashes slowly in Red
- Hold the Garage Door Opener Original Transmitter near the HomeLink Mirror
- Press and hold the desired button (**A**, **B** or **D**) and the Original Transmitter button until the indicator **C** is turned on continuously or flashes rapidly in red. This indicates the programming is completed

To complete programming of a Rolling Code garage door opener:

- Firmly press and release the “Learn,” “Smart,” or “Program” button of the garage door opener while the indicator **C** flashes slowly in red. Once the button is pressed, you have approximately 30 seconds to initiate the next step
- Return to the vehicle and firmly press and hold the HomeLink button for two seconds and release. Repeat this up to three times to complete the programming. Do not press the HomeLink button rapidly. At this point, programming is complete and your device should operate

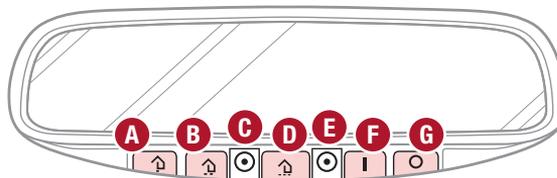

- A** HomeLink® button
- B** HomeLink® button
- C** Indicator light
- D** HomeLink® button
- E** Glare detection sensor
- F** Automatic dimming ON
- G** Automatic dimming OFF

QUICK TIP

If the indicator **C** flashes rapidly in red continuously, but if the garage door opener does not operate, please continue to follow Rolling Code Programming steps below

Operating HomeLink®: Press one of the programmed HomeLink® buttons.

Erasing programmed buttons: Press and hold the left **A** and center **D** buttons simultaneously for approximately 20 seconds, until the indicator light begins to flash, and then release both buttons within 30 seconds.

QUICK TIP

Erasing programmed buttons will delete all trained transmitters

REMINDEES:

- A ladder may be needed to access the garage door opener
- A second person may be needed to help
- Some of the steps are time sensitive

QR CODE

Homelink Support Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

For more information, go to HomeLink.com or call (800) 355-3515.

See section 4 in the Owner's Manual for more information.

Map/Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the ignition or Engine Start/Stop button* is OFF.

Map Lamp/Room Lamp Operation

Push the lens **A** to turn the map lamp ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.


Front/Rear Room Lamps Button  – Press button **B** to turn the front and rear room lamps on and off.

Door Mode Button – Press button  **C**, to enable or disable Door Mode. In Door Mode, the map and room lamps turn on when any door is opened. When all doors are locked or the ignition is on, the map and room lamp will turn off immediately.

Rear Room Lamps – Press the button **D** to turn the rear passenger lamp ON/OFF.

QUICK TIP

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

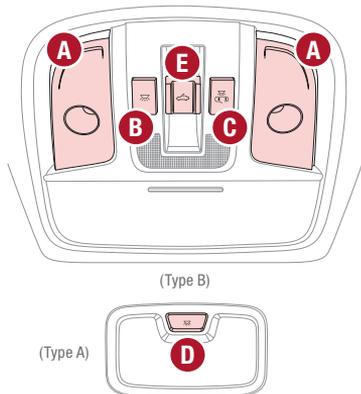

Refer to section 4 in the Owner's Manual for more information.

Panoramic Sunroof Operation with Power Sunshade*

The sunroof operation is controlled through a multidirectional switch/lever. The ignition or Engine Start/Stop button* needs to be in the ON position to operate the sunroof.

To slide the sunshade and sunroof:

- Auto Open: Slide the lever **E** backward to the farthest position and release
- Auto Close (sunroof only): Slide the lever **E** forward to the farthest position and release

To slide the sunshade only:

- Open: Slide the lever **E** partially backward to the first detent position and release
- Auto Close: Slide the lever **E** partially forward to the first detent position and release

To slide the sunroof (with sunshade open):

- Open: Slide the lever **E** backward to the first detent position and release
- Close: Slide the lever **E** forward to the first detent position and release to close sunroof glass only. Slide the lever backward to the farthest position and release to close sunroof glass and sunshade

To tilt the sunroof:

- Raise: Push lever **E** upward
- Lower: Push lever **E** forward

REMINDERS:

- Sunshade needs to remain OPEN while sunroof is open
 - Sunshade cannot slide when the sunroof is in the tilt position or tilt while in an open or slide position
 - Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle
- Refer to section 4 in the Owner's Manual for more information.

QR CODE

Sunroof Operation Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.



www.youtube.com/KiaFeatureVideos

QUICK TIP

To stop the sunroof/sunshade at any position, push or pull the sunroof control lever in any direction

Power Liftgate*†16

Opening from Outside the Vehicle:

To open Power Liftgate automatically, press the Rear Hatch Release button **A** (next page) on exterior of the Liftgate.

Automatically close by pressing the Power Liftgate Close button **B**.

Opening from Inside the Vehicle:

Press and hold the Power Liftgate Open/Close button **C** to automatically open/close the Liftgate.

Smart Key:

To open the Power Liftgate, press and hold the Liftgate button **D** until the Liftgate begins opening. Press again to close.

REMINDER: Pulling the Rear Hatch upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Liftgate.

Power Liftgate Opening Height Adjustment


Adjust the liftgate height opening to suit user's preference. The height setting of a fully opened liftgate can be adjusted by the following steps:

1. Position the liftgate manually to the preferred height
2. Press Power Liftgate Close button **B** more than 3 seconds
3. A system beep will sound twice indicating the height setting has been saved



The liftgate will then open to the set height. To change setting again, repeat steps 1-3.

REMINDER: Ensure objects and people are out of the way when operating the power liftgate.

Refer to section 4 in the Owner's Manual for more information.

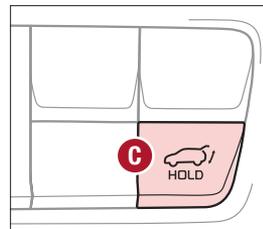

(Buttons located on Driver's Panel)

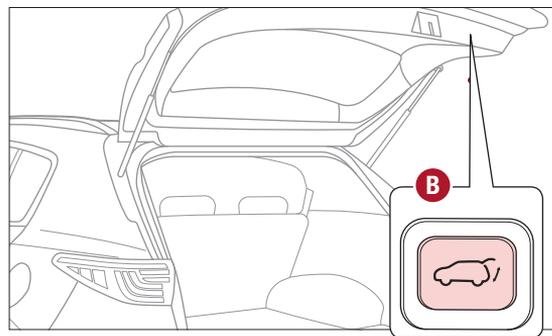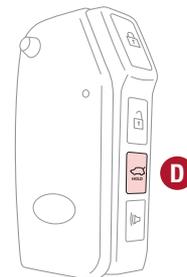

(Located on Liftgate inside lip near latch)

QR CODE

Power Liftgate Opening Height Adjustment Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.




www.youtube.com/KiaFeatureVideos

Smart Power Liftgate^{*†16}

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate is about to open. Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate.

The Smart Power Liftgate feature is off by default. To enable the Smart Power Liftgate, go to User Settings in the LCD Instrument Cluster modes.

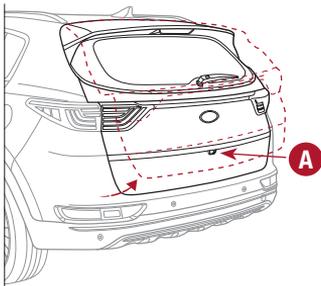

QUICK TIPS


- During the Smart Power Liftgate alert, the Smart Power Liftgate can be deactivated with the Smart Key by pressing any button on the key fob
- The open height can be adjusted. For information on how to set open height, see your Owner's Manual

REMINDERS:

- All doors are closed and locked after about 15 seconds for the system to operate
- The Smart Power Liftgate feature will not operate when:
 - The doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage to deactivate the Smart Power Liftgate function
- Ensure obstacles and people are out of the way of the liftgate

Liftgate Release Button (for manual liftgate)

Located underneath the rear liftgate hatch. With liftgate unlocked, press the Liftgate Release Button **B** and pull the liftgate up by the handle to open.

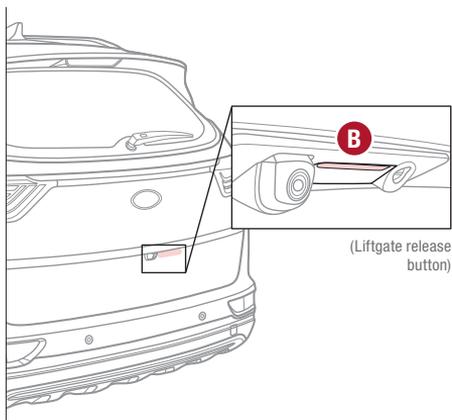

QUICK TIPS

- The liftgate must be unlocked before it can be opened by the Liftgate Release Button
- The liftgate unlocks automatically and can then be opened, when the Smart Key fob^{*} is within close proximity to the vehicle

QR CODE

Smart Power Liftgate Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.




www.youtube.com/KiaFeatureVideos

Refer to section 4 in the Owner's Manual for more information.

Sunvisor†24

Use the sunvisor to shield direct light through the front or side windows. Slide the sunvisor out and adjust as needed.

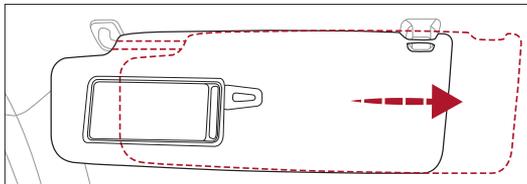

REMINDERS:

- Sunvisor may not shield all direct light
- The sunvisor may impair visibility if not adjusted properly
- Do not operate the vehicle if the sunvisor is impairing your visibility
- Be aware of seating position when adjusting or swinging sunvisor around to or from the front or side windows

Refer to section 4 in the Owner's Manual for more information.


Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the front inside of the Hood's center and lift the Hood

Closing the Hood:

Lower the Hood by pressing the front center of the Hood. Then, press down to securely lock in place.

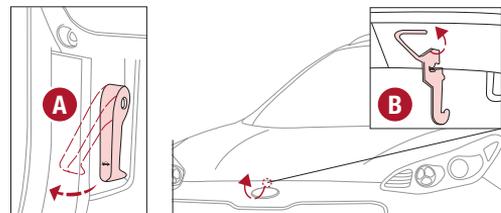

REMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake
- Make sure the hood is securely closed before driving

Refer to section 6 in the Owner's Manual for more information.

Tire Mobility Kit

The Tire Mobility Kit is designed to temporarily seal certain types of tire damage.

For operational information, please refer to the Owner's Manual.

- A** Sealant Bottle
- B** Compressor


QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if it appears a tire is damaged beyond repair

REMINDERS:

- The Tire Mobility Kit requires the use of the 12V/15A/180W Power Outlet, which is located on the right side of the outlet port area
- After tire is properly sealed, drive cautiously at a maximum speed of 50 mph for no longer than a maximum distance of 120 miles

Refer to section 6 in the Owner's Manual for more information.

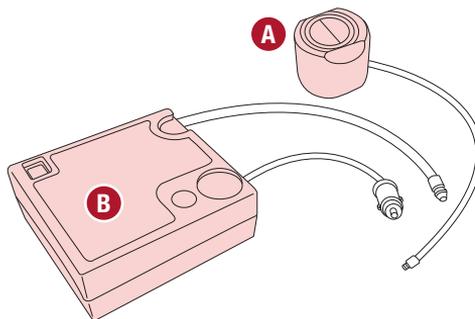

QR CODE

Tire Mobility Kit Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to inside front cover for more information.




www.youtube.com/KiaFeatureVideos

Seat Belts^{†2,19}

To properly fasten your seat belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**

REMINDER: For maximum protection, always wear your seat belt.

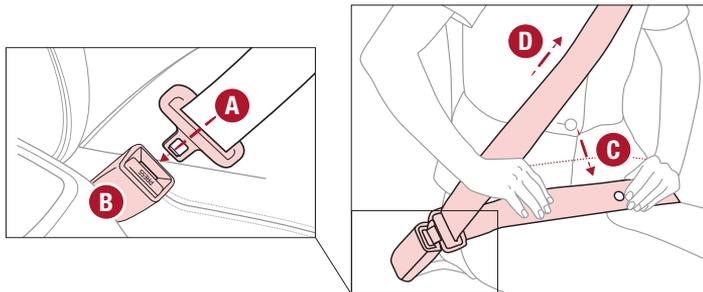

QUICK TIP

The Seat Belt warning chime operates for driver's seat only

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to reduce the risk of injury.


Refer to section 3 in the Owner's Manual for more information.

Child-Protector Rear Door Lock

Located on the rear edge of the rear passenger doors. Insert the ignition key into the hole and turn the key to the **LOCK** position to disable the inner door handles from opening the rear doors.

REMINDER: Child-Protector Rear Door Lock is located on rear passenger's door jamb.

(Located on rear edge of rear passenger doors)

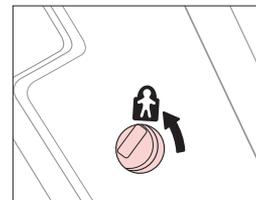

Refer to section 4 in the Owner's Manual for more information.

Occupant Detection System (ODS)^{†15} / Passenger Airbag Off Indicator^{†2}

ODS is designed to detect the presence of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the "PASSENGER AIR BAG OFF" indicator will illuminate.



(Type B)

REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat

Refer to section 3 in the Owner's Manual for more information.



SPORTAGE NORMAL MAINTENANCE SCHEDULE **TURBO**

P=Perform • R=Replace • I=Inspect*

(up to 60,000 miles)^A For Non-Turbo maintenance, see back cover

MAINTENANCE ITEMS - TURBO	MAINTENANCE INTERVALS (MILES)									
	6,000	12,000	18,000	24,000	30,000	36,000	42,000	48,000	54,000	60,000
Rotate tires	Every 7,500 miles									
Add fuel additive ^B	P	P	P	P	P	P	P	P	P	P
Engine Oil & Filter	R	R	R	R	R	R	R	R	R	R
Climate control air filter	R	R	R	R	R	R	R	R	R	R
Battery condition	I	I	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I	I	I
Disc brakes and pads	I	I	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I	I	I
Drive shafts and boots	I	I	I	I	I	I	I	I	I	I
Suspension mounting joints	I	I	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I	I	I
Propeller shaft	I	I	I	I	I	I	I	I	I	I
Exhaust pipe and muffler	I	I	I	I	I	I	I	I	I	I
Intercooler, in/out hose, air intake hose	I	I	I	I	I	I	I	I	I	I
Brake fluid	I	I	I	I	R	I	I	I	I	R
Air cleaner filter		I		R		I		R		I
Fuel tank air filter ^{†D}		I		I		I		I		I
Parking brake				I		I		I		I
Vapor hose, fuel filler cap and fuel tank		I		I		I		I		I
Cooling System				I		I		I		I
Fuel lines, hoses and connections				I				I		
Transfer case oil (AWD) ^E				I				I		
Differential Oil, rear (at 40,000 miles)				I				I		
Spark Plugs (at 45,000 miles)							R			
Valve clearance ^F										I
Drive belts (First 60,000 miles, then every 12,000 miles) ^G										I

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO link account by logging into the Kia Access with UVO link app (Vehicles equipped with UVO link only – See page 26 for setup information)

- ‡ If equipped.
- A. See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule.
- B. And, if necessary, adjust, correct, clean or replace.
- C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.
- D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

- E. Transfer case oil should be changed anytime it has been submerged in water.
 - F. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.
 - G. The drive belt should be replaced when cracks occur or tension is reduced excessively.
- See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

LEGAL DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

- 1. UVO link:** Purchase/lease of 2020 Kia Sportage and newer Kia vehicles with UVO link includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year UVO link subscription expires, continued access to the full suite of UVO link available on your Kia will require a paid subscription at the then current subscription rate or your use of certain UVO link features may immediately terminate. Use of UVO is subject to agreement to the UVO Privacy Policy (available at <https://owners.kia.com/us/en/privacy-policy.html>) and Terms of Service (available at <https://owners.kia.com/us/en/terms-of-service.html>). UVO link is transferable to subsequent owner during the original UVO link service term. Only use UVO link when safe to do so. Kia Access with UVO link App is available from the Apple® App Store® or Google Play™. Kia Motors America, Inc. reserves the right to change or discontinue UVO link at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO link features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. Apple and App Store are registered trademarks of Apple Inc. Google and logos are trademarks of Google, LLC.
- 2. Airbags:** For maximum protection, always wear your seat belt.
- 3. Android Auto™:** Android Auto is a trademark of Google LLC. Vehicle user interface is a product of Google and its terms and privacy statements apply. Requires the Android Auto™ app on Google Play and an Android™ compatible smartphone running Android™ 5.0 Lollipop or higher. Data plan rates apply.
- 4. Apple CarPlay®:** Apple CarPlay® is a registered trademark of Apple Inc.
- 5. Bluetooth® Wireless Technology:** A compatible Bluetooth® wireless technology-enabled cell phone is required to use Bluetooth® wireless technology. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. Other trademarks and trade names are those of their respective owners. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.
- 6. Driver Assist Features – Forward/Reverse Parking Distance Warning, Blind-Spot Collision Warning, Rear Cross-Traffic Collision Warning, Lane Keeping Assist, Rear View Monitor, Forward Collision-Avoidance Assist, Smart Cruise Control:** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- 7. Driver Attention Warning (DAW) –** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- 8. Electronic Stability Control (ESC)/Traction Control System (TCS)/Hill-start Assist Control (HAC), Downhill Brake Control (DBC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- 9. Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, power assist for steering and braking will be disabled, and the vehicle will be more difficult to control.
- 10. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- 11. Google Play™ Store** is a trademark of Google, Inc. ©2019 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.
- 12. HomeLink®:** HomeLink® is a registered trademark of Gentex Corporation.
- 13. iPhone®:** iPhone is a registered trademark of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- 14. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- 15. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
- 16. Power Liftgate / Smart Power Liftgate:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.
- 17. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
- 18. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- 19. Seat Belts / Airbags:** For maximum protection, always wear your seatbelt.
- 20. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- 21. SiriusXM™:** SiriusXM™ Satellite Radio, SiriusXM™ Traffic and SiriusXM™ Travel Link each require a subscription sold separately, or as a package, by SiriusXM™ Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM™ Customer Agreement for complete terms at www.siriusxm.com.** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM™. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM™ is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM™ satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM™ Internet Radio service is available throughout our satellite service area and in AK and HI. © 2020 SiriusXM™ Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM™ Radio Inc.
- 22. Sportmatic®** is a registered trademark of Kia Motors America.
- 23. Steering Wheel Controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- 24. Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if Sunvisor is impairing your visibility.




KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer


- Android Auto™ / Apple CarPlay® Setup* – page 24
- UVO link Activation – page 26

For further UVO link operation, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, refer to pages 21-29.


- Standard Audio System* – page 25
- For more information, refer to the Car Infotainment System Quick Reference Guide.

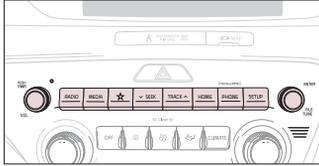


- UVO link* – page 28
- For more information, refer to the Car Infotainment System Quick Reference Guide.

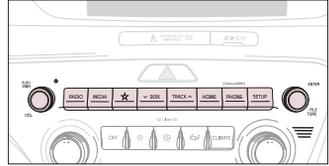


- UVO link with Navigation* – page 29
- For more information, refer to the Car Infotainment System Quick Reference Guide.

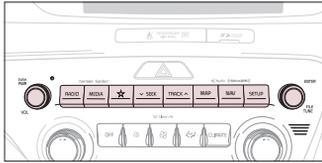

- Cruise Control (CC) – page 19
- Demonstrate operation

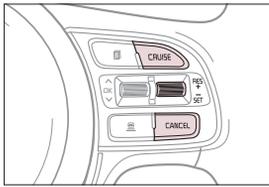

- Bluetooth® Wireless Technology – pages 22-23
- Demonstrate operation

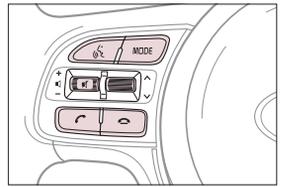

- ECO Mode (Active ECO) – page 6
- Forward/Reverse Parking Distance Warning (PDW) – page 35
- Digital Clock – page 30
- Engine Start/Stop Button* – page 15
- HomeLink® with Auto-Dimming Rearview Mirror* – page 43
- Sunroof Operation* – page 44
- Passenger Airbag Off Indicator – page 49
- Rear View Monitor (RVM) – page 37

- Reclining/Folding Rear Seats – page 39
- Seat Warmers / Ventilated Seats* – page 37
- Smart Key* – page 40
- Sunvisor – page 47
- Tire Pressure Monitoring System (TPMS) – page 5
- Multimedia USB Port, Power Outlets & USB Charger Port – page 30

DURING DELIVERY

*if equipped

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff & explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____



SPORTAGE CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____

Dealership Name: _____ Sales Consultant: _____ Date: _____


BEFORE DELIVERY

- Test and confirm "Good Battery" using a Kia battery tester and affix Results Label
- Verify all tire pressures are to spec (see driver's door label) LF_____ LR_____ RF_____ RR_____
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any Audio System User's Manual)


KEY FEATURE WALKTHROUGH

- Air Conditioning / Climate Control – pages 32-33
Demonstrate Air Flow modes, Defogging and Defrosting Windshield

Automatic*

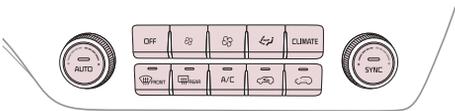


Manual*

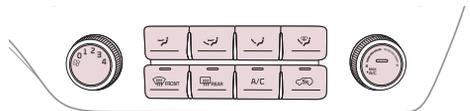

- Windshield Wipers & Washers – page 17

To operate:

- Move lever Up/Down to change Wiper modes
- Rotate INT switch to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

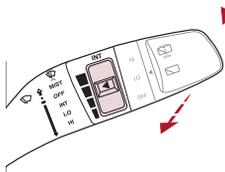


- MIST:** Single wipe
- OFF:** Wiper off
- INT:** Intermittent wipe
- LO:** Slow wiper speed
- HI:** Fast wiper speed

- Rear Wiper & Washer – page 17

To operate:

- Rotate Rear Wiper switch to change Wiper modes
- Push lever to spray and wipe

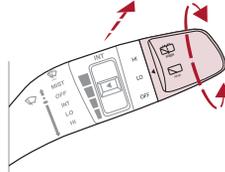

- ON:** Normal wipe
- INT:** Intermittent wipe*
- OFF:** Wiper off



SPORTAGE NORMAL MAINTENANCE SCHEDULE **NON-TURBO**

P=Perform • R=Replace • I=Inspect⁸

(up to 60,000 miles)^A

For Turbo maintenance, see page 50

MAINTENANCE ITEMS	MAINTENANCE INTERVALS (MILES)								
	7,500	15,000	22,500	30,000	37,500	45,000	52,500	60,000	
Add fuel additive ^C	P	P	P	P	P	P	P	P	
Rotate tires	P	P	P	P	P	P	P	P	
Engine Oil & Filter	R	R	R	R	R	R	R	R	
Climate control air filter	R	R	R	R	R	R	R	R	
Battery condition	I	I	I	I	I	I	I	I	
Brake lines, hoses and connections	I	I	I	I	I	I	I	I	
Brake discs and pads	I	I	I	I	I	I	I	I	
Vacuum hose	I	I	I	I	I	I	I	I	
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I	
Drive shafts and boots	I	I	I	I	I	I	I	I	
Suspension ball joints	I	I	I	I	I	I	I	I	
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I	
Propeller shaft (AWD)	I	I	I	I	I	I	I	I	
Exhaust system	I	I	I	I	I	I	I	I	
Air cleaner filter	I	I	I	R	I	I	I	R	
Brake fluid	I	I	I	R	I	I	I	R	
Fuel tank air filter ^{+D}				I				I	
Parking brake		I		I		I		I	
Vapor hose and fuel filler cap				I				I	
Cooling System				I		I		I	
Fuel lines, fuel hoses and connections				I		I		I	
Rear differential oil / Transfer case oil (AWD) ^E				I				I	
Valve clearance ^F								I	
Drive belts (First 60,000 miles, then every 15,000 miles) ^G								I	

QUICK TIP Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO link account by logging into the Kia Access with UVO link app (Vehicles equipped with UVO link only – See page 26 for setup information)

- ‡ If equipped
- A. See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals.
- B. And, if necessary, adjust, correct, clean or replace
- C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives

- D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.
 - E. Front/rear differential oil should be changed anytime they have been submerged in water
 - F. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary
 - G. The drive belt should be replaced when cracks occur or tension is reduced excessively
- See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

© 2020 Kia Motors America, Inc. All rights reserved.
 Consumer - Roadside Assistance¹³: 1-800-333-4KIA (4542)

Part Number: QL210-PS-004R1
 †LEGAL DISCLAIMERS ON BACK INSIDE COVER